







Pro1 Technologies P.O. Box 3377 Springfield, MO 65808-3377 Toll Free : 888-776-1427 Web: www.pro1iaq.com Hours of Operation: M-F 9AM - 6PM Eastern

Page


Table of Contents

Table of Contents1Thermostat Operation2-3Thermostat Quick Reference4-6Thermostat Warranty Information7

Una version en español de este manual se puede descargar en la pagina web de la compañia.



Equipment damage hazard. Do not operate the cooling system if the outdoor temperature is below 50 °F (10 °C) to prevent possible compressor damage.

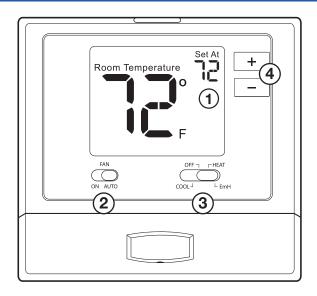

1LCD3System Switch2Fan Switch4Temperature Setpoint Buttons

1 LCD Display

See page 6 for details about this display read out.

2 Fan Switch

AUTO will turn the fan on only when the heating or cooling system is on. Select **LOW** or **HIGH** for the fan to run continuously at the selected speed.

3 System Switch


Selects the operation mode on your **HVAC** system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the cool mode. Selecting **OFF** turns both heating and cooling off.

4) Temperature Setpoint Buttons


Press the + or - buttons to select the desired room temperature.

Thermostat Quick Reference

Battery Installation

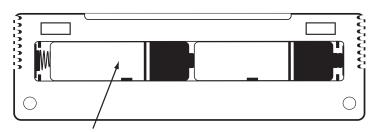


Insert 2 AA Alkaline batteries (included). High quality Alkaline batteries are recommeded.

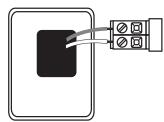

Battery installation is optional if thermostat is hardwired (R and C terminal connected to 24V power).



The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the setpoints will change to 55°F (Heating) and 85°F (Cooling). If the user adjusts the setpoint away from either of these, it will hold for 4 hours then return to either 55°F or 85°F. After day 63 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the batteries are changed.

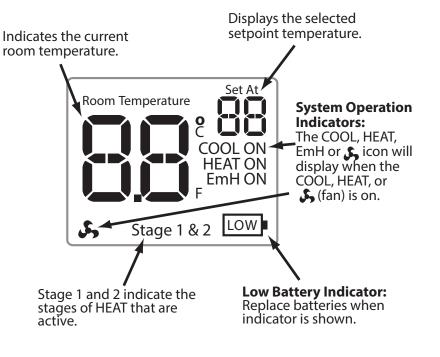

Warranty Registration

1

Your new thermostat has a 5 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. You can register your new thermostat in 2 ways:

Online

Go to the company website, select warranty registration and fill out a short registration form.

Mail

Complete the form below and mail it to the address shown.

Warranty Registration

-	Thermostat Model:
-	Date Installed:
-	Complete form and mail to:
-	Thermostat Warranty Registration
-	Pro1iaq
-	P.O. Box 3377
	Springfield, MO 65808-3377 7

Cut Out For Warranty Registration

