




EDUS091721

**R-410A**

# Engineering Data

**Split Type Air Conditioners**  
**- Heat Pump -**

**FFQ-Q Series**

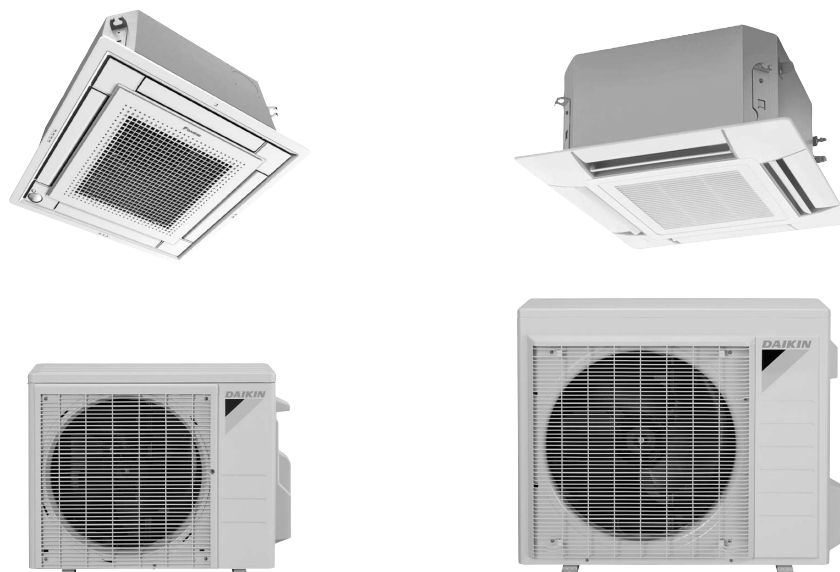

**INVERTER**



# Split Type Air Conditioners FFQ-Q Series

<b>Heat Pump</b>	<b>FFQ09Q2VJU</b>	<b>RX09RMVJU</b>
	<b>FFQ12Q2VJU</b>	<b>RX12RMVJU</b>
	<b>FFQ15Q2VJU</b>	<b>RX15RMVJU</b>
	<b>FFQ18Q2VJU</b>	<b>RX18RMVJU</b>

1. Power Supply .....	3
2. Functions.....	4
3. Specifications .....	5
4. Dimensions .....	7
4.1 Indoor Unit.....	7
4.2 Outdoor Unit.....	10
5. Wiring Diagrams.....	11
5.1 Indoor Unit.....	11
5.2 Outdoor Unit.....	12
6. Piping Diagrams.....	13
6.1 Indoor Unit.....	13
6.2 Outdoor Unit.....	14
7. Capacity Tables .....	15
7.1 Capacity Correction Factor by the Length of Refrigerant Piping (Reference) .....	27
8. Operation Limit.....	28
9. Sound Level .....	29
9.1 Measuring Location .....	29
9.2 Indoor Unit.....	30
9.3 Outdoor Unit.....	31
10. Electric Characteristics.....	32
11. Installation Manual .....	33
11.1 Indoor Unit.....	33
11.2 <BYFQ60B3W1> Decoration Panel .....	53
11.3 <BYFQ60C2W1W(S)> Decoration Panel.....	56
11.4 <BRC1E73> Wired Remote Controller.....	59
11.5 <BRC082A41W, BRC082A42W(S)> Wireless Remote Controller.....	79
11.6 Outdoor Unit.....	86

12.Operation Manual.....	98
12.1 With <BRC1E73> Wired Remote Controller .....	106
12.2 With <BRC082A41W, BRC082A42W(S)> Wireless Remote Controller .....	156
13.Options.....	165
13.1 Option List .....	165
13.2 <BRYQ60A2W(S)> Sensor Kit.....	166
13.3 <KDBQ44BA60A> Panel Spacer .....	168
13.4 <KDDQ44XA60> Fresh Air Intake Kit .....	170
13.5 <DCS302C71> Central Remote Controller .....	172
13.6 <DCS301C71> Unified ON/OFF Controller.....	203
13.7 <DST301BA61> Schedule Timer Controller .....	210
13.8 <KRP1C75> Adaptor for Wiring .....	229
13.9 <KRP4A74> Wiring Adaptor for Electrical Appendices.....	230
13.10<KRP1BA101> Installation Box for Adaptor PCB.....	234
13.11<KRCS01-4B> Remote Sensor .....	236
13.12<KPW937E4> Air Direction Adjustment Grille .....	239
13.13<KPW063A4> Air Direction Adjustment Grille .....	241
13.14<KKG067A41> Back Protection Wire Net .....	243
13.15<KKG063A42> Back Protection Wire Net .....	244
13.16<FTDBHMS, FTDBHML, KEH067A41E, KEH063A4E> Drain Pan Heater.....	245
13.17<KPS067A41> Snow Hood (Intake Side Plate).....	251
13.18<KPS067A42> Snow Hood (Intake Rear Plate) .....	253
13.19<KPS067A44> Snow Hood (Outlet) .....	255
13.20<KPS063A41> Snow Hood (Intake Side Plate).....	257
13.21<KPS063A44> Snow Hood (Intake Rear Plate) .....	259
13.22<KPS063A47> Snow Hood (Outlet) .....	261



- Cautions**
1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
  2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided and choose an outdoor unit with anti-corrosion treatment.

# 1. Power Supply

Indoor Unit	Outdoor Unit	Power Supply
FFQ09Q2VJU	RX09RMVJU	1 phase, 208 - 230 V, 60 Hz
FFQ12Q2VJU	RX12RMVJU	
FFQ15Q2VJU	RX15RMVJU	
FFQ18Q2VJU	RX18RMVJU	

**Note:** Power Supply Intake ; Outdoor Unit

## 2. Functions

Category	Functions	FFQ09/12/15/18Q2VJU FX09/12/15/18RMVJU with BYFQ60B3W1	FFQ09/12/15/18Q2VJU FX09/12/15/18RMVJU with BYFQ60C2W1W(S)	Category	Functions	FFQ09/12/15/18Q2VJU FX09/12/15/18RMVJU with BYFQ60B3W1	FFQ09/12/15/18Q2VJU FX09/12/15/18RMVJU with BYFQ60C2W1W(S)
Basic Functions	Inverter (with inverter power control)	●	●	Health & Cleanliness	Auto cleaning filter	—	—
	Operation limit for cooling	Refer to P. 28			Air-purifying filter	—	—
	Operation limit for heating				Titanium apatite deodorizing filter	—	—
	PAM control	●	●		Longlife filter (option)	●	●
	Standby electricity saving	—	—		Air filter	—	—
Compressor	Oval scroll compressor	—	—	Filter cleaning indicator	●	●	
	Swing compressor	●	●	Wipe-clean flat panel	—	—	
	Rotary compressor	—	—	Washable grille	●	●	
	Reluctance DC motor	●	●	MOLD PROOF operation	—	—	
Comfortable Airflow	Power-airflow flap (horizontal blade)	—	—	Good-sleep cooling operation	—	—	
	Power-airflow dual flaps (horizontal blade)	—	—	Timer	WEEKLY TIMER operation	—	—
	Power-airflow diffuser	—	—		Schedule TIMER operation	●★1	●★1
	Wide-angle louvers (vertical blades)	—	—		72-hour ON/OFF TIMER	●★2	●★2
	Auto-swing (up and down)	●	●		NIGHT SET mode	—	—
	Auto-swing (right and left)	—	—		Off Timer (turns unit off after set time)	●★1	●★1
	Individual flap control	—	●★1	Worry Free (Reliability & Durability)	Auto-restart (after power failure)	●	●
	3-D airflow	—	—		Self-diagnosis (R/C, LED)	●	●
COMFORT AIRFLOW operation	—	—	Wiring error check function		—	—	
Comfort Control	Switchable fan speed	● (3 steps)	● (3 steps)	Flexibility	Anti-corrosion treatment of outdoor heat exchanger	●	●
	Auto fan speed	●★1	●★1		Multi-split/split type compatible indoor unit	●	●
	Indoor unit quiet operation	—	—		H/P, C/O compatible indoor unit	—	—
	NIGHT QUIET mode (automatic)	—	—		Flexible power supply correspondence	—	—
	OUTDOOR UNIT QUIET operation (manual)	—	—		Chargeless	32.8 ft (10 m)	32.8 ft (10 m)
	Presence and floor sensor (option)	—	●★1		Either side drain (right or left)	—	—
	Auto-cooling/heating changeover	●	●		Drain pump	●	●
	Hot-start function	●	●		Power selection	—	—
	Draft prevention	●	●		Low outdoor temperature cooling operation (-20°C) (-4°F)	●★3	●★3
	Automatic defrosting	●	●		°F/°C changeover R/C temperature display (factory setting: °F)	●★1	●★1
Operation	Program dry function	●	●	Remote Control	Remote control adaptor (normal open pulse contact) (option)	—	—
	Fan only	●	●		Remote control adaptor (normal open contact) (option)	—	—
	Setback function	●★1	●★1		DIII-NET compatible (adaptor) (option)	●	●
Lifestyle Convenience	POWERFUL operation (non-inverter)	—	—	Remote Controller	Wireless (option)	●	●
	POWERFUL operation (inverter)	—	—		Wired (option)	●	●
	Priority-room setting	—	—				
	COOL/HEAT mode lock	—	—				
	HOME LEAVE operation	—	—				
	ECONO operation	—	—				
	Emergency operation switch	●★2	●★2				
	Signal receiving sign	●★2 ★4	●★2 ★4				
R/C with back light	●★1	●★1					

**Note:** ● : Available  
— : Not available

★1: With wired remote controller  
★2: With wireless remote controller  
★3: With air direction adjustment grille (option)  
★4: Receiving sound only

### 3. Specifications

60 Hz, 208 - 230 V

Model	Indoor Unit		FFQ09Q2VJU		FFQ12Q2VJU	
	Outdoor Unit		RX09RMVJU		RX12RMVJU	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min. ~ Max.)	Btu/h		9,100 (4,600 ~ 11,000)	10,000 (4,600 ~ 14,000)	10,800 (4,600 ~ 13,300)	13,500 (4,600 ~ 16,800)
Running Current (Rated)	A		3.64 - 3.29	3.43 - 3.10	4.61 - 4.17	4.96 - 4.49
Power Consumption Rated (Min. ~ Max.)	W		700 (280 ~ 1,050)	641 (250 ~ 1,150)	864 (280 ~ 1,410)	985 (250 ~ 1,450)
Power Factor (Rated)	%		92.5 - 92.5	89.8 - 89.9	90.1 - 90.1	95.5 - 95.4
SEER / HSPF			20.90	11.70	20.20	11.20
COP (Rated)	W/W		—	4.58	—	4.02
EER (Rated)	Btu/W-h		13.00	—	12.50	—
Piping Connections	Liquid	in. (mm)	φ 1/4 (φ 6.4)		φ 1/4 (φ 6.4)	
	Gas	in. (mm)	φ 3/8 (φ 9.5)		φ 3/8 (φ 9.5)	
	Drain	in. (mm)	VP20 (O.D. φ 1-1/32 (φ 26))		VP20 (O.D. φ 1-1/32 (φ 26))	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	ft (m)		65-5/8 (20)		65-5/8 (20)	
Max. Interunit Height Difference	ft (m)		49-1/4 (15)		49-1/4 (15)	
Chargeless	ft (m)		32-13/16 (10)		32-13/16 (10)	
Amount of Additional Charge of Refrigerant	oz/ft (g/m)		0.21 (20)		0.21 (20)	
<b>Indoor Unit</b>			<b>FFQ09Q2VJU</b>		<b>FFQ12Q2VJU</b>	
Decoration Panel (1)	Model		BYFQ60B3W1		BYFQ60B3W1	
	Color		White		White	
	Dimensions (H x W x D)	in. (mm)	2-3/16 x 27-9/16 x 27-9/16 (55 x 700 x 700)		2-3/16 x 27-9/16 x 27-9/16 (55 x 700 x 700)	
	Weight (Mass)	Lbs (kg)	6 (2.7)		6 (2.7)	
Decoration Panel (2)	Model		BYFQ60C2W1W / BYFQ60C2W1S		BYFQ60C2W1W / BYFQ60C2W1S	
	Color		White / Silver		White / Silver	
	Dimensions (H x W x D)	in. (mm)	1-13/16 x 24-7/16 x 24-7/16 (46 x 620 x 620)		1-13/16 x 24-7/16 x 24-7/16 (46 x 620 x 620)	
	Weight (Mass)	Lbs (kg)	6.2 (2.8)		6.2 (2.8)	
Airflow Rate	H	cfm (m³/min)	378 (10.7)	399 (11.3)	406 (11.5)	427 (12.1)
	M		339 (9.6)	357 (10.1)	353 (10.0)	371 (10.5)
	L		268 (7.6)	282 (8.0)	268 (7.6)	282 (8.0)
Fan	Type		Turbo Fan		Turbo Fan	
	Speed	Steps	3 Steps		3 Steps	
Running Current (Rated)	A		0.23 - 0.21	0.23 - 0.21	0.27 - 0.24	0.27 - 0.24
Power Consumption (Rated)	W		23	23	27	27
Power Factor (Rated)	%		48.1 - 47.6	48.1 - 47.6	48.1 - 48.9	48.1 - 48.9
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	in. (mm)		10-1/4 x 22-5/8 x 22-5/8 (260 x 575 x 575)		10-1/4 x 22-5/8 x 22-5/8 (260 x 575 x 575)	
Packaged Dimensions (H x W x D)	in. (mm)		11 x 27 x 23-1/2 (280 x 686 x 597)		11 x 27 x 23-1/2 (280 x 686 x 597)	
Weight (Mass)	Lbs (kg)		36 (16)		36 (16)	
Gross Weight (Gross Mass)	Lbs (kg)		40 (18)		40 (18)	
Sound Pressure Level	H / M / L	dB(A)	38 / 35 / 29	38 / 35 / 29	39 / 36 / 30	39 / 36 / 30
<b>Outdoor Unit</b>			<b>RX09RMVJU</b>		<b>RX12RMVJU</b>	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23AUXD		1YC23AUXD	
	Motor Output	W	790		790	
Refrigerant Oil	Type		FVC50K		FVC50K	
	Charge	fl oz (L)	12.68 (0.375)		12.68 (0.375)	
Refrigerant	Type		R-410A		R-410A	
	Charge	Lbs (kg)	2.09 (0.95)		2.09 (0.95)	
Airflow Rate	H	cfm (m³/min)	985 (27.9)	1,105 (31.3)	1,105 (31.3)	1,105 (31.3)
Fan	Type		Propeller		Propeller	
Running Current (Rated)	A		3.41 - 3.08	3.20 - 2.89	4.34 - 3.93	4.69 - 4.25
Power Consumption (Rated)	W		677	618	837	958
Power Factor (Rated)	%		95.4 - 95.6	92.8 - 93.0	92.7 - 92.6	98.2 - 98.0
Starting Current	A		7.5		7.5	
Dimensions (H x W x D)	in. (mm)		21-5/8 x 26-9/16 x 11-3/16 (550 x 675 x 284)		21-5/8 x 26-9/16 x 11-3/16 (550 x 675 x 284)	
Packaged Dimensions (H x W x D)	in. (mm)		24-3/4 x 32-11/16 x 16 (629 x 830 x 407)		24-3/4 x 32-11/16 x 16 (629 x 830 x 407)	
Weight (Mass)	Lbs (kg)		60 (27)		60 (27)	
Gross Weight (Gross Mass)	Lbs (kg)		71 (32)		71 (32)	
Sound Pressure Level	H	dB(A)	46	50	49	51
Drawing No.			3D113014		3D113015	

**Notes:**

1. SL: The Quiet fan level of the airflow rate setting.
2. The data are based on the conditions shown in the table below.

Cooling	Indoor ; 80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB) Outdoor ; 95.0°FDB (35.0°CDB) / 75.0°FWB (23.9°CWB)
Heating	Indoor ; 70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB) Outdoor ; 47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)
Piping Length	25 ft (7.6 m)

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m³/min x 35.3

60 Hz, 208 - 230V

Model	Indoor Unit		FFQ15Q2VJU		FFQ18Q2VJU	
	Outdoor Unit		RX15RMVJU		RX18RMVJU	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min. ~ Max.)	Btu/h		14,400 (5,100 ~ 16,200)	16,200 (5,200 ~ 16,300)	17,400 (5,100 ~ 18,800)	21,600 (5,400 ~ 21,800)
Running Current (Rated)	A		5.83 - 5.27	6.23 - 5.63	7.12 - 6.44	9.51 - 8.6
Power Consumption Rated (Min. ~ Max.)	W		1,152 (310 ~ 1,640)	1,235 (330 ~ 1,300)	1,392 - 1,392 (340 ~ 1,650)	1,875 - 1,875 (370 ~ 1,920)
Power Factor (Rated)	%		95.0 - 95.0	95.3 - 95.4	94 - 94	94.8 - 94.8
SEER / HSPF			20.70	11.00	19.30	10.10
COP (Rated)	W/W		—	3.86	—	3.36
EER (Rated)	Btu/W-h		12.50	—	12.50	—
Piping Connections	Liquid	in. (mm)	φ 1/4 (φ 6.4)		φ 1/4 (φ 6.4)	
	Gas	in. (mm)	φ 1/2 (φ 12.7)		φ 1/2 (φ 12.7)	
	Drain	in. (mm)	VP20 (O.D. φ 1-1/32 (φ 26))		VP20 (O.D. φ 1-1/32 (φ 26))	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	ft (m)		98-1/2 (30)		98-1/2 (30)	
Max. Interunit Height Difference	ft (m)		65-5/8 (20)		65-5/8 (20)	
Chargeless	ft (m)		32-13/16 (10)		32-13/16 (10)	
Amount of Additional Charge of Refrigerant	oz/ft (g/m)		0.21 (20)		0.21 (20)	
<b>Indoor Unit</b>			<b>FFQ15Q2VJU</b>		<b>FFQ18Q2VJU</b>	
Decoration Panel (1)	Model		BYFQ60B3W1		BYFQ60B3W1	
	Color		White		White	
	Dimensions (H x W x D)	in. (mm)	2-3/16 x 27-9/16 x 27-9/16 (55 x 700 x 700)		2-3/16 x 27-9/16 x 27-9/16 (55 x 700 x 700)	
	Weight (Mass)	Lbs (kg)	6 (2.7)		6 (2.7)	
Decoration Panel (2)	Model		BYFQ60C2W1W / BYFQ60C2W1S		BYFQ60C2W1W / BYFQ60C2W1S	
	Color		White / Silver		White / Silver	
	Dimensions (H x W x D)	in. (mm)	1-13/16 x 24-7/16 x 24-7/16 (46 x 620 x 620)		1-13/16 x 24-7/16 x 24-7/16 (46 x 620 x 620)	
	Weight (Mass)	Lbs (kg)	6.2 (2.8)		6.2 (2.8)	
Airflow Rate	H		420 (11.9)	441 (12.5)	448 (12.7)	498 (14.1)
	M	cfm (m³/min)	367 (10.4)	385 (10.9)	378 (10.7)	420 (11.9)
	L		293 (8.3)	307 (8.7)	275 (7.8)	307 (8.7)
Fan	Type		Turbo Fan		Turbo Fan	
	Speed	Steps	3 Steps		3 Steps	
Running Current (Rated)	A		0.29 - 0.26	0.29 - 0.26	0.52 - 0.47	0.52 - 0.47
Power Consumption (Rated)	W		28	28	51 - 51	51 - 51
Power Factor (Rated)	%		46.4 - 46.8	46.4 - 46.8	47.2 - 47.2	47.2 - 47.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	in. (mm)		10-1/4 x 22-5/8 x 22-5/8 (260 x 575 x 575)		10-1/4 x 22-5/8 x 22-5/8 (260 x 575 x 575)	
Packaged Dimensions (H x W x D)	in. (mm)		11 x 27 x 23-1/2 (280 x 686 x 597)		11 x 27 x 23-1/2 (280 x 686 x 597)	
Weight (Mass)	Lbs (kg)		36 (16)		39.0 (17.5)	
Gross Weight (Gross Mass)	Lbs (kg)		40 (18)		42.0 (19.0)	
Sound Pressure Level	H / M / L	dB(A)	40 / 37 / 31	40 / 37 / 31	44 / 40 / 32	44 / 40 / 32
<b>Outdoor Unit</b>			<b>RX15RMVJU</b>		<b>RX18RMVJU</b>	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		2YC36PXD		2YC36PXD	
	Motor Output	W	1,100		1,100	
Refrigerant Oil	Type		FVC50K		FVC50K	
	Charge	fl oz (L)	21.98 (0.650)		21.98 (0.650)	
Refrigerant	Type		R-410A		R-410A	
	Charge	Lbs (kg)	2.49 (1.13)		2.49 (1.13)	
Airflow Rate	H	cfm (m³/min)	2,313 (65.5)	2,108 (59.7)	2,461 (69.7)	2,553 (72.3)
Fan	Type		Propeller		Propeller	
Running Current (Rated)	A		5.54 - 5.01	5.94 - 5.37	6.60 - 5.97	8.99 - 8.13
Power Consumption (Rated)	W		1,124	1,207	1,341 - 1,341	1,824 - 1,824
Power Factor (Rated)	%		97.5 - 97.5	97.7 - 97.7	97.7 - 97.7	97.5 - 97.5
Starting Current	A		8.0		9.51	
Dimensions (H x W x D)	in. (mm)		28-15/16 x 34-1/4 x 12-5/8 (735 x 870 x 320)		28-15/16 x 34-1/4 x 12-5/8 (735 x 870 x 320)	
Packaged Dimensions (H x W x D)	in. (mm)		31-7/8 x 41-9/16 x 18-1/4 (810 x 1,056 x 464)		31-7/8 x 41-9/16 x 18-1/4 (810 x 1,056 x 464)	
Weight (Mass)	Lbs (kg)		97 (44)		97 (44)	
Gross Weight (Gross Mass)	Lbs (kg)		115 (52)		115 (52)	
Sound Pressure Level	H	dB(A)	50	51	54	55
Drawing No.			3D113017		3D113018	

**Notes:**

1. SL: The Quiet fan level of the airflow rate setting.
2. The data are based on the conditions shown in the table below.


Cooling	Indoor ; 80.0°FDB (26.7°CDB) / 67.0°FWB (19.4°CWB) Outdoor ; 95.0°FDB (35.0°CDB) / 75.0°FWB (23.9°CWB)
Heating	Indoor ; 70.0°FDB (21.1°CDB) / 60.0°FWB (15.6°CWB) Outdoor ; 47.0°FDB (8.3°CDB) / 43.0°FWB (6.1°CWB)
Piping Length	25 ft (7.6 m)

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m³/min x 35.3






**BRC1E73 — Wired Remote Controller (Option) —**

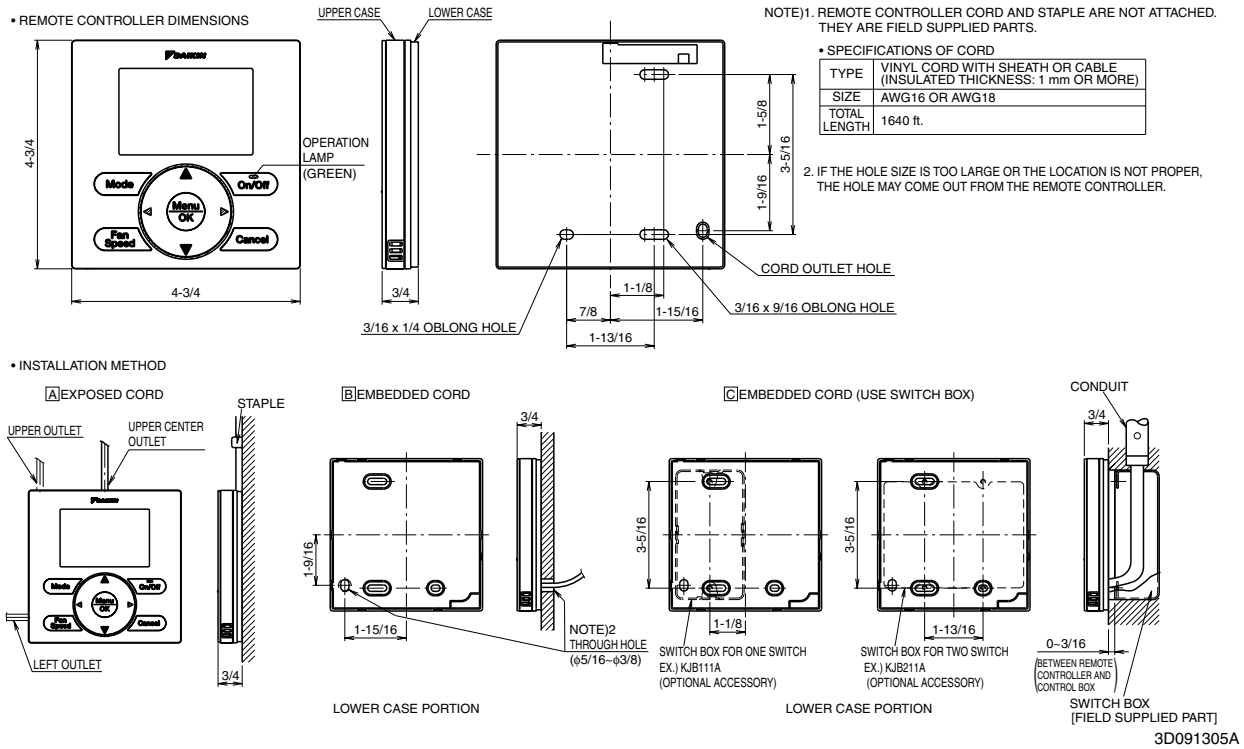


**BRC082A41W — Wireless Remote Controller (Option) —**


• REMOTE CONTROLLER DIMENSIONS

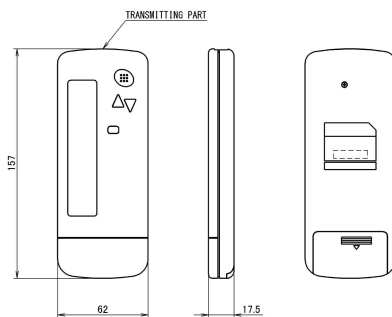


• REMOTE CONTROLLER HOLDER INSTALLATION PROCEDURE  
<INSTALLATION TO WALL SURFACE>

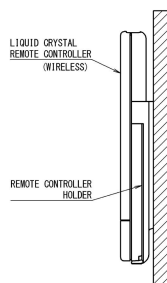

• RECEIVER INSTALLATION PROCEDURE

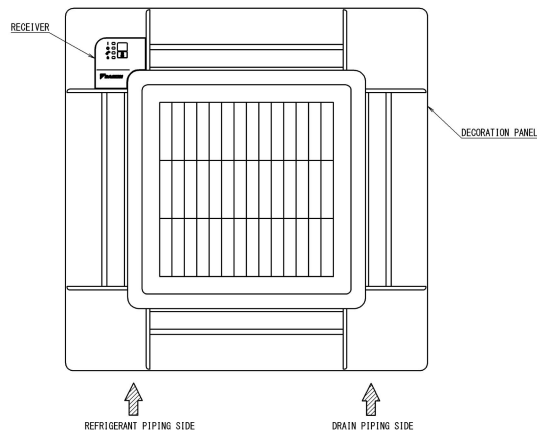


• RECEIVER DETAIL

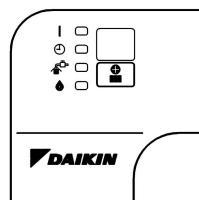


3D082556A

**BRC082A42W(S) — Wireless Remote Controller (Option) —**


• REMOTE CONTROLLER DIMENSIONS

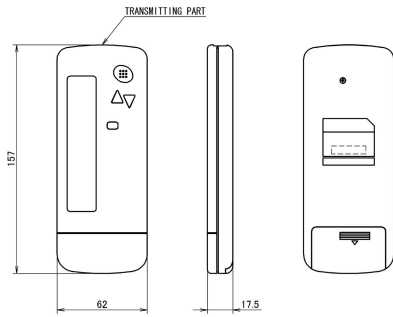


• REMOTE CONTROLLER HOLDER  
INSTALLATION PROCEDURE  
<INSTALLATION TO WALL SURFACE>

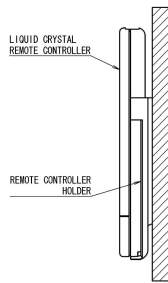

• RECEIVER INSTALLATION PROCEDURE

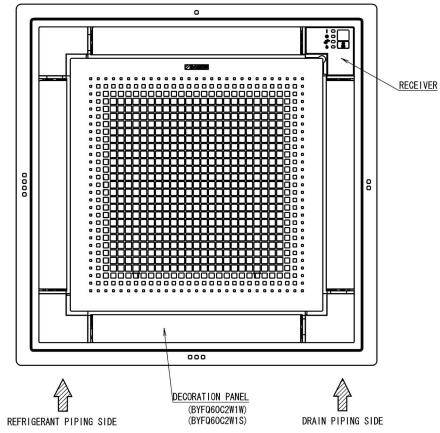


• RECEIVER DETAIL

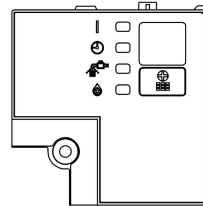


3D082024

## 4.2 Outdoor Unit

### RX09/12RMVJU

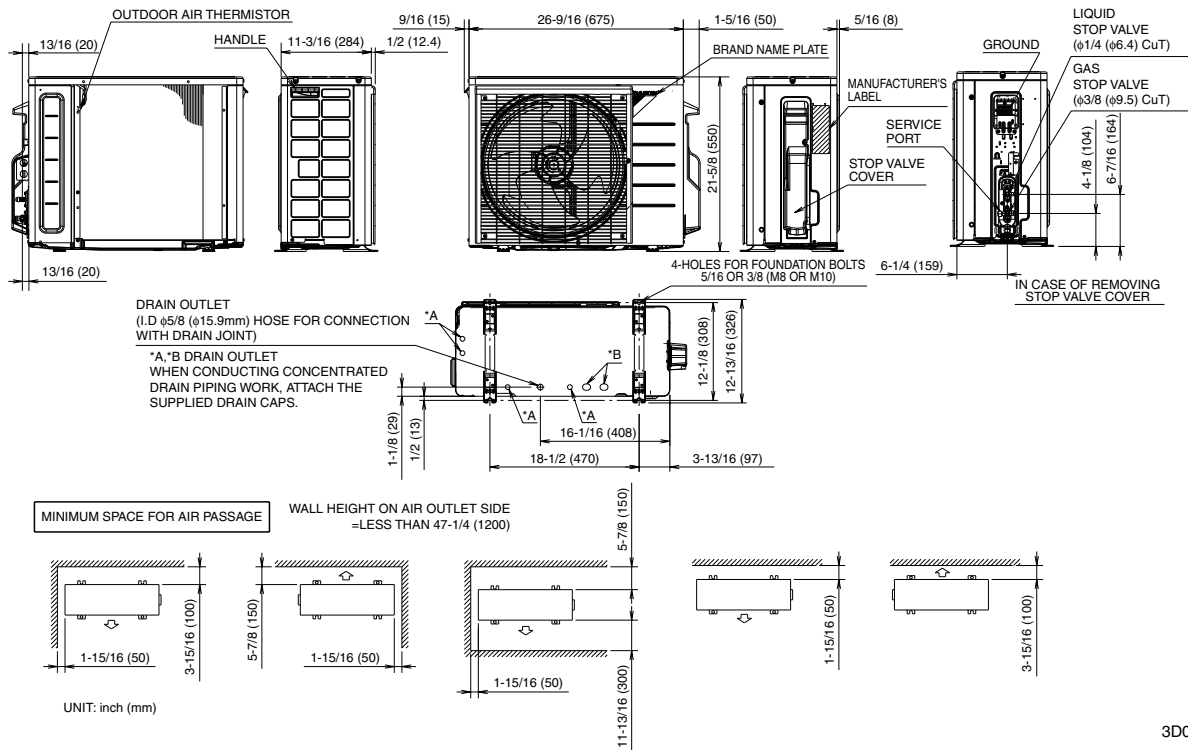


### RX15/18RMVJU

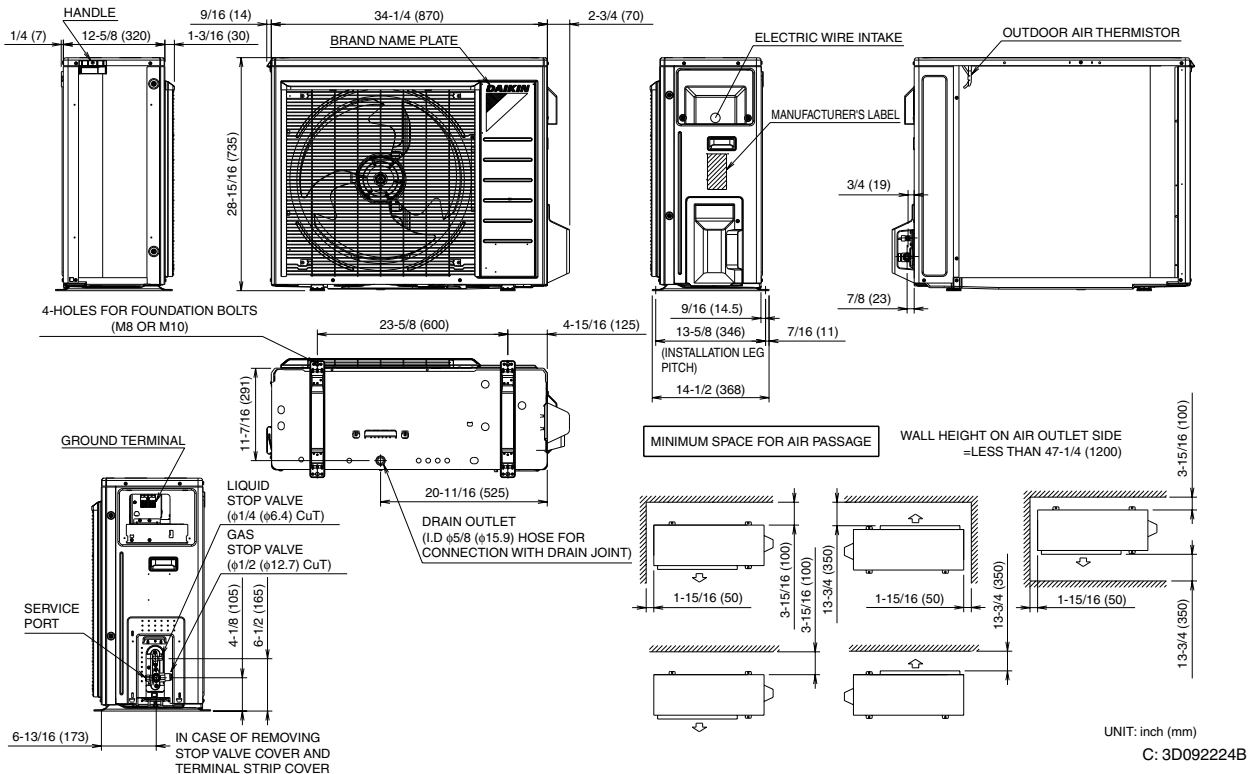

# 5. Wiring Diagrams

## 5.1 Indoor Unit

FFQ09/12/15/18Q2VJU

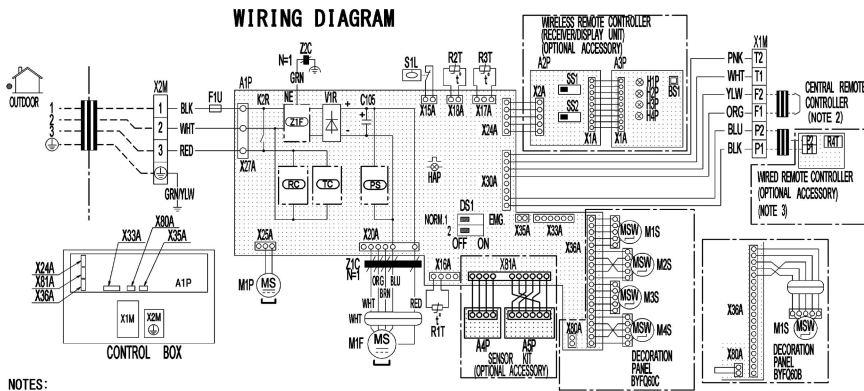


INDOOR UNIT		H1P	PILOT LAMP (ON-RED)
A1P	PRINTED CIRCUIT BOARD	H2P	PILOT LAMP (TIMER-GREEN)
C105	CAPACITOR (M1F)	H3P	PILOT LAMP (FILTER SIGN-RED)
DS1	DIP SWITCH ON PCB	H4P	PILOT LAMP (DEFROST-ORANGE)
F1U	FUSE (F 5A, 250V)	SS1	SELECTOR SWITCH (MAIN/SUB)
H1P	FLASHING LAMP (SERVICE MONITOR GREEN)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
K2R	MAGNETIC RELAY	SENSOR KIT	
M1F	FAN MOTOR	A4P	PRINTED CIRCUIT BOARD
M1P	DRAIN PUMP MOTOR	A5P	PRINTED CIRCUIT BOARD
M1S-M3S	SWING MOTOR	WIRED REMOTE CONTROLLER	
R1T	THERMISTOR (AIR)	R4T	THERMISTOR (AIR)
R2T-R3T	THERMISTOR (GOIL)	CONNECTOR FOR OPTIONAL PARTS	
S1L	FLOAT SWITCH	X24A	CONNECTOR (WIRING REMOTE CONTROLLER)
V1R	DIODE BRIDGE	X33A	CONNECTOR (ADAPTOR FOR WIRING)
X1M	TERMINAL BLOCK	X35A	CONNECTOR (POWER SUPPLY FOR ADAPTOR)
X2M	TERMINAL BLOCK	X81A	CONNECTOR (SENSOR KIT)
Z1F	NOISE FILTER		
Z1C	FERRITE CORE		
Z2C	FERRITE CORE		
PS	SWITCHING POWER SUPPLY		
RC	RECEIVER		
TC	TRANSMITTER		
WIRELESS REMOTE CONTROLLER (RECEIVER/DISPLAY UNIT)			
A2P-A3P	PRINTED CIRCUIT BOARD		
BS1	PUSH BUTTON SWITCH ON PCB		

- NOTES:
1. □ □ □ TERMINAL BLOCK ( ) : CONNECTOR ( ) : FIELD WIRING
  2. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.
  3. IN CASE OF MAIN/SUB CHANGEOVER, SEE THE INSTALLATION MANUAL ATTACHED TO WIRELESS REMOTE CONTROLLER.
  4. SYMBOLS SHOW AS FOLLOWS: BLK:BLACK RED:RED BLU:BLUE WHT:WHITE YLW:YELLOW GRN:GREEN ORG:ORANGE BRN:BROWN PNK:PINK.

3D106024


## 5.2 Outdoor Unit

### RX09/12RMVJU

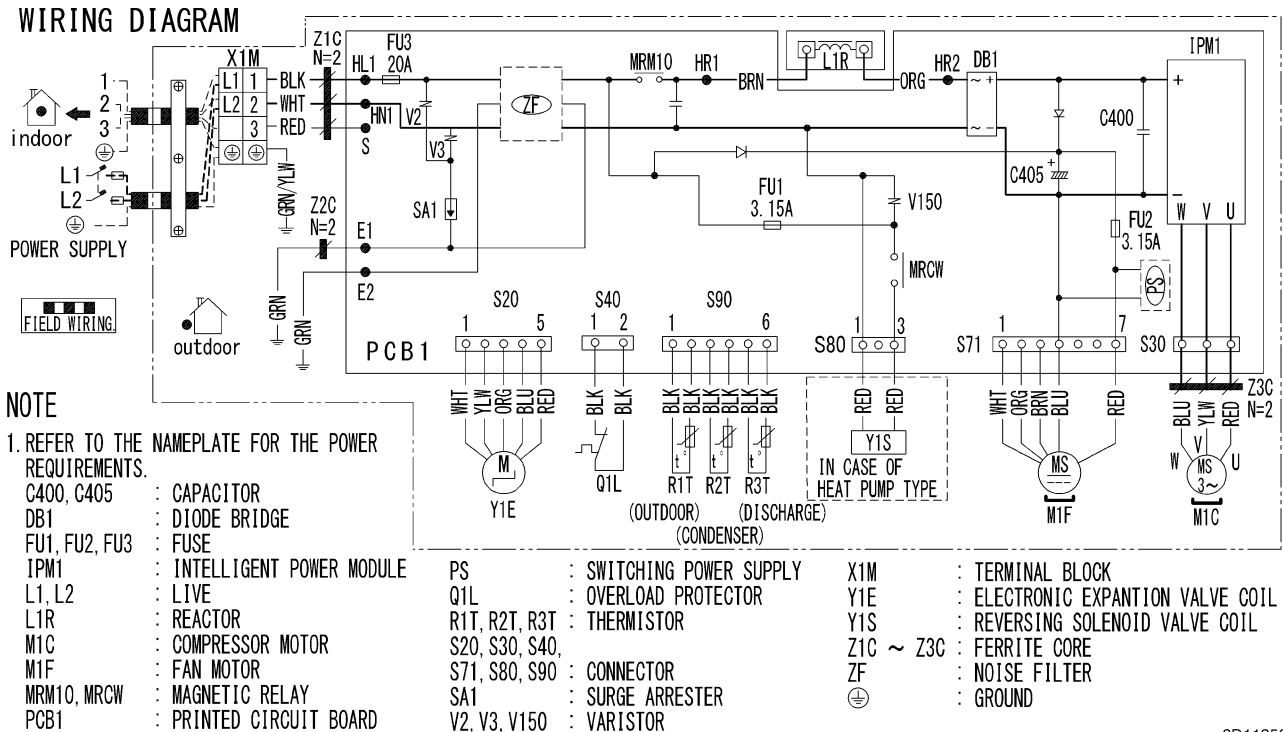

3D112531

### RX15/18RMVJU

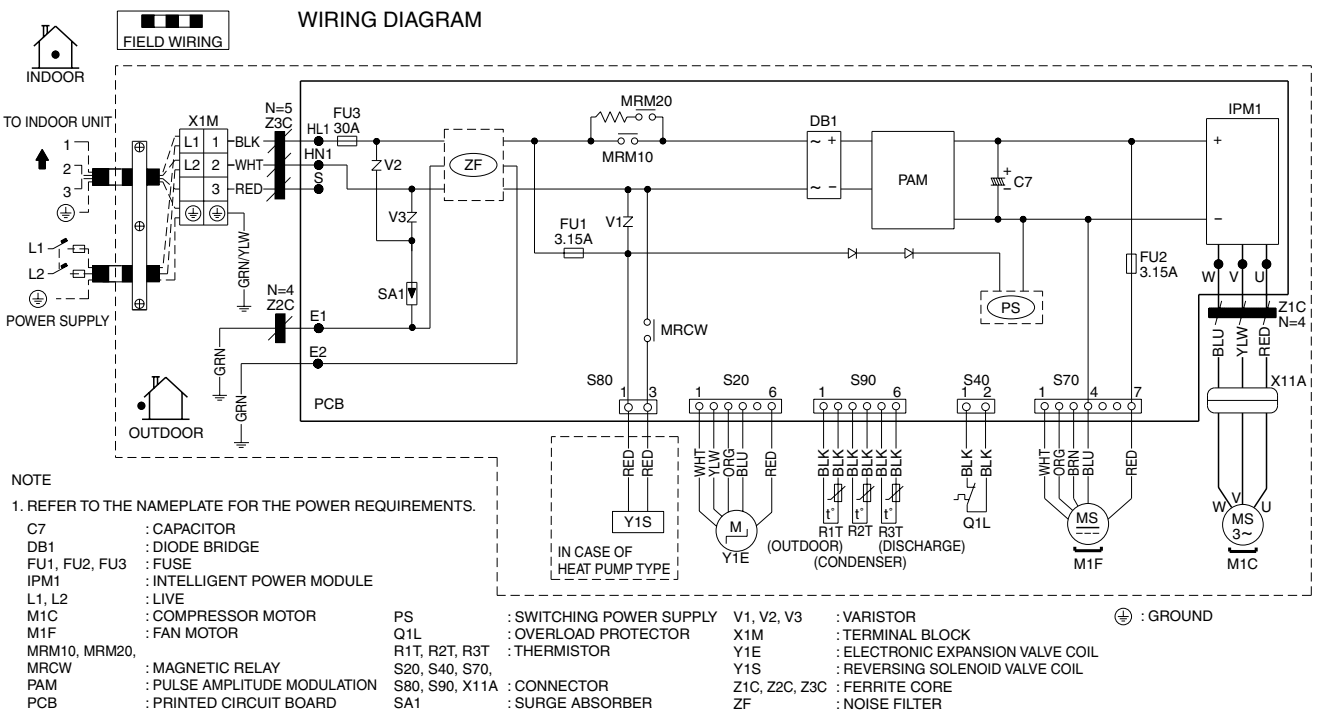


3D105962A

# 6. Piping Diagrams

## 6.1 Indoor Unit

FFQ09/12/15/18Q2VJU

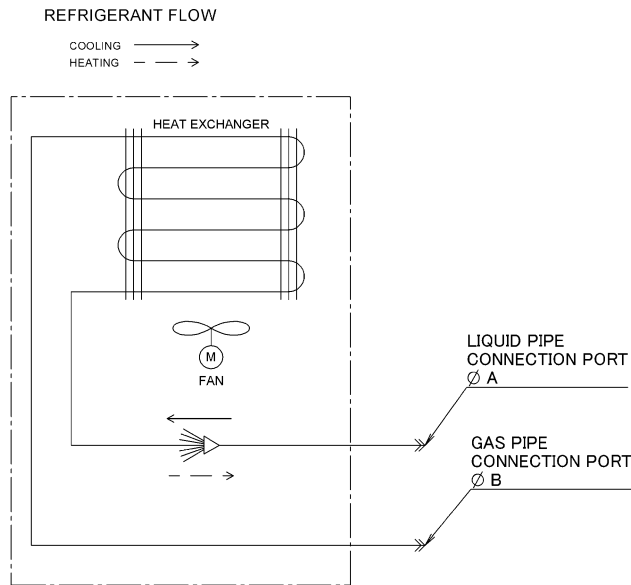


MODEL	A	B
FFQ09Q2VJU	1/4(6.4)	3/8(9.5)
FFQ12Q2VJU		
FFQ15Q2VJU		1/2(12.7)
FFQ18Q2VJU		

4D106033


## 6.2 Outdoor Unit

### RX09/12RMVJU

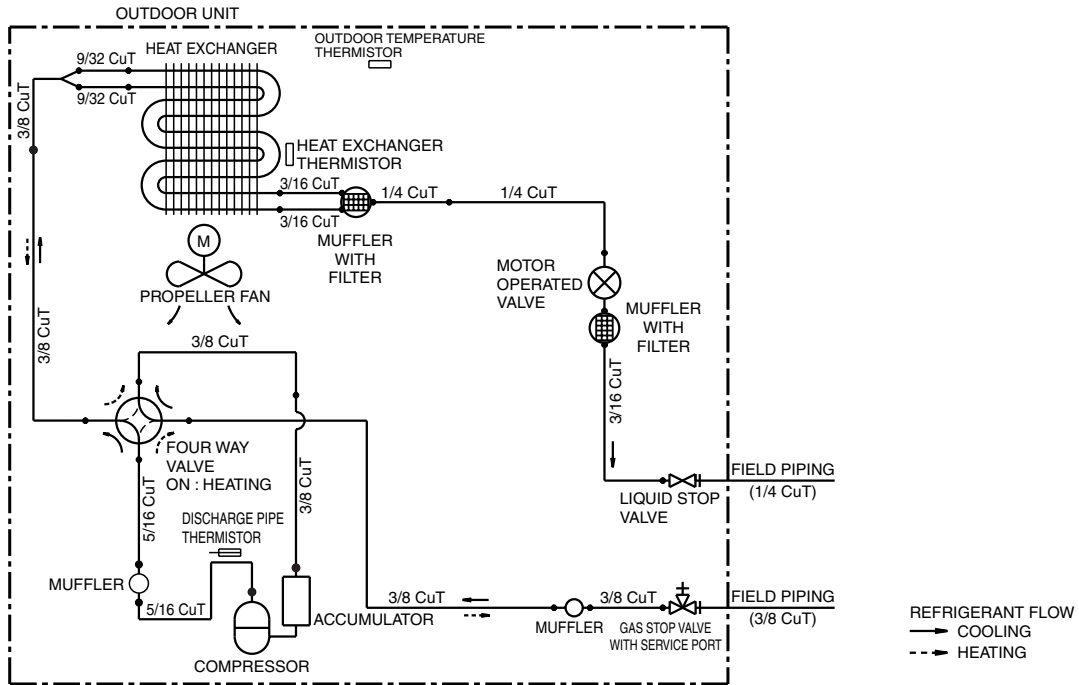

3D092207B

### RX15/18RMVJU

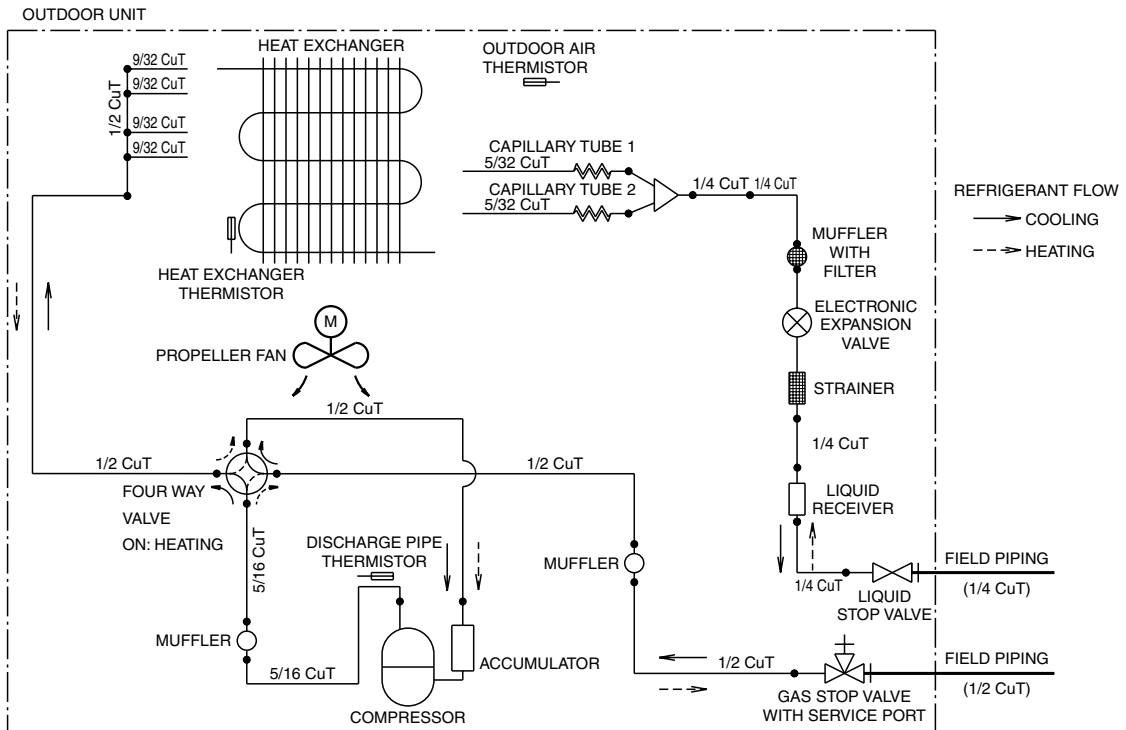

3D092220B



# 7. Capacity Tables

## FFQ09Q2VJU + RX09RMVJU

60 Hz, 208 V

### Cooling

AFR	10.7
BF	0.18

Temp: Celsius  
TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
		°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	
14.0	20.0	2.98	2.35	0.43	2.74	2.23	0.54	2.49	2.12	0.64	2.36	2.06	0.69	2.24	2.00	0.74	2.09	1.94	0.81
16.0	22.0	3.11	2.31	0.44	2.86	2.20	0.54	2.61	2.09	0.64	2.49	2.03	0.70	2.36	1.98	0.75	2.21	1.92	0.81
18.0	25.0	3.23	2.43	0.44	2.98	2.33	0.54	2.73	2.23	0.65	2.61	2.18	0.70	2.48	2.13	0.75	2.33	2.07	0.81
19.4	26.7	3.29	2.59	0.44	3.04	2.49	0.54	2.79	2.39	0.65	2.67	2.34	0.70	2.55	2.29	0.75	2.40	2.24	0.81
22.0	30.0	3.48	2.50	0.45	3.23	2.41	0.55	2.98	2.32	0.65	2.85	2.28	0.70	2.73	2.24	0.76	2.58	2.19	0.82
24.0	32.0	3.60	2.43	0.50	3.35	2.35	0.55	3.10	2.28	0.66	2.98	2.24	0.71	2.85	2.20	0.76	2.70	2.15	0.82

Temp: Fahrenheit  
TC, SHC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
		°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	
57.2	68.0	10.18	8.03	0.43	9.33	7.62	0.54	8.48	7.23	0.64	8.06	7.03	0.69	7.64	6.84	0.74	7.13	6.61	0.81
60.8	71.6	10.60	7.88	0.44	9.75	7.50	0.54	8.90	7.13	0.64	8.48	6.94	0.70	8.06	6.76	0.75	7.55	6.55	0.81
64.4	77.0	11.02	8.31	0.44	10.17	7.95	0.54	9.32	7.61	0.65	8.90	7.44	0.70	8.48	7.27	0.75	7.97	7.07	0.81
67.0	80.0	11.23	8.82	0.44	10.38	8.48	0.54	9.53	8.15	0.65	9.10	7.99	0.70	8.69	7.82	0.75	8.18	7.63	0.81
71.6	86.0	11.86	8.51	0.45	11.01	8.22	0.55	10.16	7.92	0.65	9.74	7.78	0.70	9.32	7.63	0.76	8.81	7.47	0.82
75.2	89.6	12.28	8.30	0.50	11.43	8.03	0.55	10.58	7.76	0.66	10.16	7.63	0.71	9.74	7.50	0.76	9.23	7.35	0.82

### Heating

AFR	11.3
-----	------

Temp: Celsius  
TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB	°C	-15		-10		-5		0		6		10		18	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI		
15.0	1.40	0.41	1.68	0.43	1.96	0.45	2.25	0.48	3.04	0.63	3.31	0.65	3.84	0.69	
21.1	1.31	0.42	1.60	0.45	1.88	0.47	2.16	0.49	2.94	0.64	3.21	0.66	3.74	0.70	
22.0	1.28	0.43	1.56	0.45	1.84	0.47	2.13	0.49	2.90	0.65	3.16	0.67	3.70	0.71	
24.0	1.24	0.43	1.53	0.45	1.81	0.48	2.09	0.50	2.86	0.65	3.12	0.67	3.66	0.72	
25.0	1.23	0.44	1.51	0.46	1.79	0.48	2.07	0.50	2.84	0.66	3.10	0.68	3.64	0.72	
27.0	1.19	0.44	1.48	0.46	1.76	0.48	2.04	0.50	2.80	0.66	3.06	0.68	3.59	0.72	

Temp: Fahrenheit  
TC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB	°F	5		14		23		32		43		50		64	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI		
59.0	4.78	0.41	5.74	0.43	6.70	0.45	7.67	0.48	10.38	0.63	11.28	0.65	13.10	0.69	
70.0	4.48	0.42	5.45	0.45	6.41	0.47	7.37	0.49	10.00	0.64	10.94	0.66	12.75	0.70	
71.6	4.37	0.43	5.33	0.45	6.29	0.47	7.25	0.49	9.89	0.65	10.80	0.67	12.61	0.71	
75.2	4.25	0.43	5.21	0.45	6.17	0.48	7.14	0.50	9.75	0.65	10.66	0.67	12.47	0.72	
77.0	4.19	0.44	5.15	0.46	6.11	0.48	7.08	0.50	9.69	0.66	10.59	0.68	12.40	0.72	
80.6	4.07	0.44	5.03	0.46	6.00	0.48	6.96	0.50	9.55	0.66	10.45	0.68	12.27	0.72	

## 60 Hz, 230 V

## Cooling

AFR	10.7
BF	0.18

Temp: Celsius

TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	2.98	2.35	0.43	2.74	2.23	0.54	2.49	2.12	0.64	2.36	2.06	0.69	2.24	2.00	0.74	2.09	1.94	0.81
16.0	22.0	3.11	2.31	0.44	2.86	2.20	0.54	2.61	2.09	0.64	2.49	2.03	0.70	2.36	1.98	0.75	2.21	1.92	0.81
18.0	25.0	3.23	2.43	0.44	2.98	2.33	0.54	2.73	2.23	0.65	2.61	2.18	0.70	2.48	2.13	0.75	2.33	2.07	0.81
19.4	26.7	3.29	2.59	0.44	3.04	2.49	0.54	2.79	2.39	0.65	2.67	2.34	0.70	2.55	2.29	0.75	2.40	2.24	0.81
22.0	30.0	3.48	2.50	0.45	3.23	2.41	0.55	2.98	2.32	0.65	2.85	2.28	0.70	2.73	2.24	0.76	2.58	2.19	0.82
24.0	32.0	3.60	2.43	0.50	3.35	2.35	0.55	3.10	2.28	0.66	2.98	2.24	0.71	2.85	2.20	0.76	2.70	2.15	0.82

Temp: Fahrenheit

TC, SHC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	10.18	8.03	0.43	9.33	7.62	0.54	8.48	7.23	0.64	8.06	7.03	0.69	7.64	6.84	0.74	7.13	6.61	0.81
60.8	71.6	10.60	7.88	0.44	9.75	7.50	0.54	8.90	7.13	0.64	8.48	6.94	0.70	8.06	6.76	0.75	7.55	6.55	0.81
64.4	77.0	11.02	8.31	0.44	10.17	7.95	0.54	9.32	7.61	0.65	8.90	7.44	0.70	8.48	7.27	0.75	7.97	7.07	0.81
67.0	80.0	11.23	8.82	0.44	10.38	8.48	0.54	9.53	8.15	0.65	9.10	7.99	0.70	8.69	7.82	0.75	8.18	7.63	0.81
71.6	86.0	11.86	8.51	0.45	11.01	8.22	0.55	10.16	7.92	0.65	9.74	7.78	0.70	9.32	7.63	0.76	8.81	7.47	0.82
75.2	89.6	12.28	8.30	0.50	11.43	8.03	0.55	10.58	7.76	0.66	10.16	7.63	0.71	9.74	7.50	0.76	9.23	7.35	0.82

## Heating

AFR	11.3
-----	------

Temp: Celsius

TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB		-15		-10		-5		0		6		10		18	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		1.40	0.41	1.68	0.43	1.96	0.45	2.25	0.48	3.04	0.63	3.31	0.65	3.84	0.69
21.1		1.31	0.42	1.60	0.45	1.88	0.47	2.16	0.49	2.94	0.64	3.21	0.66	3.74	0.70
22.0		1.28	0.43	1.56	0.45	1.84	0.47	2.13	0.49	2.90	0.65	3.16	0.67	3.70	0.71
24.0		1.24	0.43	1.53	0.45	1.81	0.48	2.09	0.50	2.86	0.65	3.12	0.67	3.66	0.72
25.0		1.23	0.44	1.51	0.46	1.79	0.48	2.07	0.50	2.84	0.66	3.10	0.68	3.64	0.72
27.0		1.19	0.44	1.48	0.46	1.76	0.48	2.04	0.50	2.80	0.66	3.06	0.68	3.59	0.72

Temp: Fahrenheit

TC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB		5		14		23		32		43		50		64	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		4.78	0.41	5.74	0.43	6.70	0.45	7.67	0.48	10.38	0.63	11.28	0.65	13.10	0.69
70.0		4.48	0.42	5.45	0.45	6.41	0.47	7.37	0.49	10.00	0.64	10.94	0.66	12.75	0.70
71.6		4.37	0.43	5.33	0.45	6.29	0.47	7.25	0.49	9.89	0.65	10.80	0.67	12.61	0.71
75.2		4.25	0.43	5.21	0.45	6.17	0.48	7.14	0.50	9.75	0.65	10.66	0.67	12.47	0.72
77.0		4.19	0.44	5.15	0.46	6.11	0.48	7.08	0.50	9.69	0.66	10.59	0.68	12.40	0.72
80.6		4.07	0.44	5.03	0.46	6.00	0.48	6.96	0.50	9.55	0.66	10.45	0.68	12.27	0.72

**Symbols:**

AFR	: Airflow rate	(m <sup>3</sup> /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

**Notes:**

1. ■ shows nominal (rated) capacities and power input.
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables. (Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.  
Corresponding refrigerant piping length : 25 ft (7.6 m)  
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

C: 3D113024

## FFQ12Q2VJU + RX12RMVJU

60 Hz, 208 V

## Cooling

AFR	11.5
BF	0.28

Temp: Celsius

TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
		°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC
14.0	20.0	3.55	2.59	0.54	3.26	2.44	0.66	2.96	2.29	0.79	2.81	2.22	0.85	2.67	2.15	0.92	2.49	2.06	0.99
16.0	22.0	3.70	2.54	0.54	3.40	2.40	0.67	3.11	2.26	0.79	2.96	2.19	0.86	2.81	2.12	0.92	2.63	2.05	1.00
18.0	25.0	3.85	2.64	0.54	3.55	2.51	0.67	3.25	2.39	0.80	3.11	2.32	0.86	2.96	2.26	0.93	2.78	2.19	1.00
19.4	26.7	3.92	2.78	0.54	3.62	2.65	0.67	3.33	2.53	0.80	3.18	2.47	0.86	3.03	2.41	0.93	2.85	2.34	1.00
22.0	30.0	4.14	2.67	0.55	3.84	2.56	0.68	3.55	2.45	0.81	3.40	2.40	0.87	3.25	2.34	0.93	3.07	2.28	1.01
24.0	32.0	4.29	2.60	0.55	3.99	2.49	0.68	3.69	2.39	0.81	3.55	2.35	0.87	3.40	2.30	0.94	3.22	2.24	1.01

Temp: Fahrenheit

TC, SHC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
		°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC
57.2	68.0	12.13	8.83	0.54	11.12	8.32	0.66	10.11	7.82	0.79	9.60	7.57	0.85	9.10	7.33	0.92	8.49	7.04	0.99
60.8	71.6	12.63	8.66	0.54	11.62	8.17	0.67	10.61	7.71	0.79	10.10	7.48	0.86	9.60	7.25	0.92	8.99	6.98	1.00
64.4	77.0	13.13	9.02	0.54	12.12	8.57	0.67	11.11	8.14	0.80	10.60	7.92	0.86	10.10	7.71	0.93	9.49	7.46	1.00
67.0	80.0	13.38	9.48	0.54	12.37	9.05	0.67	11.36	8.63	0.80	10.80	8.43	0.86	10.34	8.22	0.93	9.74	7.98	1.00
71.6	86.0	14.13	9.11	0.55	13.12	8.73	0.68	12.11	8.36	0.81	11.60	8.18	0.87	11.09	8.00	0.93	10.49	7.79	1.01
75.2	89.6	14.63	8.85	0.55	13.62	8.51	0.68	12.61	8.17	0.81	12.10	8.00	0.87	11.59	7.84	0.94	10.99	7.64	1.01

## Heating

AFR	12.1
-----	------

Temp: Celsius

TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB	°C	-15		-10		-5		0		6		10		18	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	1.89	0.63	2.27	0.67	2.65	0.70	3.03	0.73	4.10	0.96	4.45	1.00	5.17	1.06	
21.1	1.77	0.65	2.15	0.68	2.53	0.72	2.91	0.75	3.96	0.99	4.32	1.02	5.03	1.08	
22.0	1.72	0.66	2.10	0.69	2.48	0.72	2.86	0.76	3.91	0.99	4.26	1.03	4.98	1.09	
24.0	1.68	0.67	2.06	0.70	2.44	0.73	2.82	0.76	3.85	1.00	4.21	1.04	4.92	1.10	
25.0	1.65	0.67	2.03	0.70	2.41	0.73	2.79	0.77	3.82	1.01	4.18	1.04	4.90	1.10	
27.0	1.61	0.68	1.99	0.71	2.37	0.74	2.75	0.77	3.77	1.02	4.13	1.05	4.84	1.11	

Temp: Fahrenheit

TC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB	°F	5		14		23		32		43		50		64	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	6.43	0.63	7.73	0.67	9.03	0.70	10.33	0.73	13.98	0.96	15.20	1.00	17.64	1.06	
70.0	6.04	0.65	7.33	0.68	8.63	0.72	9.93	0.75	13.50	0.99	14.73	1.02	17.17	1.08	
71.6	5.88	0.66	7.18	0.69	8.47	0.72	9.77	0.76	13.32	0.99	14.55	1.03	16.99	1.09	
75.2	5.72	0.67	7.02	0.70	8.31	0.73	9.61	0.76	13.14	1.00	14.36	1.04	16.80	1.10	
77.0	5.64	0.67	6.94	0.70	8.24	0.73	9.53	0.77	13.05	1.01	14.27	1.04	16.71	1.10	
80.6	5.48	0.68	6.78	0.71	8.08	0.74	9.37	0.77	12.86	1.02	14.08	1.05	16.52	1.11	

60 Hz, 230 V

Cooling

AFR	11.5
BF	0.28

Temp: Celsius  
TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
		TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.55	2.59	0.54	3.26	2.44	0.66	2.96	2.29	0.79	2.81	2.22	0.85	2.67	2.15	0.92	2.49	2.06	0.99
16.0	22.0	3.70	2.54	0.54	3.40	2.40	0.67	3.11	2.26	0.79	2.96	2.19	0.86	2.81	2.12	0.92	2.63	2.05	1.00
18.0	25.0	3.85	2.64	0.54	3.55	2.51	0.67	3.25	2.39	0.80	3.11	2.32	0.86	2.96	2.26	0.93	2.78	2.19	1.00
19.4	26.7	3.92	2.78	0.54	3.62	2.65	0.67	3.33	2.53	0.80	3.18	2.47	0.86	3.03	2.41	0.93	2.85	2.34	1.00
22.0	30.0	4.14	2.67	0.55	3.84	2.56	0.68	3.55	2.45	0.81	3.40	2.40	0.87	3.25	2.34	0.93	3.07	2.28	1.01
24.0	32.0	4.29	2.60	0.55	3.99	2.49	0.68	3.69	2.39	0.81	3.55	2.35	0.87	3.40	2.30	0.94	3.22	2.24	1.01

Temp: Fahrenheit  
TC, SHC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
		TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	12.13	8.83	0.54	11.12	8.32	0.66	10.11	7.82	0.79	9.60	7.57	0.85	9.10	7.33	0.92	8.49	7.04	0.99
60.8	71.6	11.62	8.66	0.54	11.62	8.17	0.67	10.61	7.71	0.79	10.10	7.48	0.86	9.60	7.25	0.92	8.99	6.98	1.00
64.4	77.0	12.12	9.02	0.54	12.12	8.57	0.67	11.11	8.14	0.80	10.60	7.92	0.86	10.10	7.71	0.93	9.49	7.46	1.00
67.0	80.0	12.37	9.48	0.54	12.37	9.05	0.67	11.36	8.63	0.80	10.80	8.43	0.86	10.34	8.22	0.93	9.74	7.98	1.00
71.6	86.0	13.12	9.11	0.55	13.12	8.73	0.68	12.11	8.36	0.81	11.60	8.18	0.87	11.09	8.00	0.93	10.49	7.79	1.01
75.2	89.6	13.62	8.85	0.55	13.62	8.51	0.68	12.61	8.17	0.81	12.10	8.00	0.87	11.59	7.84	0.94	10.99	7.64	1.01

Heating

AFR	12.1
-----	------

Temp: Celsius  
TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB	°C	-15		-10		-5		0		6		10		18	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	1.89	0.63	2.27	0.67	2.65	0.70	3.03	0.73	4.10	0.96	4.45	1.00	5.17	1.06	
21.1	1.77	0.65	2.15	0.68	2.53	0.72	2.91	0.75	3.96	0.99	4.32	1.02	5.03	1.08	
22.0	1.72	0.66	2.10	0.69	2.48	0.72	2.86	0.76	3.91	0.99	4.26	1.03	4.98	1.09	
24.0	1.68	0.67	2.06	0.70	2.44	0.73	2.82	0.76	3.85	1.00	4.21	1.04	4.92	1.10	
25.0	1.65	0.67	2.03	0.70	2.41	0.73	2.79	0.77	3.82	1.01	4.18	1.04	4.90	1.10	
27.0	1.61	0.68	1.99	0.71	2.37	0.74	2.75	0.77	3.77	1.02	4.13	1.05	4.84	1.11	

Temp: Fahrenheit  
TC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB	°F	5		14		23		32		43		50		64	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	6.43	0.63	7.73	0.67	9.03	0.70	10.33	0.73	13.98	0.96	15.20	1.00	17.64	1.06	
70.0	6.04	0.65	7.33	0.68	8.63	0.72	9.93	0.75	13.50	0.99	14.73	1.02	17.17	1.08	
71.6	5.88	0.66	7.18	0.69	8.47	0.72	9.77	0.76	13.32	0.99	14.55	1.03	16.99	1.09	
75.2	5.72	0.67	7.02	0.70	8.31	0.73	9.61	0.76	13.14	1.00	14.36	1.04	16.80	1.10	
77.0	5.64	0.67	6.94	0.70	8.24	0.73	9.53	0.77	13.05	1.01	14.27	1.04	16.71	1.10	
80.6	5.48	0.68	6.78	0.71	8.08	0.74	9.37	0.77	12.86	1.02	14.08	1.05	16.52	1.11	

**Symbols:**

AFR	: Airflow rate	(m <sup>3</sup> /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

**Notes:**

1. ■ shows nominal (rated) capacities and power input.
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables. (Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.  
Corresponding refrigerant piping length : 25 ft (7.6 m)  
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

C: 3D113025

**FFQ15Q2VJU + RX15RMVJU**

60 Hz, 208 V

**Cooling**

AFR	11.9
BF	0.32

Temp: Celsius  
TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.94	2.77	0.66	3.94	2.77	0.86	3.91	2.76	1.05	3.72	2.66	1.14	3.52	2.55	1.22	3.29	2.43	1.33
16.0	22.0	4.84	3.10	0.72	4.50	2.92	0.89	4.11	2.72	1.06	3.91	2.62	1.14	3.71	2.53	1.23	3.48	2.41	1.33
18.0	25.0	5.08	3.21	0.72	4.69	3.02	0.89	4.30	2.83	1.06	4.10	2.74	1.15	3.91	2.65	1.23	3.67	2.55	1.34
19.4	26.7	5.18	3.33	0.73	4.79	3.15	0.90	4.40	2.97	1.07	4.20	2.88	1.15	4.00	2.79	1.24	3.77	2.69	1.34
22.0	30.0	5.47	3.19	0.73	5.08	3.02	0.90	4.69	2.86	1.07	4.49	2.78	1.16	4.29	2.71	1.24	4.06	2.62	1.35
24.0	32.0	5.66	3.08	0.74	5.27	2.93	0.91	4.88	2.78	1.08	4.68	2.71	1.16	4.49	2.64	1.25	4.25	2.56	1.35

Temp: Fahrenheit  
TC, SHC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	13.44	9.47	0.66	13.44	9.47	0.86	13.35	9.42	1.05	12.68	9.06	1.14	12.01	8.72	1.22	11.21	8.31	1.33
60.8	71.6	16.51	10.58	0.72	15.34	9.96	0.89	14.01	9.28	1.06	13.34	8.95	1.14	12.67	8.62	1.23	11.87	8.23	1.33
64.4	77.0	17.34	10.96	0.72	16.00	10.30	0.89	14.67	9.66	1.06	14.00	9.35	1.15	13.33	9.05	1.23	12.53	8.69	1.34
67.0	80.0	17.67	11.37	0.73	16.33	10.74	0.90	15.00	10.12	1.07	14.40	9.82	1.15	13.66	9.53	1.24	12.86	9.18	1.34
71.6	86.0	18.66	10.87	0.73	17.32	10.31	0.90	15.99	9.76	1.07	15.32	9.50	1.16	14.65	9.23	1.24	13.85	8.93	1.35
75.2	89.6	19.32	10.51	0.74	17.98	10.00	0.91	16.65	9.50	1.08	15.98	9.25	1.16	15.31	9.01	1.25	14.51	8.73	1.35

**Heating**

AFR	12.5
-----	------

Temp: Celsius  
TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB		-15		-10		-5		0		6		10		18	
°C		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0		2.26	0.79	2.71	0.84	3.17	0.88	3.62	0.92	4.90	1.21	5.33	1.25	6.19	1.33
21.1		2.12	0.82	2.57	0.86	3.03	0.90	3.48	0.94	4.74	1.24	5.17	1.28	6.02	1.36
22.0		2.06	0.83	2.52	0.87	2.97	0.91	3.43	0.95	4.67	1.25	5.10	1.29	5.96	1.37
24.0		2.01	0.83	2.46	0.88	2.92	0.92	3.37	0.96	4.61	1.26	5.04	1.30	5.89	1.38
25.0		1.98	0.84	2.43	0.88	2.89	0.92	3.34	0.96	4.58	1.26	5.00	1.30	5.86	1.38
27.0		1.92	0.85	2.38	0.89	2.83	0.93	3.29	0.97	4.51	1.27	4.94	1.31	5.80	1.40

Temp: Fahrenheit  
TC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB		5		14		23		32		43		50		64	
°F		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0		7.70	0.79	9.25	0.84	10.81	0.88	12.36	0.92	16.73	1.21	18.19	1.25	21.11	1.33
70.0		7.23	0.82	8.78	0.86	10.33	0.90	11.88	0.94	16.20	1.24	17.63	1.28	20.56	1.36
71.6		7.04	0.83	8.59	0.87	10.14	0.91	11.69	0.95	15.95	1.25	17.41	1.29	20.33	1.37
75.2		6.85	0.83	8.40	0.88	9.95	0.92	11.50	0.96	15.73	1.26	17.19	1.30	20.11	1.38
77.0		6.75	0.84	8.31	0.88	9.86	0.92	11.41	0.96	15.61	1.26	17.08	1.30	20.00	1.38
80.6		6.56	0.85	8.12	0.89	9.67	0.93	11.22	0.97	15.39	1.27	16.85	1.31	19.77	1.40

## 60 Hz, 230 V

## Cooling

AFR	11.9
BF	0.32

Temp: Celsius

TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
		TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	3.94	2.77	0.66	3.94	2.77	0.86	3.91	2.76	1.05	3.72	2.66	1.14	3.52	2.55	1.22	3.29	2.43	1.33
16.0	22.0	4.84	3.10	0.72	4.50	2.92	0.89	4.11	2.72	1.06	3.91	2.62	1.14	3.71	2.53	1.23	3.48	2.41	1.33
18.0	25.0	5.08	3.21	0.72	4.69	3.02	0.89	4.30	2.83	1.06	4.10	2.74	1.15	3.91	2.65	1.23	3.67	2.55	1.34
19.4	26.7	5.18	3.33	0.73	4.79	3.15	0.90	4.40	2.97	1.07	4.20	2.88	1.15	4.00	2.79	1.24	3.77	2.69	1.34
22.0	30.0	5.47	3.19	0.73	5.08	3.02	0.90	4.69	2.86	1.07	4.49	2.78	1.16	4.29	2.71	1.24	4.06	2.62	1.35
24.0	32.0	5.66	3.08	0.74	5.27	2.93	0.91	4.88	2.78	1.08	4.68	2.71	1.16	4.49	2.64	1.25	4.25	2.56	1.35

Temp: Fahrenheit

TC, SHC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
		TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	13.44	9.47	0.66	13.44	9.47	0.86	13.35	9.42	1.05	12.68	9.06	1.14	12.01	8.72	1.22	11.21	8.31	1.33
60.8	71.6	15.34	10.58	0.72	15.34	9.96	0.89	14.01	9.28	1.06	13.34	8.95	1.14	12.67	8.62	1.23	11.87	8.23	1.33
64.4	77.0	16.00	10.96	0.72	16.00	10.30	0.89	14.67	9.66	1.06	14.00	9.35	1.15	13.33	9.05	1.23	12.53	8.69	1.34
67.0	80.0	16.33	11.37	0.73	16.33	10.74	0.90	15.00	10.12	1.07	14.40	9.82	1.15	13.66	9.53	1.24	12.86	9.18	1.34
71.6	86.0	17.32	10.87	0.73	17.32	10.31	0.90	15.99	9.76	1.07	15.32	9.50	1.16	14.65	9.23	1.24	13.85	8.93	1.35
75.2	89.6	17.98	10.51	0.74	17.98	10.00	0.91	16.65	9.50	1.08	15.98	9.25	1.16	15.31	9.01	1.25	14.51	8.73	1.35

## Heating

AFR	12.5
-----	------

Temp: Celsius

TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB	°C	-15		-10		-5		0		6		10		18	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	2.26	0.79	2.71	0.84	3.17	0.88	3.62	0.92	4.90	1.21	5.33	1.25	6.19	1.33	
21.1	2.12	0.82	2.57	0.86	3.03	0.90	3.48	0.94	4.74	1.24	5.17	1.28	6.02	1.36	
22.0	2.06	0.83	2.52	0.87	2.97	0.91	3.43	0.95	4.67	1.25	5.10	1.29	5.96	1.37	
24.0	2.01	0.83	2.46	0.88	2.92	0.92	3.37	0.96	4.61	1.26	5.04	1.30	5.89	1.38	
25.0	1.98	0.84	2.43	0.88	2.89	0.92	3.34	0.96	4.58	1.26	5.00	1.30	5.86	1.38	
27.0	1.92	0.85	2.38	0.89	2.83	0.93	3.29	0.97	4.51	1.27	4.94	1.31	5.80	1.40	

Temp: Fahrenheit

TC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB	°F	5		14		23		32		43		50		64	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	7.70	0.79	9.25	0.84	10.81	0.88	12.36	0.92	16.73	1.21	18.19	1.25	21.11	1.33	
70.0	7.23	0.82	8.78	0.86	10.33	0.90	11.88	0.94	16.20	1.24	17.63	1.28	20.56	1.36	
71.6	7.04	0.83	8.59	0.87	10.14	0.91	11.69	0.95	15.95	1.25	17.41	1.29	20.33	1.37	
75.2	6.85	0.83	8.40	0.88	9.95	0.92	11.50	0.96	15.73	1.26	17.19	1.30	20.11	1.38	
77.0	6.75	0.84	8.31	0.88	9.86	0.92	11.41	0.96	15.61	1.26	17.08	1.30	20.00	1.38	
80.6	6.56	0.85	8.12	0.89	9.67	0.93	11.22	0.97	15.39	1.27	16.85	1.31	19.77	1.40	



**Symbols:**

AFR	: Airflow rate	(m <sup>3</sup> /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

**Notes:**

1. ■ shows nominal (rated) capacities and power input.
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables. (Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.  
Corresponding refrigerant piping length : 25 ft (7.6 m)  
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

C: 3D113026

## FFQ18Q2VJU + RX18RMVJU

60 Hz, 208 V

## Cooling

AFR	12.7
BF	0.08

Temp: Celsius

TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
		°C	°C	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC
14.0	20.0	5.69	4.01	0.85	5.29	3.79	1.07	4.81	3.55	1.27	4.57	3.43	1.38	4.33	3.31	1.48	3.23	2.78	1.37
16.0	22.0	6.00	3.97	0.87	5.52	3.73	1.07	5.04	3.49	1.28	4.80	3.38	1.38	4.56	3.27	1.49	3.45	2.77	1.37
18.0	25.0	6.24	4.11	0.87	5.76	3.88	1.08	5.28	3.67	1.29	5.04	3.56	1.39	4.80	3.45	1.49	3.67	2.98	1.37
19.4	26.7	6.36	4.29	0.88	5.88	4.07	1.08	5.40	3.87	1.29	5.16	3.76	1.39	4.92	3.66	1.49	3.77	3.20	1.37
22.0	30.0	6.72	4.11	0.89	6.24	3.92	1.09	5.76	3.74	1.30	5.52	3.65	1.40	5.28	3.56	1.50	4.10	3.14	1.37
24.0	32.0	6.96	3.99	0.89	6.48	3.81	1.10	5.99	3.64	1.30	5.75	3.56	1.41	5.51	3.48	1.51	4.32	3.09	1.37

Temp: Fahrenheit

TC, SHC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
		°F	°F	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC
57.2	68.0	19.41	13.67	0.85	18.04	12.94	1.07	16.40	12.10	1.27	15.58	11.69	1.38	14.76	11.28	1.48	11.03	9.50	1.37
60.8	71.6	20.49	13.53	0.87	18.85	12.71	1.07	17.21	11.92	1.28	16.39	11.53	1.38	15.57	11.15	1.49	11.77	9.45	1.37
64.4	77.0	21.30	14.01	0.87	19.66	13.25	1.08	18.02	12.51	1.29	17.20	12.14	1.39	16.38	11.79	1.49	12.51	10.17	1.37
67.0	80.0	21.70	14.64	0.88	20.07	13.90	1.08	18.43	13.19	1.29	17.40	12.84	1.39	16.79	12.50	1.49	12.88	10.92	1.37
71.6	86.0	22.92	14.03	0.89	21.28	13.38	1.09	19.64	12.75	1.30	18.82	12.44	1.40	18.00	12.14	1.50	13.99	10.70	1.37
75.2	89.6	23.73	13.60	0.89	22.09	13.01	1.10	20.45	12.43	1.30	19.63	12.15	1.41	18.81	11.87	1.51	14.73	10.54	1.37

## Heating

AFR	14.1
-----	------

Temp: Celsius

TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB	°C	-15		-10		-5		0		6		10		18	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	3.00	1.21	3.60	1.27	4.21	1.33	4.81	1.39	6.52	1.83	7.09	1.89	8.06	1.96	
21.1	2.82	1.24	3.42	1.30	4.02	1.36	4.63	1.43	6.30	1.88	6.87	1.94	7.74	1.96	
22.0	2.74	1.25	3.35	1.32	3.95	1.38	4.56	1.44	6.21	1.89	6.78	1.95	7.62	1.96	
24.0	2.67	1.27	3.27	1.33	3.88	1.39	4.48	1.45	6.13	1.91	6.70	1.97	7.50	1.96	
25.0	2.63	1.27	3.24	1.34	3.84	1.40	4.44	1.46	6.08	1.92	6.65	1.98	7.44	1.96	
27.0	2.56	1.29	3.16	1.35	3.77	1.41	4.37	1.47	6.00	1.93	6.56	2.00	7.32	1.96	

Temp: Fahrenheit

TC: kBtu/h

PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB	°F	5		14		23		32		43		50		64	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	10.24	1.21	12.30	1.27	14.36	1.33	16.43	1.39	22.24	1.83	24.18	1.89	27.49	1.96	
70.0	9.61	1.24	11.67	1.30	13.73	1.36	15.80	1.43	21.60	1.88	23.44	1.94	26.41	1.96	
71.6	9.35	1.25	11.42	1.32	13.48	1.38	15.54	1.44	21.20	1.89	23.14	1.95	25.99	1.96	
75.2	9.10	1.27	11.16	1.33	13.23	1.39	15.29	1.45	20.90	1.91	22.84	1.97	25.57	1.96	
77.0	8.98	1.27	11.04	1.34	13.10	1.40	15.16	1.46	20.75	1.92	22.70	1.98	25.37	1.96	
80.6	8.72	1.29	10.79	1.35	12.85	1.41	14.91	1.47	20.46	1.93	22.40	2.00	24.97	1.96	

60 Hz, 230 V

Cooling

AFR	12.7
BF	0.08

Temp: Celsius  
TC, SHC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CDB)																	
EWB	EDB	10			20			30			35			40			46		
		TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
14.0	20.0	5.69	4.01	0.85	5.29	3.79	1.07	4.81	3.55	1.27	4.57	3.43	1.38	4.33	3.31	1.48	3.73	3.02	1.51
16.0	22.0	6.00	3.97	0.87	5.52	3.73	1.07	5.04	3.49	1.28	4.80	3.38	1.38	4.56	3.27	1.49	3.95	2.99	1.51
18.0	25.0	6.24	4.11	0.87	5.76	3.88	1.08	5.28	3.67	1.29	5.04	3.56	1.39	4.80	3.45	1.49	4.16	3.18	1.51
19.4	26.7	6.36	4.29	0.88	5.88	4.07	1.08	5.40	3.87	1.29	5.16	3.76	1.39	4.92	3.66	1.49	4.27	3.40	1.51
22.0	30.0	6.72	4.11	0.89	6.24	3.92	1.09	5.76	3.74	1.30	5.52	3.65	1.40	5.28	3.56	1.50	4.60	3.31	1.51
24.0	32.0	6.96	3.99	0.89	6.48	3.81	1.10	5.99	3.64	1.30	5.75	3.56	1.41	5.51	3.48	1.51	4.81	3.25	1.51

Temp: Fahrenheit  
TC, SHC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FDB)																	
EWB	EDB	50			68			86			95			104			115		
		TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
57.2	68.0	19.41	13.67	0.85	18.04	12.94	1.07	16.40	12.10	1.27	15.58	11.69	1.38	14.76	11.28	1.48	12.73	10.29	1.51
60.8	71.6	20.49	13.53	0.87	18.85	12.71	1.07	17.21	11.92	1.28	16.39	11.53	1.38	15.57	11.15	1.49	13.46	10.20	1.51
64.4	77.0	21.30	14.01	0.87	19.66	13.25	1.08	18.02	12.51	1.29	17.20	12.14	1.39	16.38	11.79	1.49	14.20	10.86	1.51
67.0	80.0	21.70	14.64	0.88	20.07	13.90	1.08	18.43	13.19	1.29	17.40	12.84	1.39	16.79	12.50	1.49	14.57	11.59	1.51
71.6	86.0	22.92	14.03	0.89	21.28	13.38	1.09	19.64	12.75	1.30	18.82	12.44	1.40	18.00	12.14	1.50	15.68	11.30	1.51
75.2	89.6	23.73	13.60	0.89	22.09	13.01	1.10	20.45	12.43	1.30	19.63	12.15	1.41	18.81	11.87	1.51	16.42	11.08	1.51

Heating

AFR	14.1
-----	------

Temp: Celsius  
TC, PI: kW

INDOOR		OUTDOOR TEMPERATURE (°CWB)													
EDB	°C	-15		-10		-5		0		6		10		18	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
15.0	3.00	1.21	3.60	1.27	4.21	1.33	4.81	1.39	6.52	1.83	7.09	1.89	8.22	2.02	
21.1	2.82	1.24	3.42	1.30	4.02	1.36	4.63	1.43	6.30	1.88	6.87	1.94	8.01	2.06	
22.0	2.74	1.25	3.35	1.32	3.95	1.38	4.56	1.44	6.21	1.89	6.78	1.95	7.92	2.08	
24.0	2.67	1.27	3.27	1.33	3.88	1.39	4.48	1.45	6.13	1.91	6.70	1.97	7.83	2.09	
25.0	2.63	1.27	3.24	1.34	3.84	1.40	4.44	1.46	6.08	1.92	6.65	1.98	7.79	2.10	
27.0	2.56	1.29	3.16	1.35	3.77	1.41	4.37	1.47	6.00	1.93	6.56	2.00	7.54	2.09	

Temp: Fahrenheit  
TC: kBtu/h  
PI: kW

INDOOR		OUTDOOR TEMPERATURE (°FWB)													
EDB	°F	5		14		23		32		43		50		64	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
59.0	10.24	1.21	12.30	1.27	14.36	1.33	16.43	1.39	22.24	1.83	24.18	1.89	28.06	2.02	
70.0	9.61	1.24	11.67	1.30	13.73	1.36	15.80	1.43	21.60	1.88	23.44	1.94	27.32	2.06	
71.6	9.35	1.25	11.42	1.32	13.48	1.38	15.54	1.44	21.20	1.89	23.14	1.95	27.02	2.08	
75.2	9.10	1.27	11.16	1.33	13.23	1.39	15.29	1.45	20.90	1.91	22.84	1.97	26.73	2.09	
77.0	8.98	1.27	11.04	1.34	13.10	1.40	15.16	1.46	20.75	1.92	22.70	1.98	26.58	2.10	
80.6	8.72	1.29	10.79	1.35	12.85	1.41	14.91	1.47	20.46	1.93	22.40	2.00	25.71	2.09	

**Symbols:**

AFR	: Airflow rate	(m <sup>3</sup> /min.)
BF	: Bypass factor	
EWB	: Entering wet bulb temp.	(°C) / (°F)
EDB	: Entering dry bulb temp.	(°C) / (°F)
TC	: Total capacity	(kW) / (kBtu/h)
SHC	: Sensible heat capacity	(kW) / (kBtu/h)
PI	: Power input	(kW)

**Notes:**

1. ■ shows nominal (rated) capacities and power input.
2. TC, PI and SHC must be calculated by interpolation using the figures in the above tables. (Figures out of the tables should not be used for calculation.)
3. Capacities are based on the following conditions.  
Corresponding refrigerant piping length : 25 ft (7.6 m)  
Level difference : 0 ft (0 m)
4. Airflow rate (AFR) and Bypass factor (BF) are tabulated above table.

C: 3D113027


### 7.1 Capacity Correction Factor by the Length of Refrigerant Piping (Reference)

The cooling capacity and the heating capacity of the unit have to be corrected in accordance with the length of refrigerant piping — the distance between the indoor unit and the outdoor unit.


<— line : cooling capacity>

<--- line : heating capacity>

#### 7.1.1 09/12 Class

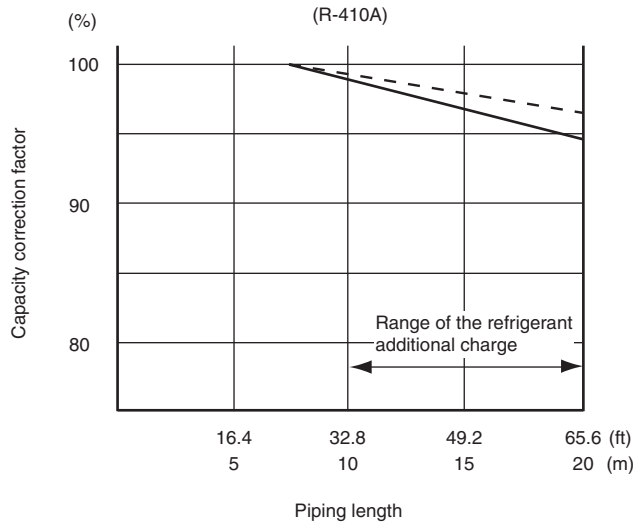



#### 7.1.2 15/18 Class

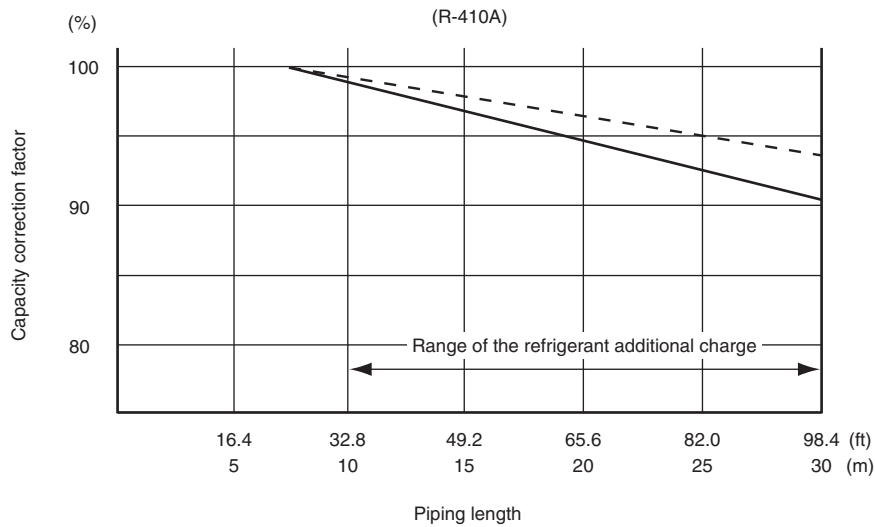

**Note:** The graphs show the factor when additional refrigerant of the proper quantity is charged.

# 8. Operation Limit

RX09/12/15/18RMVJU

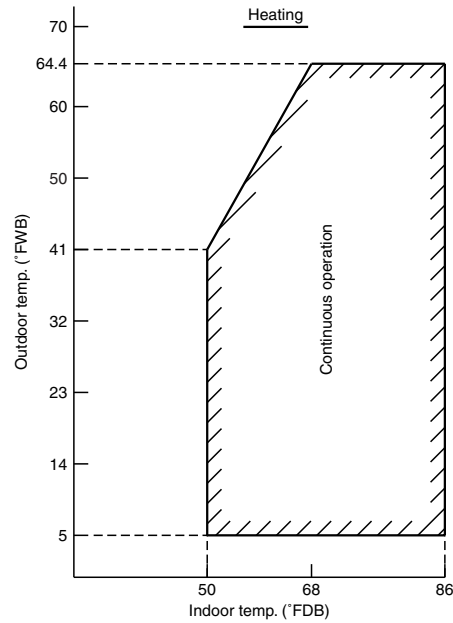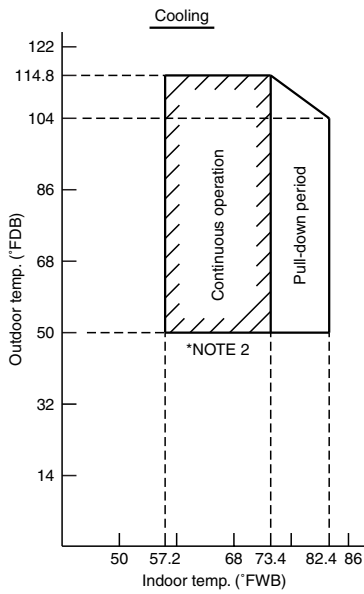

Notes


- The graphs are based on the following conditions.
  - Equivalent piping length 25ft
  - Level difference 0ft

- Facility Setting (cooling at low outdoor temperature: only for RX model)
  - This function is limited only for facilities (the target of air conditioning is equipment such as computer). Never use it in a residence or office (the space where there is a human).
  - Indoor fan tap should be fixed to high.
  - Cutting jumper 6 (J6) on the circuit board : extend the operation range to 14°F (-10°C).
  - Installing an air direction adjustment grille (wind baffle) (sold separately) : extend the operation range to -4°F (-20°C).

3D092209D


## 9. Sound Level

### 9.1 Measuring Location

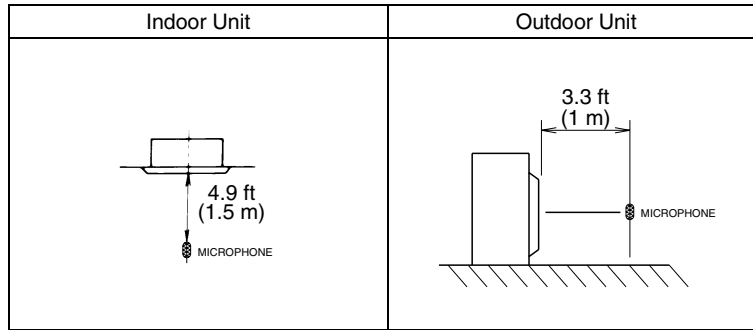

- Notes:**
1. Operation sound is measured in an anechoic chamber.
  2. The operation sound measuring method is based on JIS standard.

## 9.2 Indoor Unit FFQ09Q2VJU

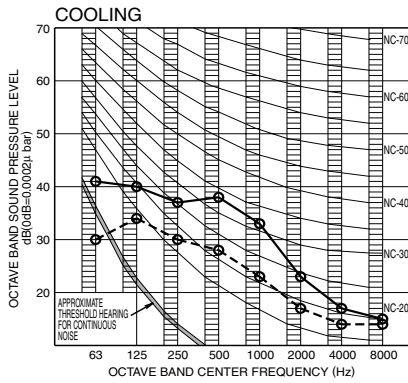


OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	38	29

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Cooling

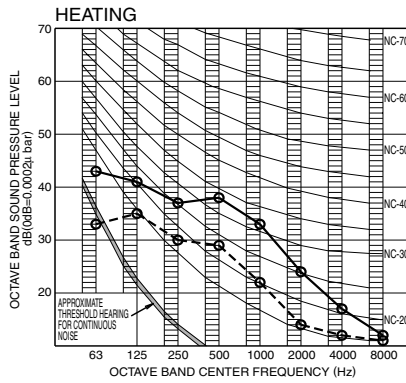

OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	38	29


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Heating

3D106125A

## FFQ12Q2VJU

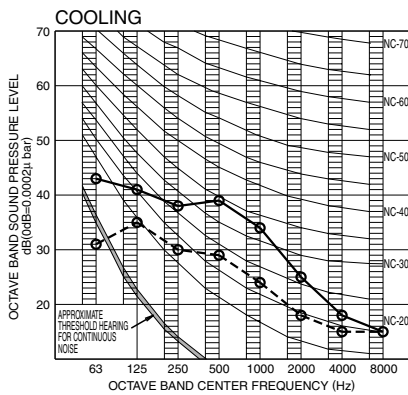


OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	39	30

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Cooling

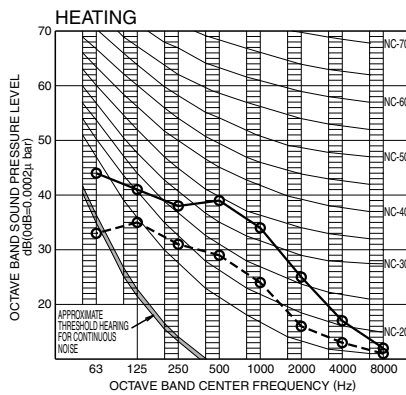

OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	39	30


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Heating

3D106126A

## FFQ15Q2VJU

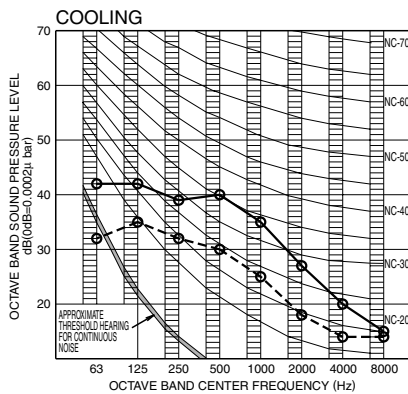


OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	40	31

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Cooling

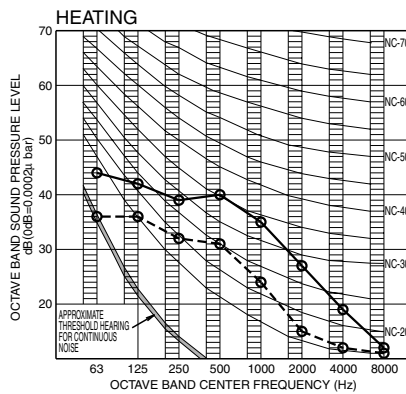

OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	40	31


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Heating

3D106127A

## FFQ18Q2VJU

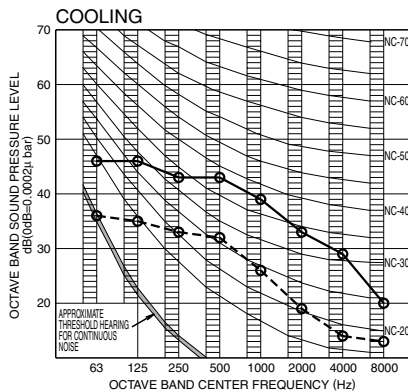


OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	44	32

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Cooling

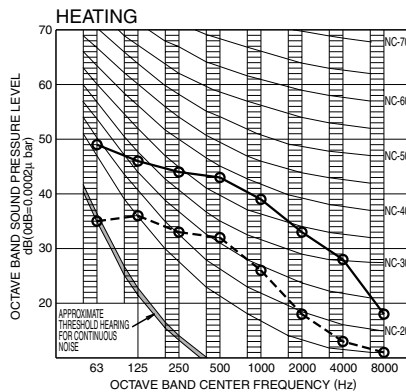

OVER ALL (dB)		
SCALE	60Hz 208/230V (H)	60Hz 208/230V (L)
A	44	32

( B.G.N IS ALREADY RECTIFIED )


OPERATING CONDITIONS  
POWER SOURCE 208/230V 60Hz

JIS STANDARD  
STANDARD EXTERNAL STATIC PRESSURE  
60Hz 208/230V (H)  
60Hz 208/230V (L)  
Heating

3D108254



### 9.3 Outdoor Unit RX09RMVJU

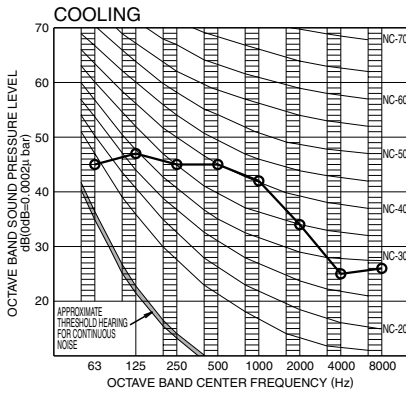

OVER ALL (dB)

SCALE	208-230V 60Hz
A	46


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS

POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Cooling

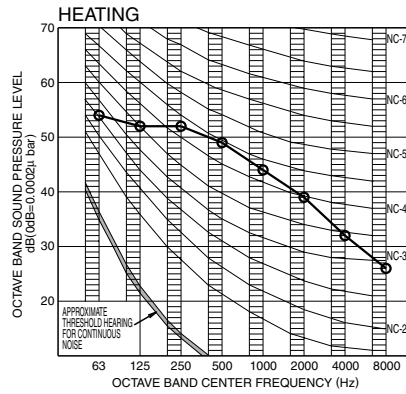

OVER ALL (dB)

SCALE	208-230V 60Hz
A	50

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS


POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Heating

3D106145A

### RX12RMVJU

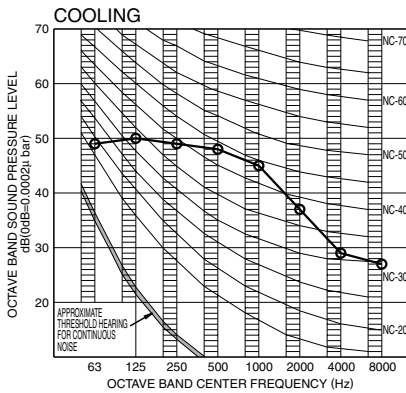

OVER ALL (dB)

SCALE	208-230V 60Hz
A	49


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS

POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Cooling

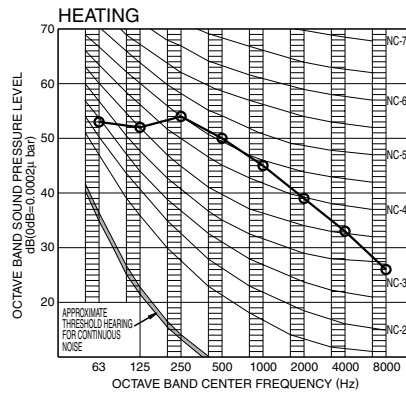

OVER ALL (dB)

SCALE	208-230V 60Hz
A	51

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS


POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Heating

3D106146A

### RX15RMVJU

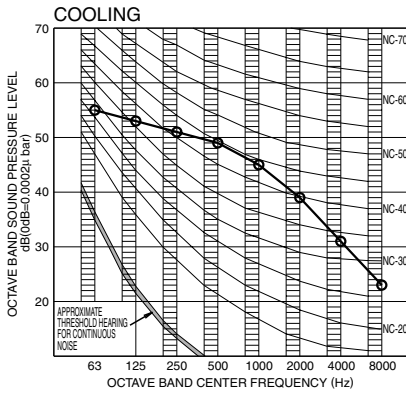

OVER ALL (dB)

SCALE	208-230V 60Hz
A	50


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS

POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Cooling

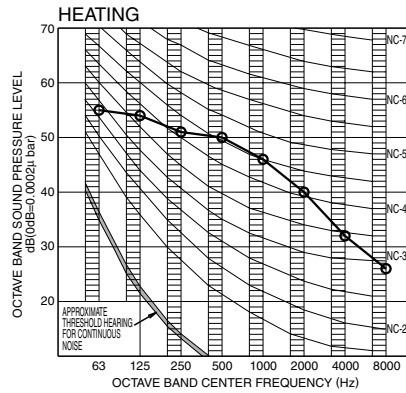

OVER ALL (dB)

SCALE	208-230V 60Hz
A	51

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS


POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Heating

3D106147A

### RX18RMVJU

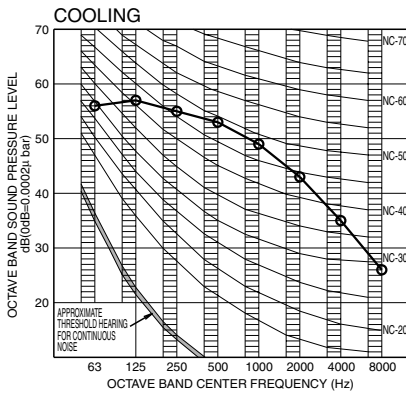

OVER ALL (dB)

SCALE	208-230V 60Hz
A	54


( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS

POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Cooling

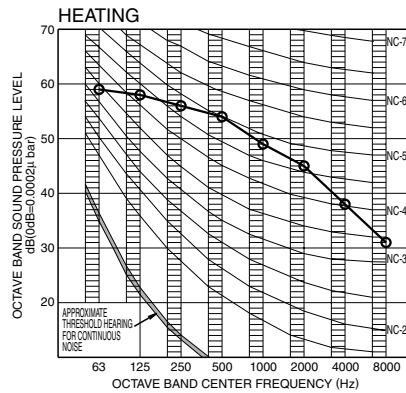

OVER ALL (dB)

SCALE	208-230V 60Hz
A	55

( B.G.N IS ALREADY RECTIFIED )

OPERATING CONDITIONS

POWER SOURCE 208-230V 60Hz

JIS STANDARD

○—○  
Heating

3D108255A

## 10. Electric Characteristics

Unit Combination		Power Supply				Compressor	OFM		IFM	
Indoor Unit	Outdoor Unit	Hz - Volts	Voltage Range	MCA	MFA	RLA	W	FLA	W	FLA
FFQ09Q2VJU	RX09RMVJU	60 - 208	Max. 253 V Min. 187 V	9.0	15	7.5	39	0.13	50	0.28
		60 - 230								
FFQ12Q2VJU	RX12RMVJU	60 - 208	Max. 253 V Min. 187 V	9.1	15	7.5	39	0.13	50	0.28
		60 - 230								
FFQ15Q2VJU	RX15RMVJU	60 - 208	Max. 253 V Min. 187 V	9.7	15	8.0	91	0.31	50	0.28
		60 - 230								
FFQ18Q2VJU	RX18RMVJU	60 - 208	Max. 253 V Min. 187 V	12.8	15	10.75	110	0.38	50	0.28
		60 - 230								

### Symbols:

MCA	: Min. circuit amps (A)
MFA	: Max. fuse amps (A)
RLA	: Rated load amps (A)
OFM	: Outdoor fan motor
IFM	: Indoor fan motor
W	: Fan motor rated output (W)
FLA	: Full load amps (A)

### Notes:

1. RLA is the max current that comes in cooling operation and heating operation.
2. Maximum allowable voltage variation between phases is 2%.
3. Select wire size based on the larger value of MCA.
4. Be sure to install a ground leak detector.  
(This unit uses an inverter, which means that a ground leak detector capable of handling high harmonics must be used in order to prevent malfunctioning of the ground leak detector.)

C: 3D112975

# 11. Installation Manual

## 11.1 Indoor Unit

### Contents

<b>Safety Considerations</b> .....	<b>1</b>	<b>Refrigerant Piping Work</b> .....	<b>14</b>
<b>Before Installation</b> .....	<b>3</b>	1. Flaring the pipe end.....	14
<b>Accessories</b> .....	<b>3</b>	2. Refrigerant piping .....	14
<b>Choosing an Installation Site</b> .....	<b>4</b>	<b>Installation of the Decoration Panel</b> .....	<b>16</b>
<b>Indoor Unit Installation</b> .....	<b>6</b>	<b>Field Settings</b> .....	<b>16</b>
1. Relation of ceiling opening to unit and suspension bolt position .....	6	1. Setting air outlet direction.....	16
2. Make the ceiling opening needed for installation where applicable (For existing ceilings).....	7	2. Setting for options.....	16
3. Installing the suspension bolts .....	7	3. Setting air filter sign.....	16
4. Installing the indoor unit .....	7	4. When implementing group control.....	17
5. Drain piping work.....	8	5. 2 remote controllers (controlling 1 indoor unit by 2 remote controllers).....	17
6. Wiring .....	11	<b>Trial Operation and Testing</b> .....	<b>17</b>
		1. Trial operation and testing .....	17
		2. Test items .....	19
		3. How to diagnose for malfunction .....	20





## Safety Considerations

Read these **Safety Considerations for Installation** carefully before installing an air conditioner or heat pump. After completing the installation, make sure that the unit operates properly during the startup operation.

Instruct the user on how to operate and maintain the unit. Inform users that they should store this installation manual with the operation manual for future reference.

Always use a licensed installer or contractor to install this product. Improper installation can result in water or refrigerant leakage, electric shock, fire, or explosion.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

-  **DANGER** ..... Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** ..... Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** ..... Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** ..... Indicates situations that may result in equipment or property-damage accidents only.

### **DANGER** \_\_\_\_\_

- Refrigerant gas is heavier than air and replaces oxygen. A massive leak can lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death. Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.

- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerant gas may produce toxic gas if it comes into contact with fire. Exposure to this gas could cause severe injury or death.
- After completing the installation work, check that the refrigerant gas does not leak throughout the system.
- Do not install unit in an area where flammable materials are present due to risk of explosions that can cause serious injury or death.
- Safely dispose all packing and transportation materials in accordance with federal/state/local laws or ordinances. Packing materials such as nails and other metal or wood parts, including plastic packing materials used for transportation may cause injuries or death by suffocation.

### **WARNING** \_\_\_\_\_

- Only qualified personnel must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in water leakage, electric shock, or fire.
- When installing the unit in a small room, take measures to keep the refrigerant concentration from exceeding allowable safety limits. Excessive refrigerant leaks, in the event of an accident in a closed ambient space, can lead to oxygen deficiency.
- Use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shock, fire, or the unit falling.
- Install the air conditioner or heat pump on a foundation strong enough that it can withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injuries.
- Take into account strong winds, typhoons, or earthquakes when installing. Improper installation may result in the unit falling and causing accidents.

- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local, state, and national regulations. An insufficient power supply capacity or improper electrical construction may lead to electric shock or fire.
  - Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
  - When wiring, position the wires so that the electrical wiring box cover can be securely fastened. Improper positioning of the electrical wiring box cover may result in electric shock, fire, or the terminals overheating.
  - Before touching electrical parts, turn off the unit.
  - The circuit must be protected with safety devices in accordance with local and national codes, i.e. a fuse, a circuit breaker, a disconnect or a GFCI.
  - Securely fasten the outdoor unit terminal cover (panel). If the terminal cover/panel is not installed properly, dust or water may enter the outdoor unit causing fire or electric shock.
  - When installing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R410A) such as air. Any presence of air or other foreign substance in the refrigerant circuit can cause an abnormal pressure rise or rupture, resulting in injury.
  - Do not change the setting of the protection devices. If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may occur.
- (b) Tight -- R410A does not contain any chlorine, does not destroy the ozone layer, and does not reduce the earth's protection against harmful ultraviolet radiation. R410A can contribute to the greenhouse effect if it is released. Therefore take proper measures to check for the tightness of the refrigerant piping installation. Read the chapter *Refrigerant Piping Work* and follow the procedures.
- Since R410A is a blend, the required additional refrigerant must be charged in its liquid state. If the refrigerant is charged in a state of gas, its composition can change and the system will not work properly.
  - The indoor unit is for R410A. See the catalog for indoor models that can be connected. Normal operation is not possible when connected to other units.
  - Remote controller (wireless kit) transmitting distance can be shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types). Install the indoor unit far away from fluorescent lamps as much as possible.
  - Indoor units are for indoor installation only. Outdoor units can be installed either outdoors or indoors. This unit is for indoor use.
  - Do not install the air conditioner or heat pump in the following locations:
    - (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen. Plastic parts may deteriorate and fall off or result in water leakage.
    - (b) Where corrosive gas, such as sulfurous acid gas, is produced. Corroding copper pipes or soldered parts may result in refrigerant leakage.
    - (c) Near machinery emitting electromagnetic waves. Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
    - (d) Where flammable gas may leak, where there is carbon fiber, or ignitable dust suspension in the air, or where volatile flammables such as thinner or gasoline are handled. Operating the unit in such conditions can cause a fire.
  - Take adequate measures to prevent the outdoor unit from being used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke, or fire. Instruct the user to keep the area around the unit clean.

### CAUTION

- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- The heat exchanger fins are sharp enough to cut. To avoid injury wear gloves or cover the fins while working around them.
- Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor, and other refrigerant cycle parts. Your hands may suffer burns or frostbite if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear proper gloves.
- Install drain piping to proper drainage. Improper drain piping may result in water leakage and property damage.
- Insulate piping to prevent condensation.
- Be careful when transporting the product.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- Do not use a charging cylinder. Using a charging cylinder may cause the refrigerant to deteriorate.
- Refrigerant R410A in the system must be kept clean, dry, and tight.
  - (a) Clean and Dry -- Foreign materials (including mineral oils such as SUNISO oil or moisture) should be prevented from getting into the system.

### NOTE

- The indoor unit should be positioned where the unit and inter-unit wires (outdoor to indoor) are at least 3.3ft (1m) away from any televisions or radios. (The unit may cause interference with the picture or sound.) Depending on the radio waves, a distance of 3.3ft (1m) may not be sufficient to eliminate the noise.
- Dismantling the unit, treatment of the refrigerant, oil and additional parts must be done in accordance with the relevant local, state, and national regulations.
- Do not use the following tools that are used with conventional refrigerants: gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, or refrigerant recovery equipment.
- If the conventional refrigerant and refrigerator oil are mixed in R410A, the refrigerant may deteriorate.
- This air conditioner or heat pump is an appliance that should not be accessible to the general public.
- As design pressure is 604 psi, the wall thickness of field-installed pipes should be selected in accordance with the relevant local, state, and national regulations.











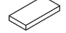





# Before Installation

- Leave the unit inside its packaging until you reach the installation site. Where unpacking is unavoidable, use a sling of soft material or protective plates together with a rope when lifting, this to avoid damage or scratches to the unit. When unpacking the unit or when moving the unit after unpacking, be sure to lift the unit by holding on to the hanger bracket without exerting any pressure on other parts, especially on refrigerant piping, drain piping and other resin parts.
- Refer to the installation manual of the outdoor unit for items not described in this manual.
- Caution concerning refrigerant series R410A:  
The connectable outdoor units must be designed exclusively for R410A.

## Precautions

- Do not install or operate the unit in places mentioned below.
  - Places with mineral oil, or filled with oil vapor or spray like in kitchens. (Plastic parts may deteriorate.)
  - Where corrosive gas like sulphurous gas exists. (Copper tubing and brazed spots may corrode.)
  - Where volatile flammable gas like thinner or gasoline is used.
  - Where machines generating electromagnetic waves exist. (Control system may malfunction.)
  - Where the air contains high levels of salt such as near the ocean and where voltage fluctuates a lot (e.g. in factories). Also inside vehicles or vessels.
- When selecting the installation site, use the supplied template for installation.
- Do not install accessories on the casing directly. Drilling holes in the casing may damage electrical wires and consequently cause fire.
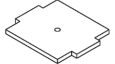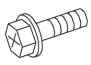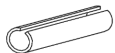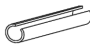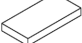
# Accessories
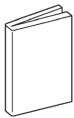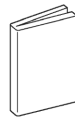
<p>(A) Drain hose</p>  <p>1</p>	<p>(B) Clamp metal</p>  <p>1</p>	<p>(C) Washer for hanger bracket</p>  <p>8</p>	<p>(D) Clamp</p>  <p>7</p>
<p>(E) Template (cut out from upper part of packing)</p>  <p>1</p>	<p>(F) Screws (M5) (for template)</p>  <p>4</p>	<p>(G) Fitting insulation (for gas pipe)</p>  <p>1</p>	<p>(H) Fitting insulation (for liquid pipe)</p>  <p>1</p>
<p>(J) Sealing pad (large)</p>  <p>1</p>	<p>(K) Sealing pad (medium A)</p>  <p>1</p>	<p>(L) Sealing pad (medium B)</p>  <p>1</p>	<p>(M) Sealing pad (small)</p>  <p>1</p>
<p>(N) Washer for conduit</p>  <p>1</p>	<p>(P) Operation manual</p>  <p>1</p>	<p>(Q) Installation manual</p>  <p>1</p>	<p>(R) Warranty</p>  <p>1</p>

**Optional Accessories**

- The optional decoration panel and remote controller are required for this indoor unit.

Table 1

Optional decoration panel		
Type A	BYFQ60B3W1	Color: White
Type B	BYFQ60C2W1W	Color: White
Type B	BYFQ60C2W1S	Color: Silver

- There are 2 types of remote controllers: wired and wireless. Select a remote controller from Table 2 according to customer request and install in an appropriate place.

Table 2

Remote controller type	Heat Pump type
Wired type	BRC1E73
Wireless type	BRC082A41W / BRC082A42W / BRC082A42S

- If you wish to use a remote controller that is not listed in Table 2, select a suitable remote controller after consulting catalogs and technical materials.

# Choosing an Installation Site

Hold the unit by the 4 hanger brackets when opening the box and moving it, and do not exert pressure on to any other part, piping (refrigerant, drain, etc.), or plastic parts.

If the temperature or humidity inside the ceiling might rise above 86°F (30°C) or RH 80%, respectively, add extra insulation to the unit.

Use polyethylene foam as insulation and make sure it is at least 3/8 inch (10mm) thick and fits inside the ceiling opening.

**Select the air flow directions best suited to the room and point of installation.**


**For air discharge in 3 directions, it is necessary to make field settings by means of the remote controller and to close the air outlet (s).**

**Refer to the installation manual of the blocking pad kit (sold separately) and to “Field Settings” on page 16.**

- Before choosing the installation site, obtain user approval. The indoor unit should be positioned in a place where:
  - 1) both the air inlet and air outlet are unobstructed,
  - 2) the unit is not exposed to direct sunlight,
  - 3) the unit is away from the source of heat or steam,
  - 4) there is no source of machine oil vapor (this may shorten the indoor unit service life),
  - 5) cool/warm air is circulated throughout the room,
  - 6) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may affect the remote controller range,
  - 7) no laundry equipment is nearby,
  - 8) drainage can be performed without any problem,
  - 9) the weight of the indoor unit can be adequately supported,
  - 10) the wall is not significantly tilted,
  - 11) room can be left for installation and service work,
  - 12) there is no risk of flammable gas leaking,
  - 13) the required length of indoor-outdoor piping would not exceed the specified maximum length (see the installation manual that came with the outdoor unit for details).

# Choosing an Installation Site

Installation Space Requirements

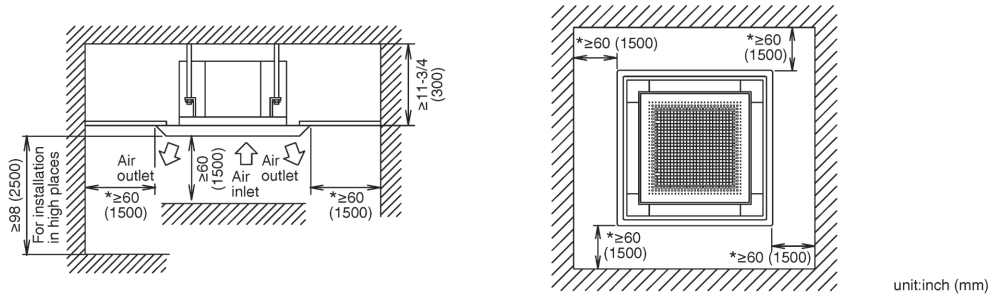


- Leave 8 inch (200mm) or more space where marked with the \*, on sides where the air outlet is closed.

## Air flow direction

- The air direction shown is an example.
- Select the appropriate number of directions according to the shape of the room and the location of the unit. (Field settings have to be made using the remote controller and the outlet vents have to be shut off if 2 or 3 directions are selected. See the blocking pad kit (sold separately) installation manual for details.)

Air flow direction (Example)

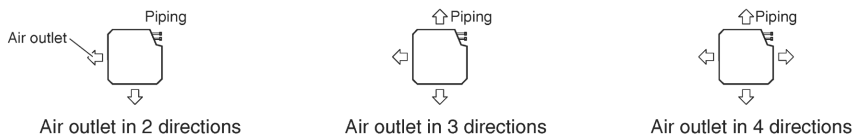

**Use suspension bolts for installation. Check whether the ceiling is strong enough to support the weight of the unit or not. If there is a risk, reinforce the ceiling before installing the unit.**


(Installation pitch is marked on the template. Refer to it to check for points requiring reinforcing.)

# Indoor Unit Installation

## 1. Relation of ceiling opening to unit and suspension bolt position


For decoration panel type A

Top view

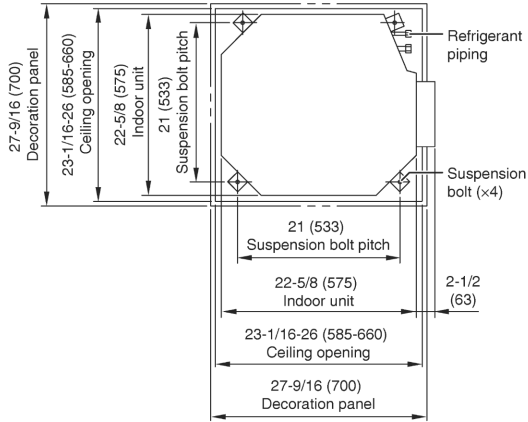


For decoration panel type B


Top view

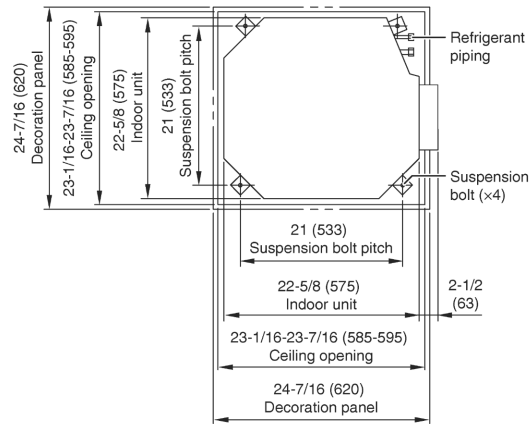

Side view

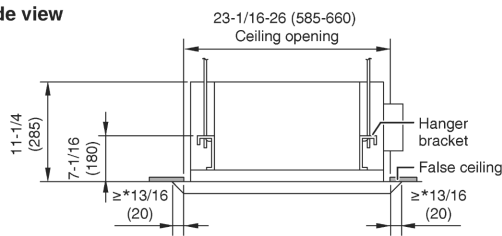


Side view

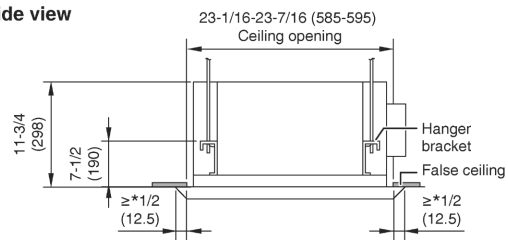

unit: inch (mm)

### NOTE

- If the panel does not extend over the ceiling by this amount, supplement with extra ceiling material or restore the ceiling.
- Install the inspection opening on the electrical wiring box side where maintenance and inspection of the electrical wiring box and drain pump are easy.

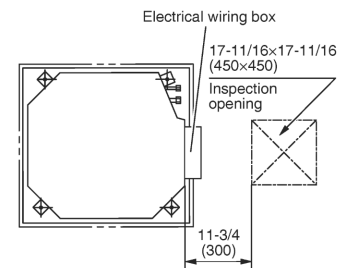



# Indoor Unit Installation

## 2. Make the ceiling opening needed for installation where applicable (For existing ceilings)


- Refer to the (E) template for ceiling opening dimensions.
- Create the ceiling opening required for installation. From the side of the opening to the casing outlet, implement the refrigerant and drain piping and wiring for remote controller (unnecessary for wireless type) and wiring between units. Refer to each Drain piping work or Wiring section.
- After making an opening in the ceiling, it may be necessary to reinforce ceiling beams to keep the ceiling level and to prevent it from vibrating. Consult the builder for details.

## 3. Installing the suspension bolts

(Use either a M8-M10 size bolt or the equivalent)

Use a hole-in anchor for existing ceilings, and a sunken insert, sunken anchor or other field supplied parts for new ceilings to reinforce the ceiling to bear the weight of the unit. Adjust clearance (2-4 inch (50-100mm)) from the ceiling before proceeding further.

- All the above parts are field supplied.

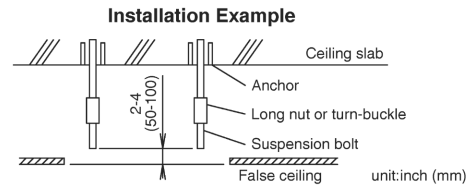


## 4. Installing the indoor unit

**When installing optional accessories (except for the decoration panel), read also the installation manual of the optional accessories. Depending on the field conditions, it may be easier to install optional accessories before the indoor unit is installed. However, for existing ceilings, always install fresh air intake kit before installing the unit.**


As for the parts to be used for installation work, be sure to use the provided accessories and specified parts designated by Daikin.

### For new ceilings

- 1) Install the indoor unit temporarily.
  - Attach the hanger bracket to the suspension bolt. Be sure to fix it securely by using a nut and (C) washer from the upper and lower sides of the hanger bracket.

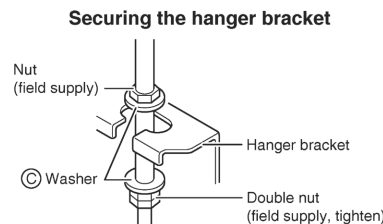

- 2) Refer to the (E) template for ceiling opening dimension. Consult the builder or carpenter for details.
  - The center of the ceiling opening is indicated on the (E) template. This indication also indicates the center of the unit.
  - The (E) template can be rotated by 90° to be able to indicate the correct dimensions on all 4 sides.
  - After cutting the template from the packaging, attach the (E) template to the unit with (F) screws (x4) as shown in figure.
  - Ceiling height is shown on the side of the (E) template. Adjust the height of the unit according to this indication.

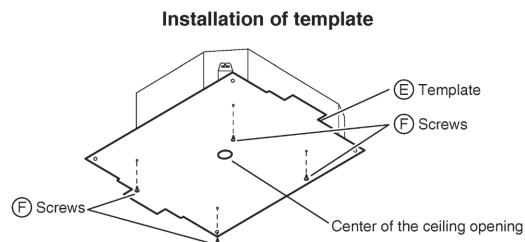

### Ceiling work


- 3) Adjust the unit to the right position for installation. (Refer to 1. Relation of ceiling opening to unit and suspension bolt position.)

**⚠ CAUTION**

If the unit is tilted against condensate flow, the float switch may malfunction and cause water to drip.

- 4) Check the unit is horizontally level.
  - The indoor unit is equipped with a built-in drain pump and float switch. Verify that it is level by using a water level or a water-filled vinyl tube.
- 5) Remove the (E) template.


**Maintaining horizontality**

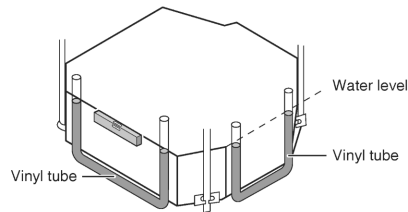

**For existing ceilings**

- 1) Install the indoor unit temporarily.
  - Attach the hanger bracket to the suspension bolt. Be sure to fix it securely by using a nut and (C) washer from the upper and lower sides of hanger bracket.

**Securing the hanger bracket**

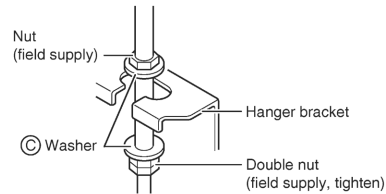

- 2) Adjust the height and position of the unit.  
(Refer to 1. Relation of ceiling opening to unit and suspension bolt position.)
- 3) Perform steps 4) in **For new ceilings**.


**5. Drain piping work**

**⚠ CAUTION**

- Water pooling in the drainage piping can cause the drain to clog.
- **Do not connect the drain piping directly to sewage pipes that smell of ammonia. The ammonia in the sewage might enter the indoor unit through the drain pipes and corrode the heat exchanger.**
- **Keep in mind that the drain pipe becomes blocked if water collects on it.**


**1. Install of drain piping**

- Install the drain piping as shown in the figure and take measures against condensation. Improperly rigged piping could lead to leaks and eventually wet furniture and belongings.
- Keep piping as short as possible and slope it downwards at a gradient of at least 1/100 so that air may not remain trapped inside the pipe.
- Keep pipe size equal to or greater than that of the connecting pipe (vinyl pipe of nominal diameter 13/16 inch (20mm) and outer diameter 1 inch (26mm)).
- Push the supplied drain hose as far as possible over the drain socket.
- If the drain hose cannot be sufficiently set on a slope, refer to “Precautions for drain raising piping”.
- To keep the drain hose from sagging, space hanger bracket every 40-60 inch (1000-1500mm).

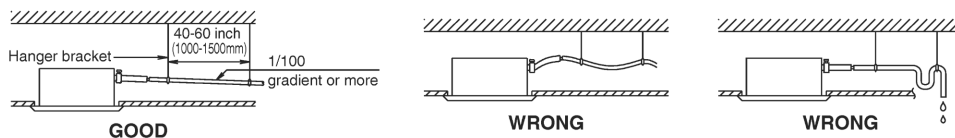



# Indoor Unit Installation

- Tighten the (B) clamp metal as indicated in the illustration.
- After the testing of drain piping is finished, attach the drain (J) sealing pad (large) supplied with the unit over the uncovered part of the drain socket (= between drain hose and unit body).
- Wrap the supplied large sealing pad over the (B) clamp metal and (A) drain hose to insulate and fix it with clamps.
- Insulate the complete drain piping inside the building (field supply).
- If the drain hose cannot be sufficiently set on a slope, fit the hose with drain raising piping (field supply).

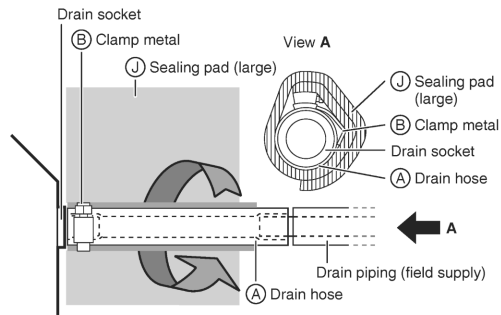


## Precautions for drain raising piping

- Install the drain raising pipes at a height of less than H2.
- Install the drain raising pipes at a right angle to the indoor unit and no more than 11-3/4 inch (300mm) from the unit.

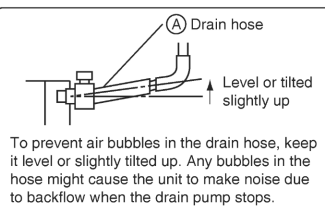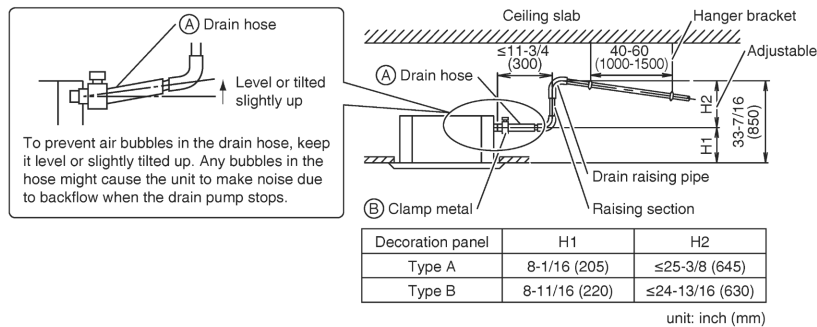


- To ensure no excessive pressure is applied to the included (A) drain hose, do not bend or twist the hose when installing as it could cause leakage.
- If converging multiple drain pipes, install according to the procedure shown below.

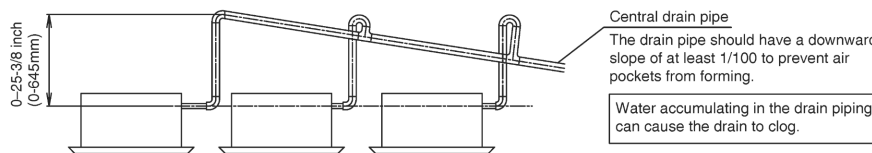

Select converging drain pipes with gauges is suitable for the operating capacity of the unit.

**2. After piping work is finished, check if drainage flows smoothly**

- Add approximately 1/4 gal of water slowly from the air outlet and check drainage flow.

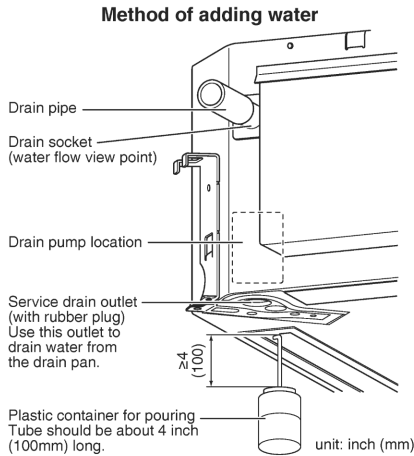

**When electric wiring work is finished**



- Check drainage flow during COOL operation, explained in “Trial operation and testing” on page 17.

**When electric wiring work is not finished**

**⚠ CAUTION**

Electrical wiring work should be done by a certified electrician.

- If someone who does not have the proper qualifications performs the work, perform the following actions after the trial operation is complete.
  - 1) Remove the electrical wiring box cover (2 screws). Connect the single phase power supply (SINGLE PHASE 60 Hz 208/230V) to connections No.1 and No.2 on the terminal block for power supply. Do not connect to No.3 of the terminal block for power supply or the drain pump will not operate. When carrying out wiring work around the electrical wiring box, make sure none of the connectors come undone. Be sure to attach the electrical wiring box cover before turning on the power.
  - 2) After confirming drainage, turn off the power supply and remove the power supply wiring.
  - 3) Attach the electrical wiring box cover as before.

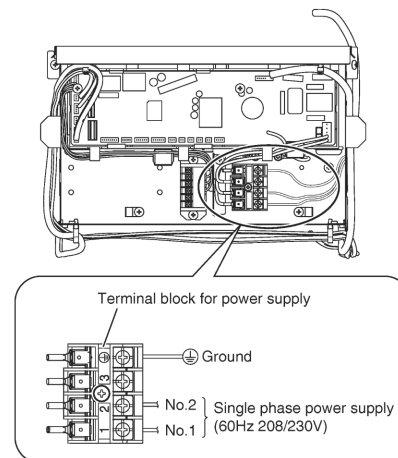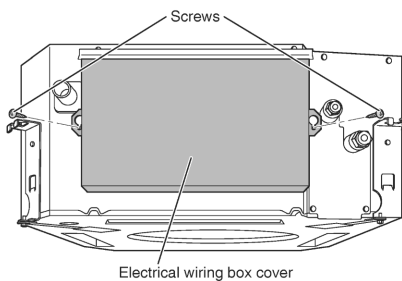

# Indoor Unit Installation

## 6. Wiring

 
Refer also to the installation manual for the outdoor unit.

### ⚠ WARNING

- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electric shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.

### ⚠ CAUTION

- When connecting the connection wire to the terminal block using a single core wire, be sure to perform curling. Problems with the installation may cause heat and fires.



- When clamping wiring, use the included clamping material to prevent outside pressure being exerted on the wiring connections and clamp firmly. When doing the wiring, make sure the wiring is neat and does not cause the electrical wiring box cover to stick up, then close the cover firmly.
- Outside the unit, separate the low voltage wiring (remote controller wiring) and high voltage wiring (wiring between units, ground, and other power wiring) at least 2 in. so that they do not pass through the same place together. Proximity may cause electrical interference, malfunctions, and breakage.

### Tightening torque for the terminal blocks

- Use the correct screwdriver for tightening the terminal screws. If the blade of screwdriver is too small, the head of the screw might be damaged, and the screw will not be properly tightened.
- If the terminal screws are tightened too hard, screws might be damaged.
- Refer to the table below for the tightening torque of the terminal screws.

 
unit: lbf • ft (N • m)

	Tightening torque
Terminal block for remote controller (6P)	0.58 - 0.72 (0.79 - 0.98)
Terminal block for power supply (4P)	0.87 - 1.06 (1.18 - 1.44)

**Precautions for power supply wiring**

Use a round crimp-style terminal for connection to the terminal block for power supply. If it cannot be used due to unavoidable reasons, be sure to observe the following instructions:

- In wiring, make certain that prescribed wires are used, carry out complete connections, and fix the wires so that external forces are not applied to the terminals.



- Use copper wire only.
- For electric wiring work, refer also to “**Wiring diagram label**” attached to the electrical wiring box cover.
- For remote controller wiring details, refer to the installation manual attached to the remote controller.
- A circuit breaker capable of shutting down power supply to the entire system must be installed.

**Specifications for field wire**

The remote controller wiring should be procured locally.

Table 3

	Wire	Size	Length (ft.)
Wiring between units	Wire size and length must comply with local codes.	–	–
Remote controller wiring	Sheathed (2 wire)	AWG 18 - 16	Max.1640*
Wiring to ground terminal	Wire size and length must comply with local codes.	–	–

\* This will be the total extended length in the system when doing group control.

**⚠ CAUTION**


- Arrange the wires and fix a cover firmly so that the cover does not float during wiring work.
- Do not clamp remote controller wiring together with wiring between units. Doing so may cause malfunction.
- Remote controller wiring and wiring between units should be located at least 2 inch (50mm) from other electric wires. Not following this guideline may result in malfunction due to electrical noise.

# Indoor Unit Installation


## Connection of wiring between units, ground wire and remote controller wiring

### Wiring between units and ground wire


- 1) Remove the electrical wiring box cover (2 screws).

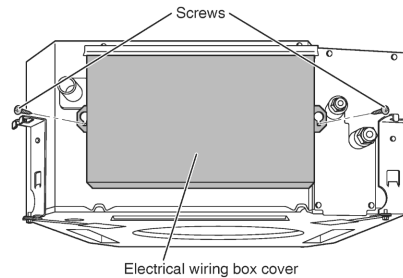

- 2) Insert the wires including the ground wire into the conduit, and secure the conduit to the hole in the electrical wiring box using a lock nut and the (N) washer for conduit, as shown in the illustration.

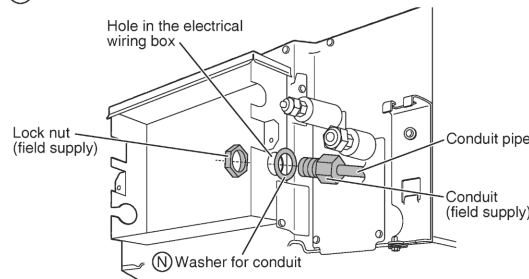

- 3) Connect the ground wire to the corresponding terminals.
- 4) Match wire colors with terminal numbers on the terminal block for power supply of indoor and outdoor unit and firmly secure the wires in the corresponding terminals with screws.
- 5) In doing this, pull the wires inside through the hole and fix the wires securely with the included (D) clamp.
- 6) Give enough slack to the wires between the (D) clamp and terminal block for power supply.
- 7) Pull the wires inside through the hole and connect them to the terminal block for remote controller (no polarity). Securely fix the remote controller wiring with the included (D) clamp.
- 8) Give enough slack to the wires between the (D) clamp and the terminal block for remote controller.
- 9) Attach the electrical wiring box cover as before.
- 10) After all wiring connections are done, fill in any gaps in the casing wiring holes with putty or (M) sealing pad (small) thus to prevent small animals or dirt from entering the unit from outside and causing short circuits in the electrical wiring box.

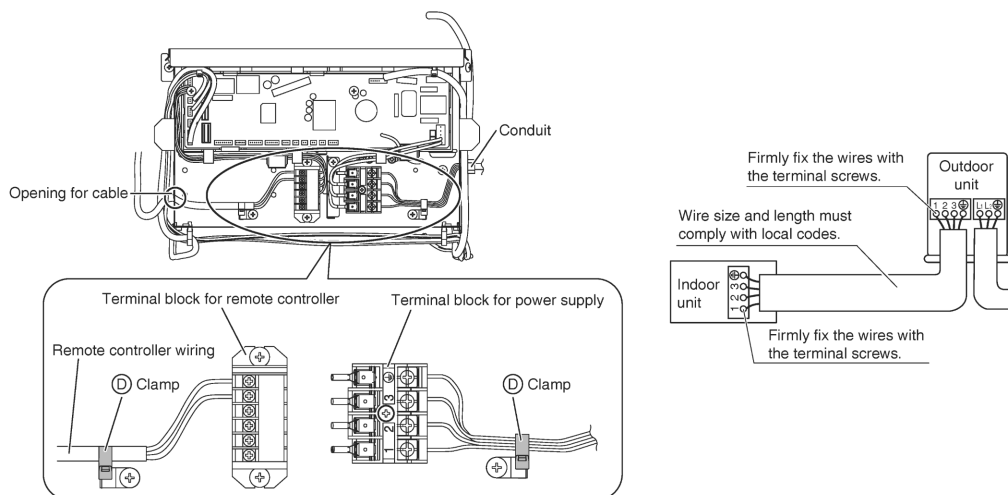

# Refrigerant Piping Work

Refer also to the installation manual for the outdoor unit.

## ⚠ WARNING

- Do not apply mineral oil on flared part.
- Prevent mineral oil from getting into the system as this would reduce the service life of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a dryer to this R410A unit in order to guarantee its service life.
- The drying material may dissolve and damage the system.
- Incomplete flaring may result in refrigerant gas leakage.

Execute thermal insulation work completely on both sides of the gas and the liquid piping. Otherwise, a water leakage can result sometimes.

Be sure to use insulation designed for use with HVAC systems.

Also, in cases where the temperature and humidity of the refrigerant piping sections might exceed 86°F (30°C) or RH80%, reinforce the refrigerant insulation. (13/16 inch (20mm) or thicker) Condensation may form on the surface of the insulating material.

Before refrigerant piping work, check which type of refrigerant is used. Proper operation is not possible if the types of refrigerant are not the same.

## 1. Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the filings do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring has been done correctly.

Flaring

Set exactly at the position shown below.

Die	Flare tool for R410A		Conventional flare tool	
	Clutch-type	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)	
A	0-0.020 inch (0-0.5mm)	0.039-0.059 inch (1.0-1.5mm)	0.059-0.079 inch (1.5-2.0mm)	

Check

The flare's inner surface must be flaw-free.

The pipe end must be evenly flared in a perfect circle.

Make sure that the flare nut is fitted.

## 2. Refrigerant piping

### ⚠ CAUTION

- Use the flare nut fixed to the main unit. (This is to prevent the flare nut from cracking as a result of deterioration over time.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- Use a torque wrench when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.

- Align the centers of both flares and tighten the flare nuts 3 or 4 turns by hand, then tighten them fully with a spanner and a torque wrench.

**Apply oil**

**Tighten**


	Piping size	Flare nut tightening torque
Gas side	O.D. 3/8 inch (9.5mm)	24-1/8-29-1/2lbf • ft (32.7-39.9N • m)
	O.D. 1/2 inch (12.7mm)	36-1/2-44-1/2lbf • ft (49.5-60.3N • m)
Liquid side	O.D. 1/4 inch (6.4mm)	10-1/2-12-3/4lbf • ft (14.2-17.2N • m)



# Refrigerant Piping Work

## Cautions on piping handling


- Protect the open end of the pipe from dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

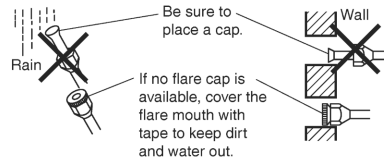

## Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam  
Heat transfer rate: 0.041 to 0.052W/mK (0.024 to 0.030Btu/ft<sup>h</sup>°F (0.035 to 0.045kcal/mh°C))  
Be sure to use insulation that is designed for use with HVAC Systems.
- ACR Copper pipe only.

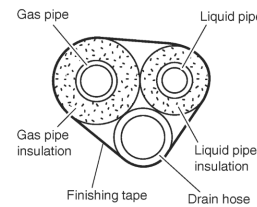


- Be sure to insulate both the gas and liquid piping and observe the insulation dimensions as below.

	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 3/8 inch (9.5mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 15/32-19/32 inch (12-15mm)	13/32 inch (10mm) Min.
	O.D. 1/2 inch (12.7mm)	1-9/16 inch (40mm) or more		I.D. 9/16-5/8 inch (14-16mm)	
Liquid side	O.D. 1/4 inch (6.4mm)	1-3/16 inch (30mm) or more		I.D. 5/16-13/32 inch (8-10mm)	

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.
- Make absolutely sure to execute thermal insulation works on the pipe-connecting section, after checking for gas leakage, by thoroughly studying the following figures and using the included thermal insulating materials (G) fitting insulation and (H) fitting insulation. Fasten both ends with the (D) clamps.

### Piping insulation procedure

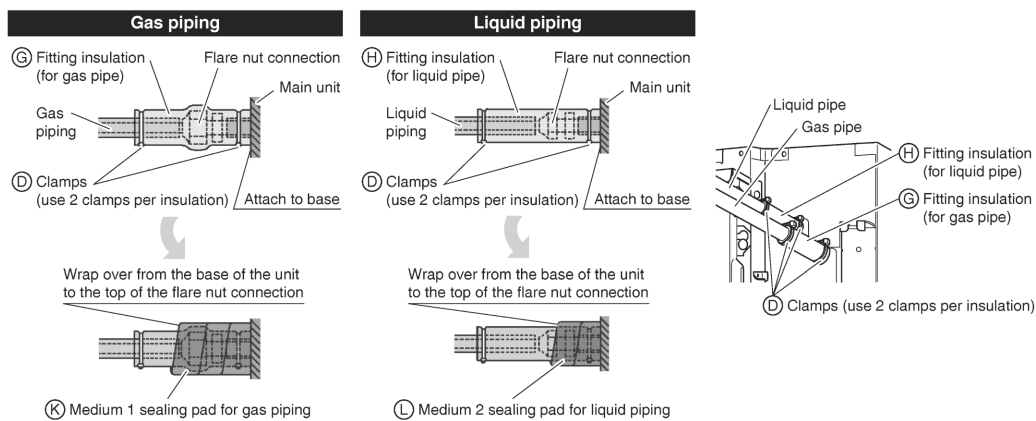

## CAUTION

Be sure to insulate any field piping all the way to the piping connection inside the unit. Any exposed piping may cause condensation or burns if touched.

# Installation of the Decoration Panel

With the wireless remote controller, field setting and trial operation cannot be performed without attaching the decoration panel.

Read “Trial Operation and Testing” before making a trial operation without attaching the decoration panel.

Refer to the installation manual attached to the decoration panel.

After installing the decoration panel, ensure that there is no space between the unit body and decoration panel.

## Field Settings

### ⚠ CAUTION

When performing field setting or trial operation without attaching the decoration panel, do not touch the drain pump. This may cause electric shock.

- Make sure the electrical wiring box cover is closed on the indoor and outdoor units.
- Field settings must be made from the remote controller and in accordance with installation conditions.
- Setting can be made by changing the “Mode No.,” “FIRST CODE NO.” and “SECOND CODE NO.”.
- The “Field Settings” included with the remote control lists the order of the settings and method of operation.

Field Settings			
Unit No	Mode		
0	20		
0-01	1-01	2-02	3-01
4	5	6	7
8	9	10	11
12	13	14	15
Setting ⏪ ⏩			

### 1. Setting air outlet direction

- For changing air outlet direction (2 or 3 directions), refer to the installation manual attached to the blocking pad kit (sold separately) or the service manual.  
(SECOND CODE NO. is factory set to “01” for air outlet in 4 directions.)

### 2. Setting for options

- For settings for options, see the installation manual provided with the option.

### 3. Setting air filter sign

- Remote controllers are equipped with liquid crystal display air filter signs to display the time to clean air filters.
- Change the SECOND CODE NO. depending on the amount of dirt or dust in the room.  
(SECOND CODE NO. is factory set to “01” for air filter contamination-light.)

Setting	Time until AIR FILTER CLEANING TIME INDICATOR lamp lights up (Long life type)	Mode No.	FIRST CODE NO.	SECOND CODE NO.
Air filter contamination-light	Approx. 2500 hrs	10 (20)	0	01
Air filter contamination-heavy	Approx. 1250 hrs			02
Display on	-		3	01
Display off				02


#### When using wireless remote controllers

- When using the wireless remote controllers, wireless remote controller address setting is necessary. Refer to the installation manual attached to the wireless remote controller.

# Field Settings

## 4. When implementing group control

- When using as a pair unit, you may control up to 16 units with the remote controller.
- In this case, all the indoor units in the group will operate in accordance with the group control remote controller.
- Select a remote controller which matches as many of the functions (swing flap, etc.) in the group as possible.

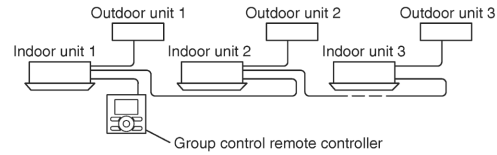

**Wiring Method** (Refer to “6. Wiring” on page 11.)

- 1) Remove the electrical wiring box cover.
- 2) Cross-wire the terminal block for remote controller (P1, P2) inside the electrical wiring box. (There is no polarity.) (Refer to Table 3 in “6. Wiring” on page 12)

## 5. 2 remote controllers (controlling 1 indoor unit by 2 remote controllers)

- When using 2 remote controllers, one must be set to “MAIN” and the other to “SUB”.

**Wiring Method** (Refer to “6. Wiring” on page 11.)

- 1) Remove the electrical wiring box cover.
- 2) Add remote controller 2 to the terminal block for remote controller (P1, P2) in the electrical wiring box. (There is no polarity.) (Refer to Table 3 in “6. Wiring” on page 12)

# Trial Operation and Testing

## ⚠ CAUTION

When performing field settings or trial operation without attaching the decoration panel, do not touch the drain pump. This may cause electric shock.

- After finishing the construction of refrigerant piping, drain piping, and electric wiring, conduct trial operation accordingly to protect the unit.

## 1. Trial operation and testing

**Make sure to install the decoration panel before carrying out trial operation if the wireless remote controller is used.**

- Trial operation should be carried out in either COOL or HEAT operation.

**1-1. Measure the supply voltage and make sure that it is within the specified range.**

**1-2. In COOL operation, select the lowest programmable temperature;  
in HEAT operation, select the highest programmable temperature.**

**1-3. Carry out the trial operation following the instructions in the operation manual to ensure that all functions and parts, such as the movement of the louvers, are working properly.**

- To protect the air conditioner, restart operation is disabled for 3 minutes after the system has been turned off.

**1-4. After trial operation is complete, set the temperature to a normal level (78°F to 82°F (26°C to 28°C) in COOL operation, 68°F to 75°F (20°C to 24°C) in HEAT operation).**


- When operating the air conditioner in COOL operation in winter, or HEAT operation in summer, set it to the trial operation mode using the following method.

Refer to **For wired remote controller** on page 18.

Refer to **For wireless remote controller** on page 19.




**For wired remote controller**

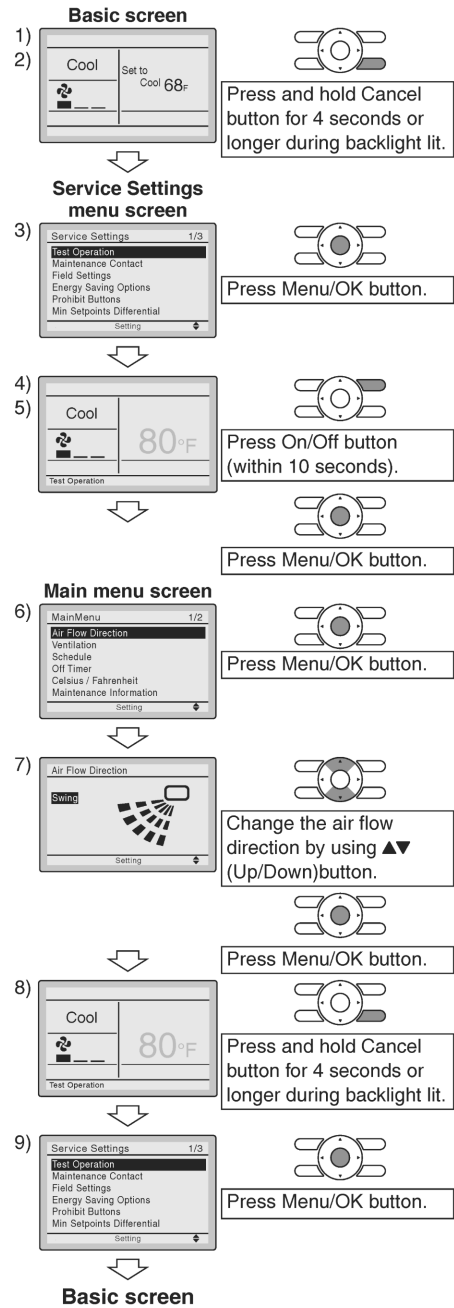- 1) Set to COOL or HEAT operation using the remote controller.
- 2) Press and hold Cancel button for 4 seconds or longer. Service settings menu is displayed.
- 3) Select **Test Operation** in the service settings menu, and press Menu/OK button. Basic screen returns and “Test Operation” is displayed at the bottom.
- 4) Press On/Off button within 10 seconds, and the test operation starts.  
Monitor the operation of the indoor unit for a minimum of 10 minutes. During test operation, the indoor unit will continue to cool/heat regardless of the temperature setpoint and room temperature.
  - In the case of above-mentioned procedures 3) and 4) in reverse order, test operation can start as well.
- 5) Press Menu/OK button in the basic screen. Main menu is displayed.
- 6) Select **Air Flow Direction** in the main menu and check that air flow direction is actuated according to the setting. For operation of air flow direction setting, see the operation manual.
- 7) After the operation of air flow direction is confirmed, press Menu/OK button. Basic screen returns.
- 8) Press and hold Cancel button for 4 seconds or longer in the basic screen. Service settings menu is displayed.
- 9) Select **Test Operation** in the service settings menu, and press Menu/OK button. Basic screen returns and normal operation is conducted.
  - Test operation will stop automatically after 15-30 minutes. To stop the operation, press On/Off button.
- 10) If the decoration panel has not been installed, turn off the power after the test operation.




# Trial Operation and Testing
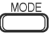
## For wireless remote controller

- 1) Press  and select the COOL or HEAT operation.
- 2) Press  twice. "Test" is displayed.
- 3) Press  within 10 seconds, and the test operation starts.

Monitor the operation of the indoor unit for a minimum of 10 minutes. During test operation, the indoor unit will continue to cool/heat regardless of the temperature setpoint and room temperature.

- In the case of above-mentioned procedures 1) and 2) in reverse order, test operation can start as well.
- Test operation will stop automatically after 15 - 30 minutes. To stop the operation, press .
- Some of the functions cannot be used in the test operation mode.

## Precautions

- 1) Refer to "3. How to diagnose for malfunction" if the unit does not operate properly.

## 2. Test items


 
Test items	Symptom	Check
Indoor and outdoor units are installed securely.	Fall, vibration, noise	
Is the outdoor unit fully installed?	No operation or burn damage	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
Does the power supply voltage correspond to that shown on the name plate?	No operation or burn damage	
Only specified wires are used for all wiring, and all wires are connected correctly.	No operation or burn damage	
System is properly grounded.	Electrical leakage	
Is wiring size according to specifications?	No operation or burn damage	
Is something blocking the air outlet or inlet of either the indoor or outdoor units?	Incomplete cooling/heating function	
Are refrigerant piping length and additional refrigerant charge noted down?	The refrigerant charge in the system is not clear	
Pipes and wires are connected to the corresponding connection ports / terminal blocks for the connected unit.	No cooling/heating	
Stop valves are opened.	Incomplete cooling/heating function	
Check that the connector of the lead wires of the decoration panel is connected securely.	Louvers do not move	
Indoor unit properly receives wireless remote control commands.	No operation	

## Items to be checked at time of delivery

Also review the "Precautions" on page 3

Test items	Check
Are the electrical wiring box cover, air filter, suction grille attached?	
Did you explain about operations while showing the operation manual to your customer?	
Did you hand the operation manual over to your customer?	

## Points for explanation about operations

The items with  WARNING and  CAUTION marks in the operation manual are the items pertaining to possibilities for bodily injury and material damage in addition to the general usage of the product. Accordingly, it is necessary that you make a full explanation about the described contents and also ask your customers to read the operation manual.

**Note to the installer**

Be sure to instruct customers how to properly operate the unit (especially cleaning the filter, operating different functions, and adjusting the temperature) by having them carry out operations while looking at the manual.

**3. How to diagnose for malfunction**

- If the air conditioner does not operate normally after installing the air conditioner, a malfunction shown in the table below may happen.

Wired remote controller display	Description
No display	<ul style="list-style-type: none"> <li>• Power outage, power voltage error or open-phase</li> <li>• Incorrect wiring (between indoor and outdoor units)</li> <li>• Indoor PC-board assembly failure</li> <li>• Remote controller wiring not connected</li> <li>• Remote controller failure</li> <li>• Open fuse or tripped circuit breaker (outdoor unit)</li> </ul>
"Checking the connection. Please stand by." *	<ul style="list-style-type: none"> <li>• Indoor PC-board assembly failure</li> <li>• Wrong wiring (between indoor and outdoor units)</li> </ul>

\* "Checking the connection. Please stand by" will be displayed for up to 90 seconds following the application of power to the indoor unit. This is normal and does not indicate a malfunction.

- Diagnose with the display on the liquid crystal display remote controller.

**With the wired remote controller**

When the operation stops due to a malfunction, operation lamp blinks, and the malfunction code is indicated on the liquid crystal display. In such a case, diagnose the fault contents by referring to **Error History** in the service settings menu. In the case of group control, the unit No. is displayed so that the indoor unit with the trouble can be identified.

**With the wireless remote controller**


(Refer also to the operation manual attached to the wireless remote controller)


When the operation stops due to a malfunction the display on the indoor unit blinks. In such a case, diagnose the fault contents with the error code which can be found by following procedures.

- 1) Press the INSPECTION/TEST OPERATION button, "👁" is displayed and "0" blinks.
- 2) Press the TEMPERATURE SETTING button and find the unit No. which stopped due to trouble.
 

Number of beeps	3 short beeps.....	Perform all the following operations
	1 short beep .....	Perform (3) and (6)
	1 long beep.....	No trouble
- 3) Press the OPERATION MODE SELECTOR button and upper figure of the error code blinks.
- 4) Continue pressing the TEMPERATURE SETTING button until it makes 2 short beeps and find the upper code.
- 5) Press the OPERATION MODE SELECTOR button and lower figure of the error code blinks.
- 6) Continue pressing the TEMPERATURE SETTING button until it makes a long beep and find the lower code.
  - A long beep indicate the error code.

### 11.2 <BYFQ60B3W1> Decoration Panel

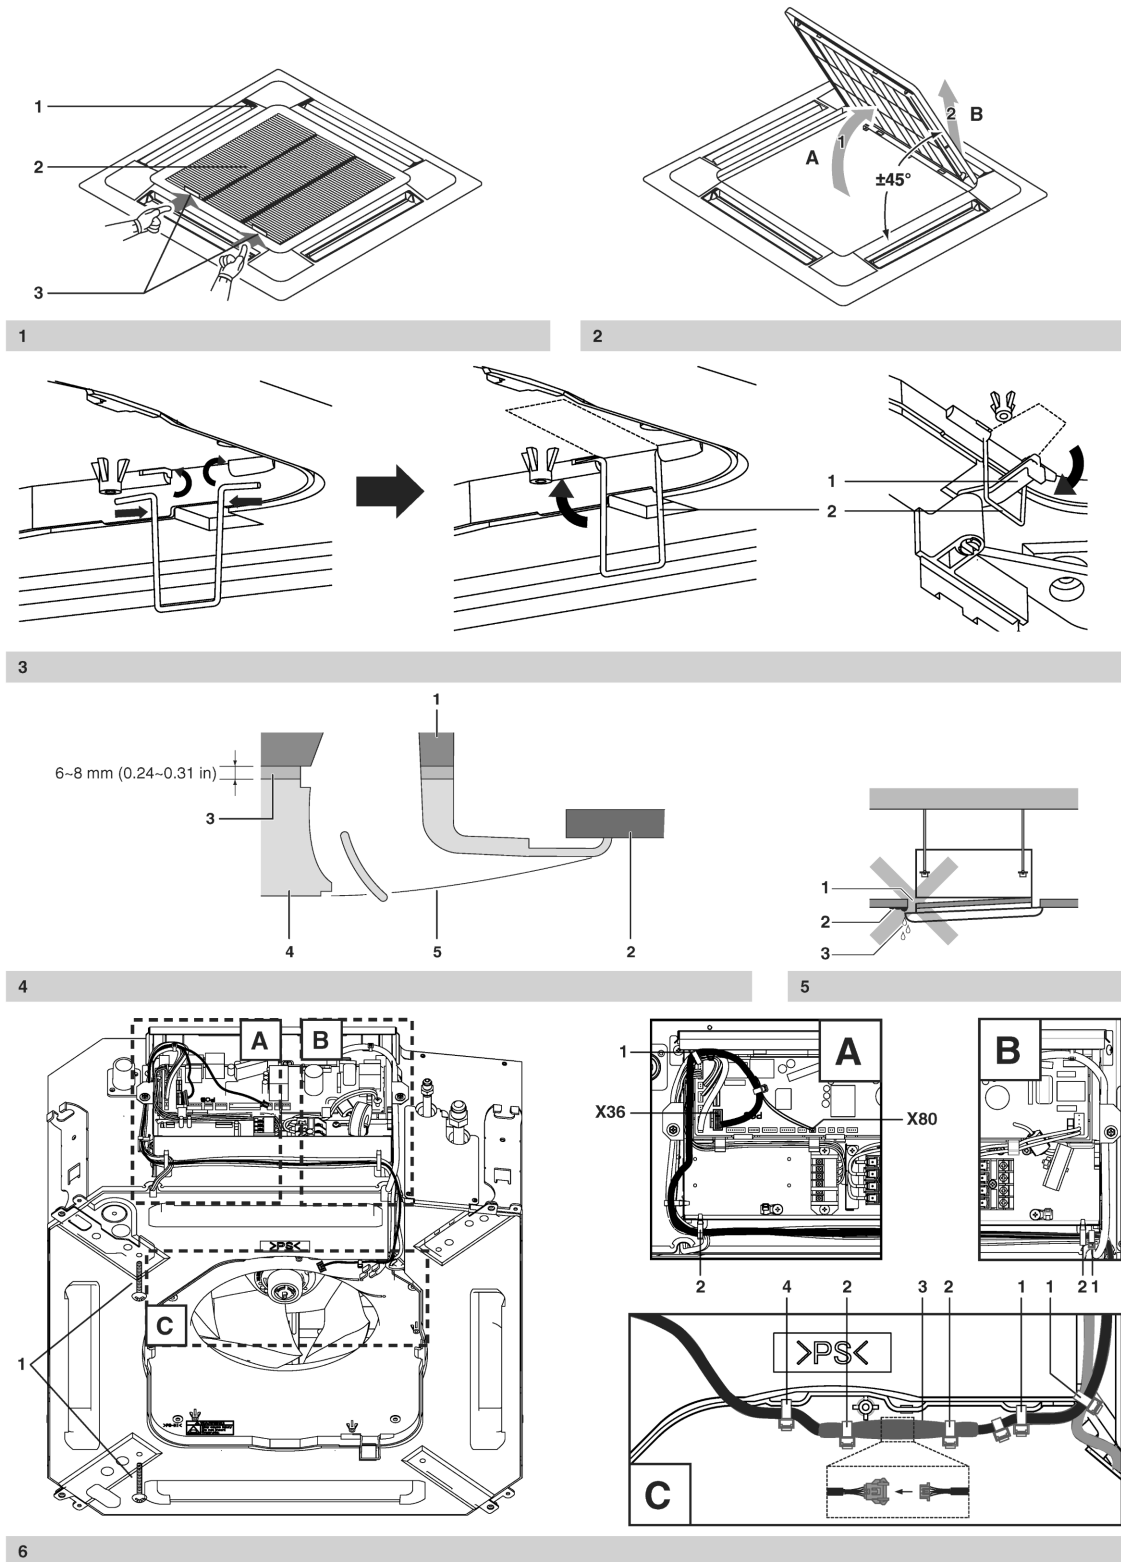

 The English text is the original instruction. Other languages are translations of the original instructions.

Read this manual attentively before installation. Do not throw it away. Keep it in your files for future reference.

Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin that are specifically designed for the use with the equipment and have them installed by a professional.

If unsure of installation procedures or use, always contact your dealer for advice and information.

**Before installation**


- Leave the unit inside its packaging until you reach the installation site.









Cut off the main power before opening the grille.

- Refer to the installation manual of the indoor unit for items not described in this manual.

**NOTE To the installer**

 Be sure to instruct the customer how to properly operate the system showing him or her the operation manual of the indoor unit.

**Accessories**

Installation manual		Wire harness	
Screws (4x)		Temporary latch	
Fibre glass tube		Tie wrap (7x)	

**Preparation before installation**

For this unit, you are able to select air flow directions. To discharge air in 2 or 3 directions, it is necessary to purchase the optional blocking pad kit for sealing air discharge outlets.

**Handling of the decoration panel**

To prevent any damage to the decoration panel, take care of the following:

- Never place the decoration panel facing down.
- Never let the decoration panel lean against a wall.
- Never place the decoration panel on a sharp or projecting object.
- Never touch or put pressure on the swing flap in order to prevent malfunction of the swing flap.


**Preparing the decoration panel for installation**

- 1 Remove the suction grille from the decoration panel.
  - 1 Decoration panel
  - 2 Suction grille
  - 3 Lever
  - Push the suction grille lever (3) inward and open the suction grille (2). (See figure 1)
  - Detach the suction grille from the decoration panel by lifting the suction grille up approximately 45 degrees (A) until the position is reached on which removal of the suction grille is possible (B). (See figure 2)

**Installation of the decoration panel to the indoor unit**

Refer to the installation manual of the indoor unit for details on installing the indoor unit.

Installation and wiring of the decoration panel.

 Make sure to turn off the power supply before wiring!

For installation and wiring of the decoration panel see figure 6.

- 1 Screws
- A**
- 1 Tie wrap
  - 2 Latch  
Socket X36  
Socket X80
- B**
- 1 Tie wrap
  - 2 Latch
- C**
- 1 Tie wrap
  - 2 Tie wrap
  - 3 Fibre glass tube
  - 4 Tie wrap

- 1 Attach wire harness from panel accessory set to unit and to other wire harness by two tie wraps (1). (See figure 6-C)
- 2 Lead the wire harness through unit's groove and attach it by tie wrap (1) to the rest of wire harnesses. (See figure 6-B)
- 3 Open two latches (2) and insert the wire harness so it is in the same condition as other wire harnesses. (See figure 6-A and 6-B)
- 4 Insert wire harness into switch box using lower hole, insert two connectors into proper sockets (X36, X80) and secure the wire harness by tie wrap (1). (See figure 6-A)
- 5 Provisionally tighten the 2 supplied screws (1) approximately 5 mm (0.2 in) into the indoor unit as marked in figure. (See figure 6)



- 6 Attach latch (2) from panel accessory set to unit according to figure 3. Then turn this latch up. (See figure 3)
- 7 Slide the panel over the provisionally tightened screws matching the 2 attachment holes (1).
- 8 Turn decoration panel lever (1) 90 degrees and then turn temporary latch (2) down to secure panel in temporary position. (See figure 3)
- 9 Attach remaining screws and tighten all 4 screws until the thickness of the sealing material between the decoration panel and the indoor unit reduces to 6-8 mm. (See figure 4)

- 1 Indoor unit
- 2 Ceiling
- 3 Sealing material
- 4 Decoration panel
- 5 Air outlet

- 10 Pull the fibre glass tube (3) over decoration panel wire harness. Then connect both wire harnesses together and move the fibre glass tube over this connection. Secure the fiber glass tube by two tie wraps (2) according to figure 6-C. Then attach decoration panel wire harness to unit by tie wrap (4). (See figure 6-C)



Make sure that the swing flap motor lead wire is not caught between the indoor unit and the decoration panel and inbetween the electric component box lid.

#### Precautions

- Improper tightening of the screws - (See figure 5) - may cause air to leak into the unit and between the ceiling and the decoration panel (1), resulting in formation of contamination (2) and dew (3).
- If there is a gap remaining between the ceiling and the decoration panel after tightening the screws, re-adjust the indoor unit body height. The indoor unit must be kept leveled and the drain piping kept unaffected.

### Installation of the suction grille

Install the suction grille by reversing the procedure shown in "Preparing the decoration panel for installation" on page 1.


- The suction grille may be installed in 4 directions by simply turning it 90 degrees.
- Change the direction when adjusting the direction of the suction grille of multiple units or to comply with the demands of the customer.

#### NOTE



Be careful not to get the swing flap motor lead wire get caught when installing the suction grille.

### 11.3 <BYFQ60C2W1W(S)> Decoration Panel

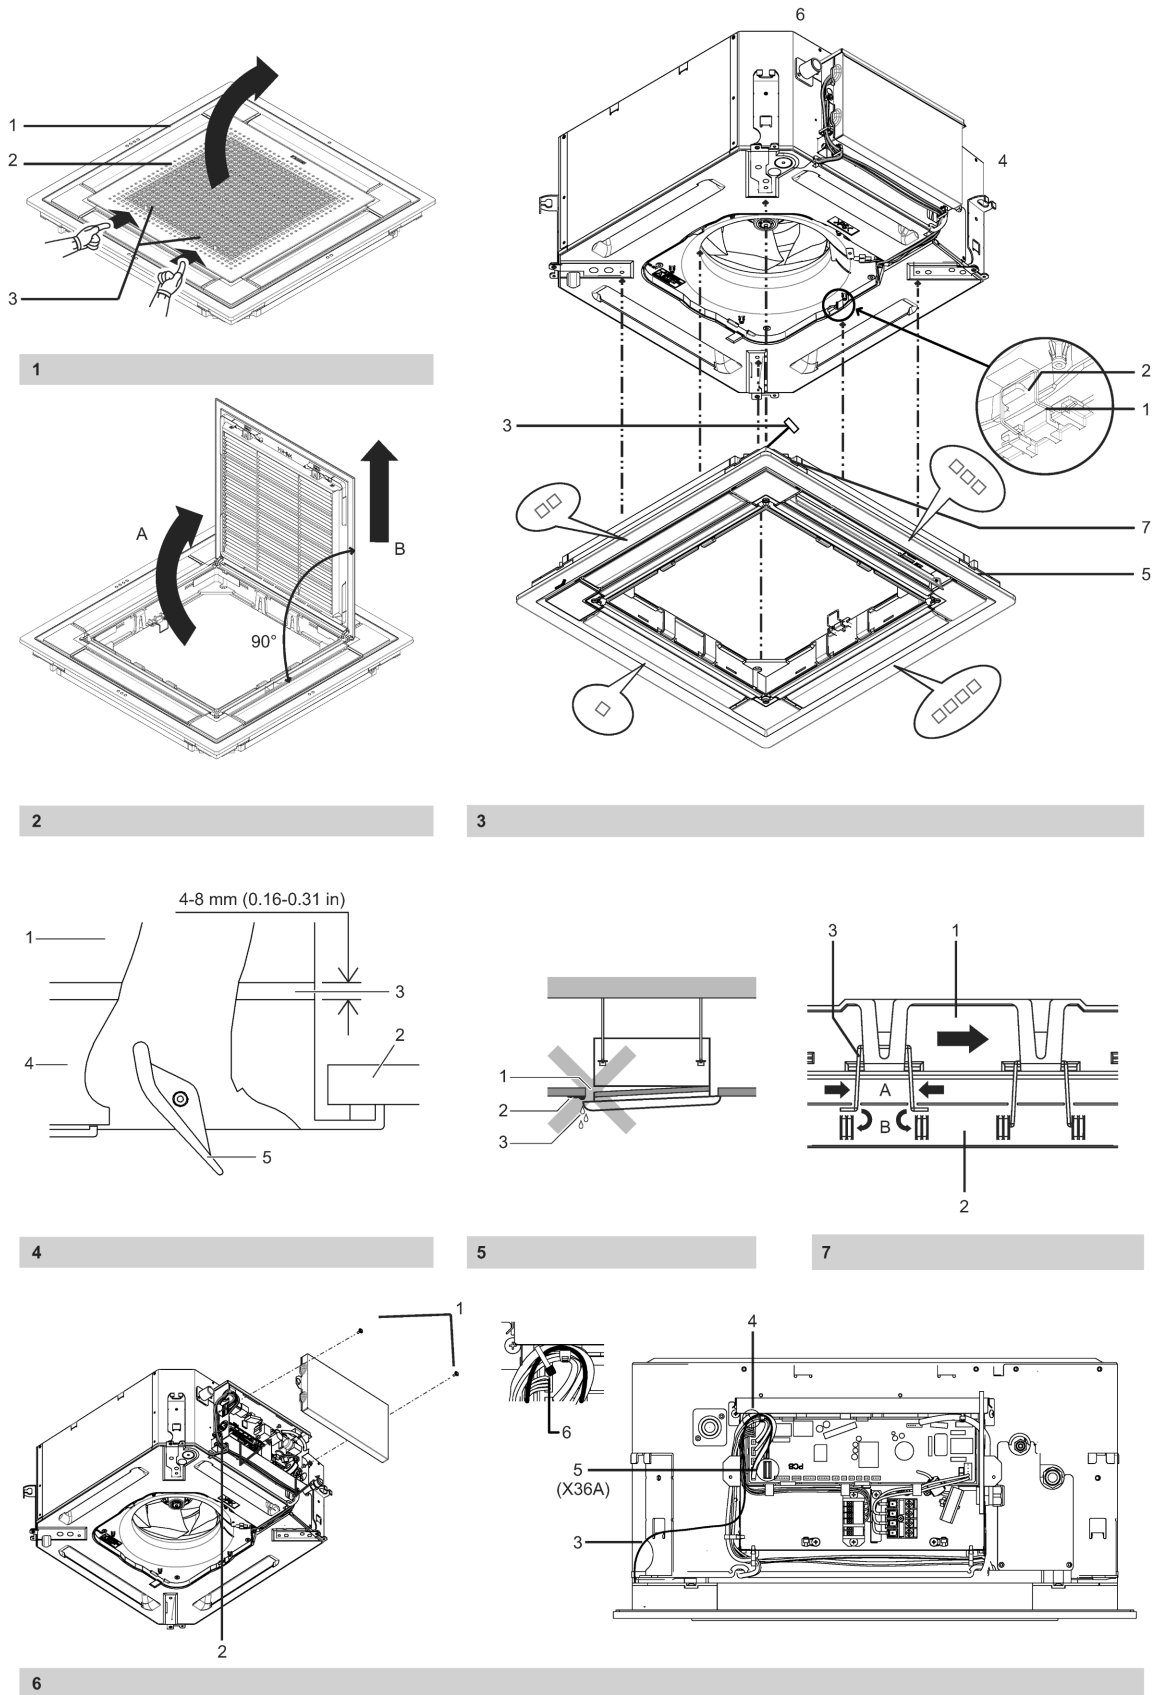



The English text is the original instruction. Other languages are translations of the original instructions.

Read this manual attentively before installation. Do not throw it away. Keep it in your files for future reference.

Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin that are specifically designed for the use with the equipment and have them installed by a professional.

If unsure of installation procedures or use, always contact your dealer for advice and information.

## Before installation

- Leave the unit inside its packaging until you reach the installation site.



### Rotary fan



Cut off the main power before opening the grille.

- Refer to the installation manual of the indoor unit for items not described in this manual.

#### NOTE



#### To the installer

Be sure to instruct the customer how to properly operate the system showing him or her the operation manual of the indoor unit.

## Accessories

Installation manual	
Screws (4x)	
Grille hinge (2x)	

## Preparation before installation

For this unit, you are able to select air flow directions. To discharge air in 2 or 3 directions, it is necessary to purchase the optional blocking pad kit for sealing air discharge outlets.

### Handling of the decoration panel

To prevent any damage to the decoration panel, take care of the following:

- Never place the decoration panel facing down.
- Never let the decoration panel lean against a wall.
- Never place the decoration panel on a sharp or projecting object.
- Never touch or put pressure on the swing flap in order to prevent malfunction of the swing flap.

## Preparing the decoration panel for installation

- Remove the suction grille from the decoration panel.

- 1 Decoration panel
- 2 Suction grille
- 3 Lever

- Remove the transporting tape from the decoration panel suction grille and flaps.
- Push the suction grille lever (3) inward and open the suction grille (2). (See figure 1)
- Detach the suction grille from the decoration panel by lifting the suction grille up approximately 90 degrees (A) until the position is reached on which removal of the suction grille is possible (B). (See figure 2)

## Installation of the decoration panel to the indoor unit

Refer to the installation manual of the indoor unit for details on installing the indoor unit.

- Install the decoration panel (See figure 3)

- 1 Temporary latch
- 2 Hook
- 3 Swing flap motor lead wire
- 4 Piping area
- 5 Piping side mark
- 6 Drain area
- 7 Drain side mark

- Hold the decoration panel against the indoor unit by matching the piping side and drain side marks on the decoration panel with the position of the piping area and drain area of the indoor unit.
- Turn 2 panel temporary latches up into the hooks of the indoor unit so the decoration panel is temporarily fixed to the indoor unit. (See figure 3)
- Make sure that the swing flap motor lead wire isn't caught between the decoration panel and the indoor unit.
- Attach 4 supplied screws and check whether the decoration panel is properly aligned with the indoor unit and ceiling.
- Tighten all 4 screws until the thickness between of the sealing material between the decoration panel and the indoor unit reduces to 4-8 mm. (See figure 4)

- 1 Indoor unit
- 2 Ceiling
- 3 Sealing material
- 4 Decoration panel
- 5 Air outlet

**Precautions**

- Improper tightening of the screws - (See figure 5) - may cause air to leak into the unit and between the ceiling and the decoration panel (1), resulting in formation of contamination (2) and dew (3).
- If there is a gap remaining between the ceiling and the decoration panel after tightening the screws, re-adjust the indoor unit body height. The indoor unit must be kept leveled and the drain piping kept unaffected.

**2 Wiring of the decoration panel (See figure 6)**

Make sure to turn off the power supply before wiring!

- |   |  |
|---|--|
| 1 | Screws (2)   |
| 2 | Switch box   |
| 3 | Swing flap motor lead wire   |
| 4 | Swing flap motor lead wire fixed by tie wrap to the rest of the wires (See detail in figure 6) |
| 5 | Connector of the indoor unit PCB (X36A)  |
| 6 | Tie wrap   |

- 1 Remove the electric components box lid. Loosen 2 screws and slide the electric components box lid in the direction of the arrows.
- 2 Securely connect the connector of swing flap motor lead wire installed on the decoration panel. Attach the swing flap motor lead wire to the rest of the wires firmly by tie wrap (from indoor unit accessory set). (See figure 6)
- 3 Replace the electric components box lid reversing the procedure to remove it.



Make sure that the swing flap motor lead wire is not caught between the indoor unit and the decoration panel and inbetween the electric component box lid.

## Installation of the suction grille to decoration panel

Install the suction grille (See figure 7)

- |   |   |
|---|---|
| 1 | Decoration panel                                    |
| 2 | Suction grille                                      |
| 3 | Suction grille hinge (attached to decoration panel) |

- 1 Remove the transportation tape which is securing 2 suction grille hinges in place.
- 2 Attach the suction grille to hinges by pressing the hinge and inserting both ends of hinge to holes on the suction grille. (See figure 7)
- 3 Make sure that the suction grille is attached to the decoration panel properly by 2 hinges.
- 4 Close the suction grille by reversing the procedure shown in "Preparing the decoration panel for installation" on page 1.
  - The suction grille may be installed in 4 directions by simply turning it 90 degrees.
  - Change the direction when adjusting the direction of the suction grille of multiple units or to comply with the demands of the customer.

## 11.4 <BRC1E73> Wired Remote Controller

# 1. Safety Considerations

The original instructions are written in English. All other languages are translations of the original instructions.

All phases of the field-installation, including, but not limited to, electrical, piping, safety, etc. must be in accordance with manufacturer's instructions and must comply with national, state, provincial and local codes.




Read these **SAFETY CONSIDERATIONS** carefully before installing the remote controller.


After completing the installation, ensure that the remote controller operates properly during the startup operation.

Train the customer to operate and maintain the remote controller. Inform customers that they should store this Installation Manual with the Operation Manual for future reference.

Always use a licensed installer or contractor to install this product. Improper installation can result in electrical shock, fire, or explosion.

Meanings of **WARNING**, **CAUTION**, and **NOTE** Symbols.

 <b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 <b>NOTE</b>	Indicates situations that may result in equipment or property-damage accidents only.

 <b>WARNING</b>
Only qualified personnel must carry out the installation work.
Consult your Daikin dealer regarding relocation and reinstallation of the remote controller. Improper installation work may result in electric shocks or fire.
Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Improper installation may cause electrical shocks or fire.
Use only specified accessories and parts for installation work. Failure to use specified parts may result in electric shocks, fire, or the unit falling.
Do not disassemble, reconstruct, or repair. Electric shock or fire may occur.
Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
Before touching electrical parts, confirm the power-off to the unit.

**⚠ CAUTION**

Keep water out of the remote controller.

To avoid electric shock due to entry of water or insects, fill the wiring through-hole with putty.

Do not wash the remote controller with water as it may result in electrical shocks or fire.

Do not touch the remote controller buttons with wet fingers.

Touching the buttons with wet fingers can cause an electric shock.

Do not install the remote controller in the following locations:

- (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen.  
Plastic parts may deteriorate.
- (b) Where corrosive gas, such as sulfurous acid gas, is produced.
- (c) Near machinery emitting electromagnetic waves.  
Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
- (d) Where flammable gas may leak, where there is carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.  
Operating the unit in such conditions can cause a fire.
- (e) High temperature area or direct flame.  
Overheating and/or fire can occur.
- (f) Moist area, where there is exposure to water. If water enters the inside of the remote controller, it may cause electric shock and electrical components may fail.

**⚠ NOTE**






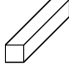
Install the control wires for the indoor and the remote controller at least 3.5 feet (1 meter) away from televisions or radios to prevent image interference or noise. Depending on the radio waves, a distance of 3.5 feet (1 meter) may not be sufficient to eliminate the noise.

When remote controller's temperature sensor is used, select the installation location as per the following:

- A place where average temperature in the room can be detected.
- A place where it is not exposed to direct sunlight.
- A place where it is far away from any heat source.
- A place where it is not affected directly by outside air.

## 2. Accessories

The following accessories are included.


Drywall screw	Drywall anchor	Wire tie	Operation manual	Installation manual	Wiring retainer
					
(2 pcs.)	(2 pcs.)	(1 pc.)	(1 pc.)	(1 pc.)	(1 pc.)

## 3. Remote Controller Installation Procedure

### 3-1 Determine where to install the remote controller.

Make sure to follow the **Safety Considerations** when determining the location.

### 3-2 If the control wire for the remote controller is to be routed from the rear, consider the location of the access hole in the lower case for making a hole in the wall.

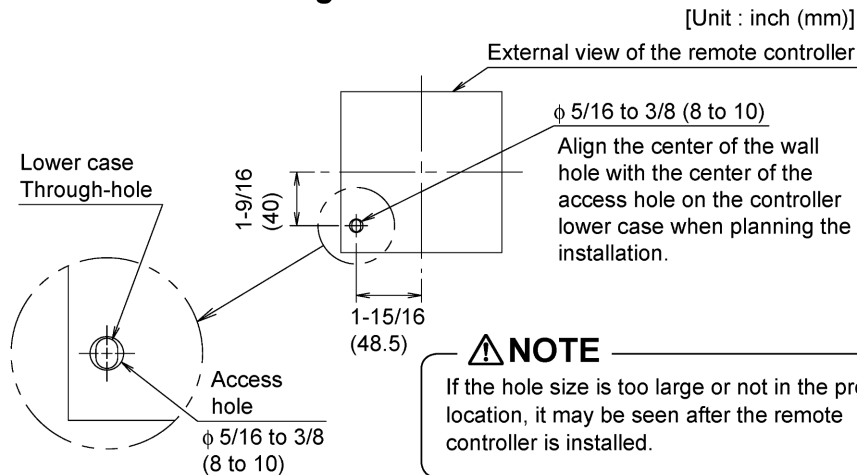


### 3-3 Remove upper case.

Insert a screwdriver in the recess of lower case to remove the upper case (2 points).


Remote controller printed-circuit board is installed on the upper case. Be careful not to damage the printed-circuit board with the screwdriver.

Be careful not to let dust or moisture touch the printed-circuit board.

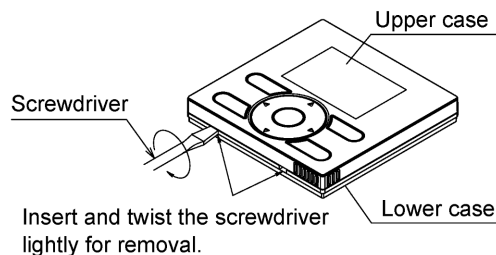


**3-4 Determine the location where the wiring will enter the remote controller (back, left side, top left, top center).**

**3-4-1 Back outlet**

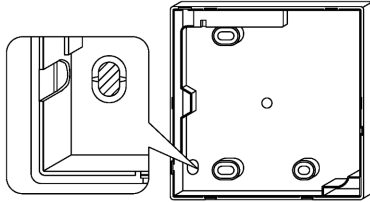


Cut off resin area (notched area).

**3-4-2 Left outlet**

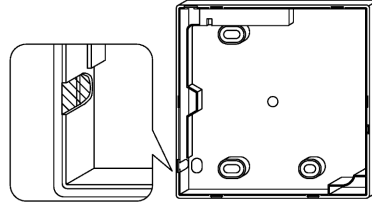


Cut the plastic at the notched area and remove any remaining burrs.

**3-4-3 Top left outlet**

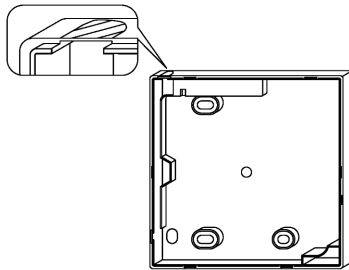

Cut the plastic at the notched area and remove any remaining burrs.

**3-4-4 Top center outlet**

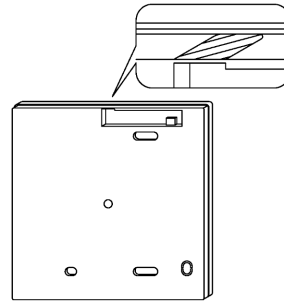

Cut the plastic at the notched area and remove any remaining burrs.

**3-5 Install wiring.**

**⚠ NOTE**


1. Switch box and control wiring are filed supplied.
2. Do not touch the remote controller printed-circuit board.

Wiring Specifications

Wiring Type	Non-shielded, 2-conductor, stranded copper wire
Wiring Size	AWG-18
Wiring Length	Maximum 1640 feet (500 m)



Prepare the wiring for connection to the remote controller following these instructions:

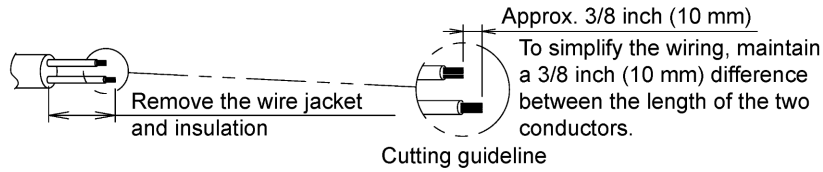


Length of jacket to be removed:


- Approx. 6 inch (150 mm) for top left outlet
- Approx. 8 inch (200 mm) for top center outlet

Connect the terminals (P/P1, N/P2) of the remote controller to the terminals (P1, P2) of the indoor unit. (P1 and P2 are not polarity sensitive.)


**3-5-1 Back outlet**

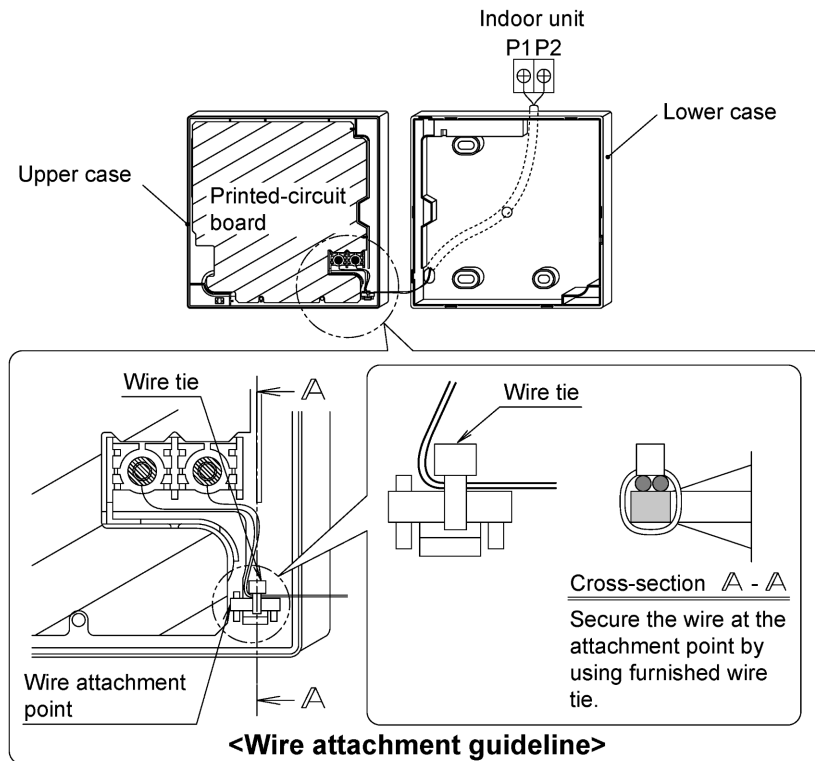


### 3-5-2 Left outlet

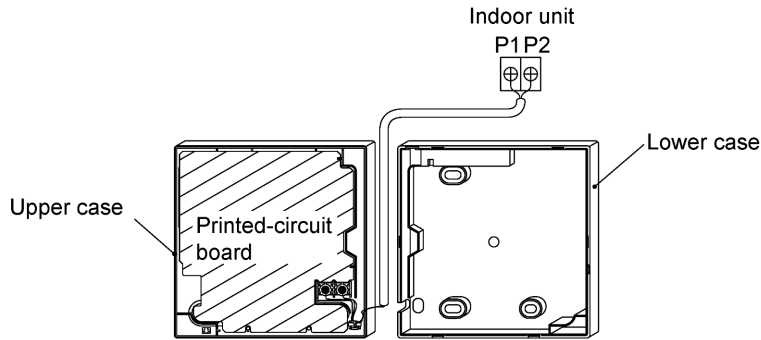

### 3-5-3 Top left outlet

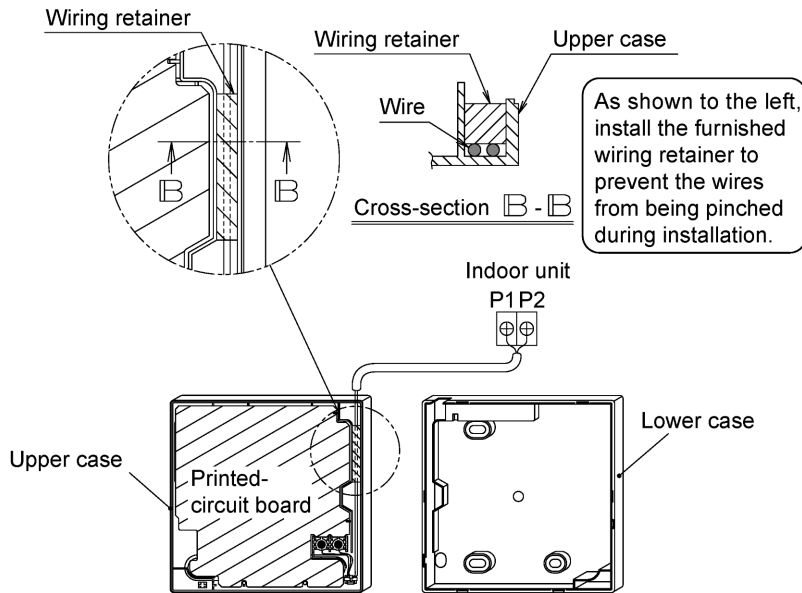

### 3-5-4 Top center outlet

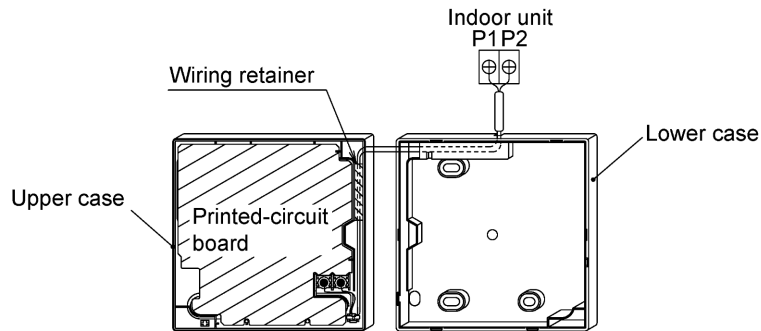

**⚠ NOTE**


- To prevent electrical noise and possible communication errors, avoid installing the remote controller wiring parallel to or in the vicinity of line voltage circuits.

**3-6 Installation procedure for the lower case.**


When wiring the remote controller through the top center or rear access points, attachment of the wire to the lower case is required before it is wall mounted. Closely follow the wiring procedures.

**3-6-1 Wall installation**

Secure by using furnished drywall anchors and screws (2 pcs.).

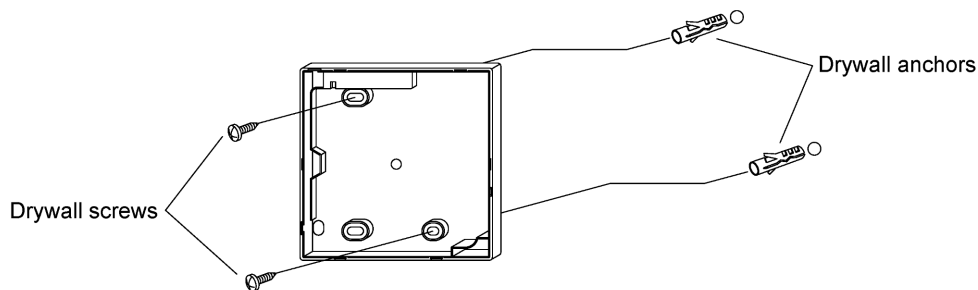**3-6-2 Switch box installation**


Secure by using field supplied machine screws (2 pcs.).

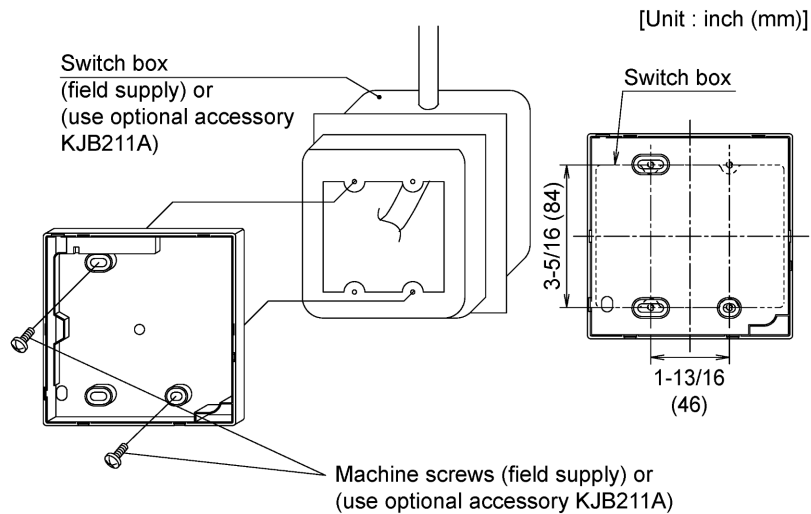**⚠ NOTE**

- Install the control on a flat surface only.
- To prevent deformation of the lower case, avoid over-tightening the installation screws.


### 3-7 Install the upper case.

- Align the upper case with tabs of the lower case (6 points), insert and install the upper case.
- Install the wiring with care to prevent pinching.
- Peel off the protective membrane which overlays the upper case.

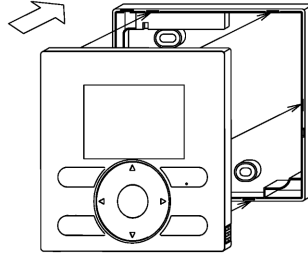

## 4. Functions and Menu Items of Remote Controller Buttons

### 4-1 Functions and menu items

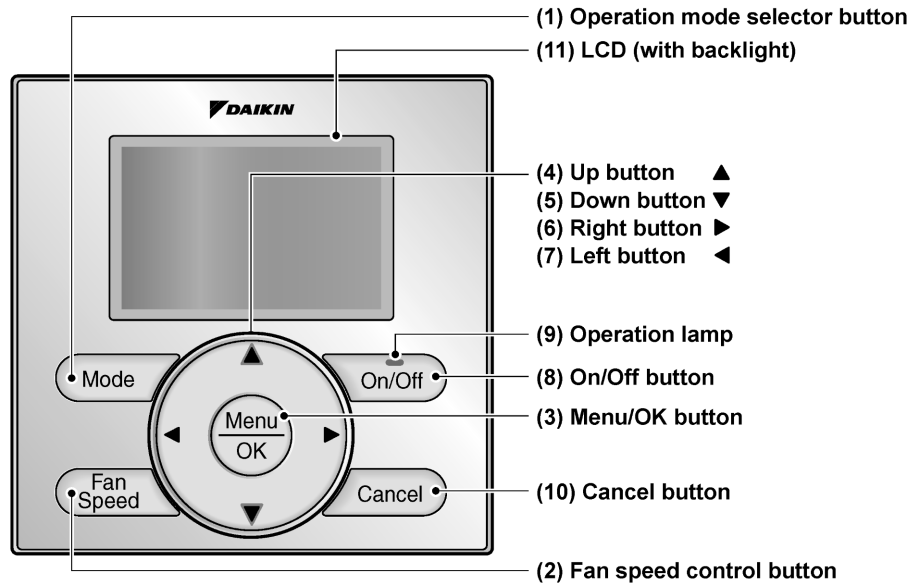

**(1) Operation mode selector button**  
Used to change the mode.

**(2) Fan speed control button**  
Used to change the fan control.

**(3) Menu/OK button**

- Used to access the main menu.  
(For details of the main menu, see the operation manual.)
- Used to enter the item selected.

#### Main Menu

\*Airflow Direction  
\*Individual Airflow Direction  
\*Ventilation  
Schedule  
Off Timer  
Celsius / Fahrenheit  
Filter Auto Clean  
Maintenance Information  
Configuration  
Current Settings  
Clock & Calendar  
Daylight Saving Time  
Language

\*Depending on connected model

**(4) Up button ▲**

- Used to raise the setpoint temperature.
- The previous menu items will be highlighted.  
(The highlighted items will be scrolled continuously when the button is pressed continuously.)
- Used to change the selected item.

**(5) Down button ▼**

- Used to lower the setpoint temperature.
- Items below the currently selected item will be highlighted.  
(The highlighted items will be scrolled continuously when the button is pressed continuously.)
- Used to change the selected item.

**(6) Right button ►**

- Used to highlight items to the right of the currently selected item.
- Display contents are changed to next screen per page.

**(7) Left button ◀**

- Used to highlight items to the left of the currently selected item.
- Display contents are changed to previous screen per page.

**(8) On/Off button**

Press once to operate, and press once again to stop.

**(9) Operation lamp**

Green lamp lights up during operation. The lamp will flash if a malfunction occurs.

**(10) Cancel button**

- Used to return to the previous screen.
- Press and hold this button for 4 seconds or longer to display service settings menu.

**(11) LCD (with backlight)**

The backlight will illuminate for approximately 30 seconds by pressing any operation button.

**Service Settings menu**

- Test Operation
- Maintenance Contact
- Field Settings
- \*Energy Saving Options
- Prohibit Function
- Min Setpoints Differential
- \*Outdoor unit AirNet Address
- Error History
- \*Indoor Unit Status
- \*Outdoor Unit Status
- Forced Fan ON
- Switch Main Sub Controller
- Filter Indicator
- \*Brush/Filter Ind.
- \*Disable Filter Auto Clean


\*Depending on connected model

**⚠ NOTE**

- Operate the button while the backlight is illuminated.
- When one indoor unit is controlled by two remote controllers (main / sub) only the first controller to be accessed by the user will illuminate it's backlight.

**4-2 Button menu display descriptions**

**<Service settings menu screen>**

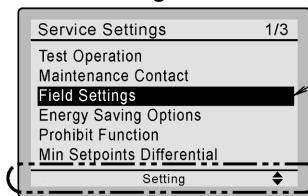

Highlighted display (selected items)

In the highlighted display (selected items) setting screen, button operation descriptions are displayed.

## 5. Power-on

- Check for completion of indoor/outdoor unit wiring.
- Ensure that covers have been replaced on electrical component boxes for both indoor and outdoor units prior to restoring power.

**5-1** The following message is displayed after power-on.  
**Checking the connection.**  
**Please stand by.**

When the above message is displayed, the backlight will not be ON.

**In the case that 1 indoor unit is controlled by 2 remote controllers:**

Make sure to set the sub remote controller when the above message is displayed. Hold **Mode** button for 4 seconds or longer to set.

When the display is changed from "Main RC" to "Sub RC" the setting is completed.

**5-2** Basic screen is displayed.

### NOTE


If sub remote controller is not set at power-on in the case of one indoor unit controlled by two remote controllers, **Error Code: U5** is displayed in the connection checking screen.

Select the sub remote controller by pressing **Mode** button of either one of the remote controllers for 4 seconds or longer.

If the basic screen is not displayed in 2 minutes after the "Sub RC" is displayed, shut off the power supply and check the wiring.

### NOTE

When selecting a different language, refer to **Chapter 12. Language.**  
 (See page 21.)

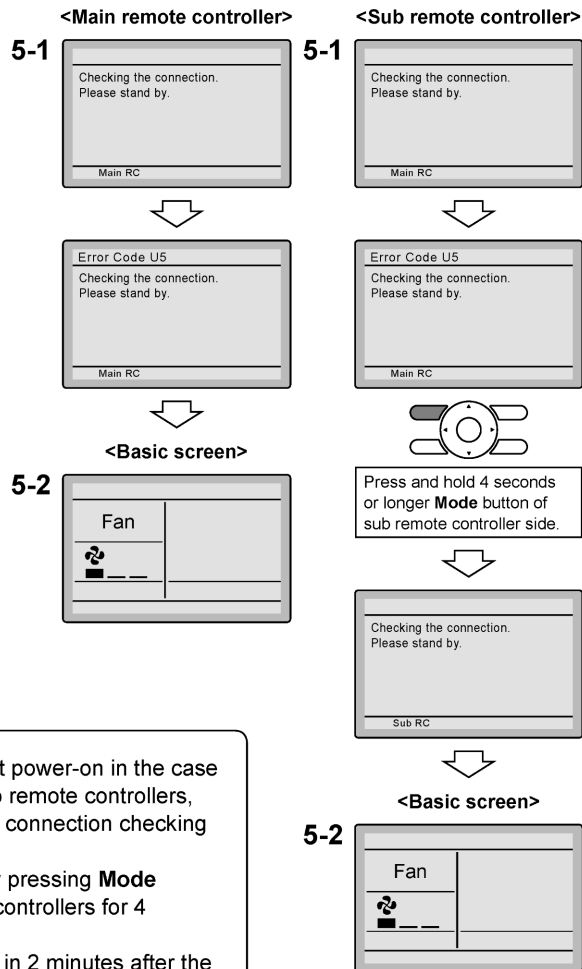

## 6. Field Settings

**6-1** Press and hold **Cancel** button for 4 seconds or longer. Service settings menu is displayed.

**6-2** Select **Field Settings** in the Service Settings menu, and press **Menu/OK** button. Field settings screen is displayed.



**6-3** Highlight the mode, and select desired "Mode No." by using **▲▼** (Up/Down) button.

**6-4** In the case of setting per indoor unit during group control (When Mode No. such as **20**, **21**, **22**, **23**, **25** are selected), highlight the unit No. and select "Indoor unit No." to be set by using **▲▼** (Up/Down) button. (In the case of group setting, this operation is not needed.)

In the case of individual setting per indoor unit, current settings are displayed. And, SECOND CODE NO. " - " means no function.


**6-5** Highlight SECOND CODE NO. of the FIRST CODE NO. to be changed, and select desired "SECOND CODE NO." by using **▲▼** (Up/Down) button. Multiple identical mode number settings are available.

In the case of setting for all indoor units in the remote control group, available SECOND CODE NO. is displayed as "\*" which means it can be changed. When SECOND CODE NO. is displayed as "-", there is no function.

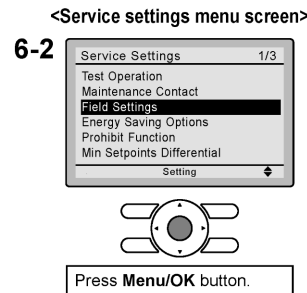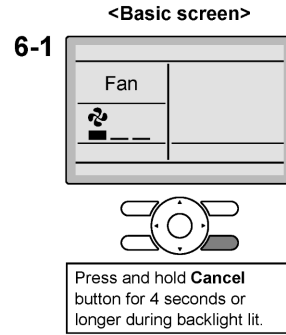


**<Service settings screen>**

**In the case of individual setting per indoor unit**

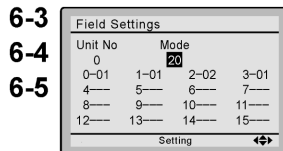

**In the case of group total setting**

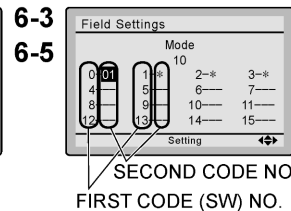



**6-6** Press **Menu/OK** button. Setting confirmation screen is displayed.

**6-7** Select **Yes** and press **Menu/OK** button. Setting details are determined and field settings screen returns.

**6-8** In the case of multiple setting changes, repeat "6-3" to "6-7".

**6-9** After all setting changes are completed, press **Cancel** button twice.

**6-10** Backlight goes out, and [Checking the connection. Please stand by.] is displayed for initialization. After the initialization, the basic screen returns.

↓  
<Setting confirmation screen>



Press **Menu/OK** button.

↓  
Setting confirmation

**NOTE**

- Installation of optional accessories on the indoor unit may require changes to field settings. See the manual of the optional accessory.
- For field setting details related to the indoor unit, see installation manual shipped with the indoor unit.

Mode No. (Note 1)	First Code No.	Description	Second Code No. (Note 2) (Items in bold are factory default settings)			
			01	02	03	04
10 (20)	2	Priority of thermistor sensors for space temperature control	The return air thermistor is primary and the remote controller thermistor is secondary.	The remote controller thermistor is not utilized. Only the return air thermistor will be utilized.	Only the remote controller thermistor will be utilized.	_____
	5	Room temperature value reported to multizone controllers	Return air thermistor	Thermistor designated by 10-2 above (Note 3)	_____	_____
12 (22)	2	Thermo-on/off deadband (Note 4)	2F (1C)	1F (0.5C)	_____	_____
1c	1	Thermistor sensor for auto changeover and setback control by the remote controller	Utilize the return air thermistor	Utilize the remote controller thermistor	_____	_____
	3	Access permission level setting	Level 2	Level 3	_____	_____
1e	2	Setback availability	N/A	Heat only	Cool only	Cool/Heat

- Notes)
1. Field settings are normally applied to the entire remote control group, however if individual indoor units in the remote control group require specific settings or for confirmation that settings have been established, utilize the mode number in parenthesis.
  2. Any features not supported by the connected indoor unit will not be displayed.
  3. When mode 10-2-01 is selected, only the return air temperature value is reported to the multizone controller.
  4. The actual default deadband value will depend upon the indoor unit model.

## 7. Test Operation

**Also see installation manuals furnished with the indoor unit and the outdoor unit.**

- Verify that the wiring of the indoor unit and the outdoor unit is completed.
- Ensure that covers have been replaced on electrical component boxes for both indoor and outdoor units prior to restoring power.
- After refrigerant piping, drain piping and electric wiring are completed, clean inside of the indoor unit and decorative panel.
- Perform the test operation according to following procedure.
- To protect the compressor, apply power to the outdoor unit at least 6 hours prior to test operation.
- Set the remote controller display mode to standard or detailed display mode. Refer to Operation Manual for the setting method.


### Notes for backlight

- The backlight will be ON for 30 seconds by pressing any button.
- The initial push of the button will only turn on the backlight. While the backlight is turned on, the buttons assigned functionality will be available.

**7-1** Set the operation mode to cooling by using the remote controller.

**7-2** Press and hold **Cancel** button for 4 seconds or longer. Service settings menu is displayed.

**7-3** Select **Test Operation** in the service settings menu, and press **Menu/OK** button. Basic screen returns and message "Test Operation" is displayed at the bottom.

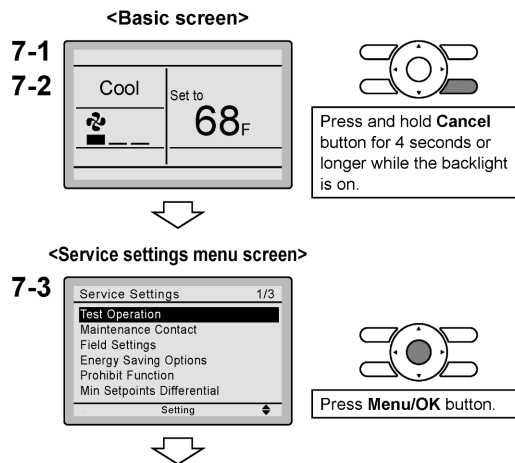

**7-4** Press **On/Off** button within 10 seconds, and the test operation starts. Monitor the operation of the indoor unit for a minimum of 10 minutes. During test operation, the indoor unit will continue to cool regardless of the temperature setpoint and room temperature.

\* Note) In the case of above-mentioned procedures **7-3** and **7-4** in reverse order, test operation can start as well.

**7-5** Press **Menu/OK** button in the basic screen. Main menu is displayed.

**7-6** In the case of a model having airflow direction function, select **Airflow Direction** in the main menu and check that airflow direction is actuated according to the setting. For operation of airflow direction setting, see the operation manual.

**7-7** After the operation of airflow direction is confirmed, press **Menu/OK** button. Basic screen returns.


**7-8** Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

**7-9** Select **Test Operation** in the service settings menu, and press **Menu/OK** button. Basic screen returns and normal operation is conducted.  
\* Note) The test operation will automatically finish in 30 minutes.

**7-10** Check the functions according to the operation manual.

**7-11** When the decorative panel is not installed, shut off the power supply after the test operation finishes.

- If construction activities are planned within the space following the test operation procedure, recommend to the customer that the indoor unit is not operated to prevent contamination from paints, drywall dust and other airborne materials.

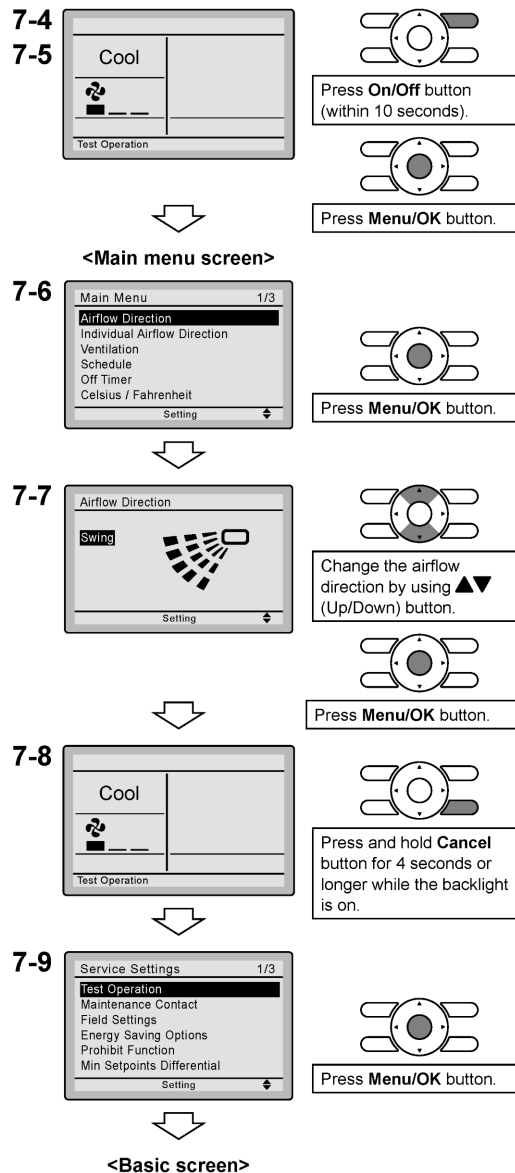

**NOTE**

- If operation is not possible due to a malfunction, refer to following **Failure diagnosis method**.
- After the test operation finishes, check whether the error code history is displayed on the maintenance information screen of the main menu according to the following procedure.


**7-12** Press **Menu/OK** button in the basic screen. Main menu screen is displayed.

**7-13** Select **Maintenance Information** in the main menu, and press **Menu/OK** button.

**7-14** Maintenance information screen is displayed. Check whether the error code history is displayed on the screen.


\* If no error code history is displayed following this procedure the system has normally completed the test operation mode.

**7-15** If the error code history is displayed, conduct the failure diagnosis referring to <Error code list> in the installation manual of the indoor unit. After the failure diagnosis finishes, press and hold **On/Off** button for 4 seconds or longer in the maintenance information screen to erase the error code history.

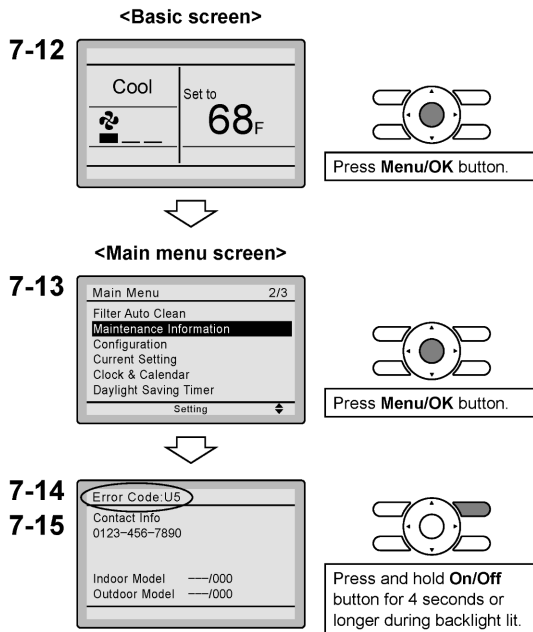

**Failure diagnosis method**

- Whenever the remote controller display is blank or displays **[Checking the connection. Please stand by.]**, troubleshoot the system with the items in the Description column of the following table.
- If an error occurs, **CODE** is displayed on the LCD as shown to the right. Conduct the failure analysis referring to <Error code list> in the installation manual of the indoor unit. When the unit No. which detected the error during group control is confirmed, refer to **Chapter 8: Procedure for Checking Error History**.

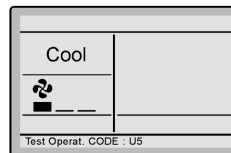

Remote controller display	Description
No display	<ul style="list-style-type: none"> <li>• Power outage, power voltage error or open-phase</li> <li>• Incorrect wiring (between indoor and outdoor units)</li> <li>• Indoor printed-circuit board assembly failure</li> <li>• Remote controller wiring not connected</li> <li>• Remote controller failure</li> <li>• Open fuse or tripped circuit breaker (outdoor unit)</li> </ul>
Checking the connection. Please stand by. *	<ul style="list-style-type: none"> <li>• Indoor printed-circuit board assembly failure</li> <li>• Wrong wiring (between indoor and outdoor units)</li> </ul>

\* [Checking the connection. Please stand by.] will be displayed for up to 90 seconds following the application of power to the indoor unit. This is normal and does not indicate a malfunction.

## 8. Procedure for Checking Error History

**8-1** Press and hold **Cancel** button for 4 seconds or longer in the basic screen. Service settings menu is displayed.

**8-2** Select **Error History** in the service settings menu, and press **Menu/OK** button. The error history menu screen is displayed.

**8-3** Select **RC Error History** in the error history menu, and press **Menu/OK** button. Error codes and unit No. can be confirmed in the RC error history screen.

 

**8-4** In the error history, the 10 most recent items are displayed in order of occurrence.

**8-5** Press **Cancel** button in the RC error history screen 3 times. The basic screen returns.

**8-1** <Basic screen>





<Service settings menu screen>

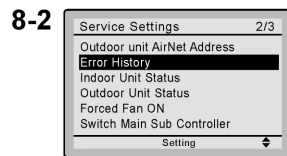

Press **Menu/OK** button.


**8-2**

 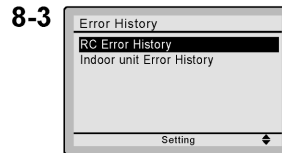

Press **Menu/OK** button.

**8-3**

**8-4**

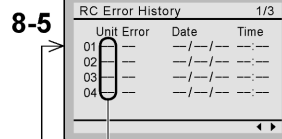


Unit No.

Latest record

## 9. Adding Maintenance Contact Information

- Registration of the maintenance contact.


- 9-1** Press and hold **Cancel** button for 4 seconds or longer in the basic screen.  
Service settings menu is displayed.
- 9-2** Select **Maintenance Contact** in the service settings menu, and press **Menu/OK** button. Maintenance contact menu screen is displayed.
- 9-3** Select **Maintenance Contact**, and press **Menu/OK** button.
- 9-4** Enter the telephone number.  
Scroll through the numbers by using ▲▼ (Up/Down) buttons. Start from the left side. Blank digits should remain as “-”.
- 9-5** Press **Menu/OK** button.  
Setting confirmation screen is displayed.
- 9-6** Select **Yes** and press **Menu/OK** button.  
Setting details are saved and service settings menu screen returns.
- 9-7** Press **Cancel** button once.  
The basic screen returns.

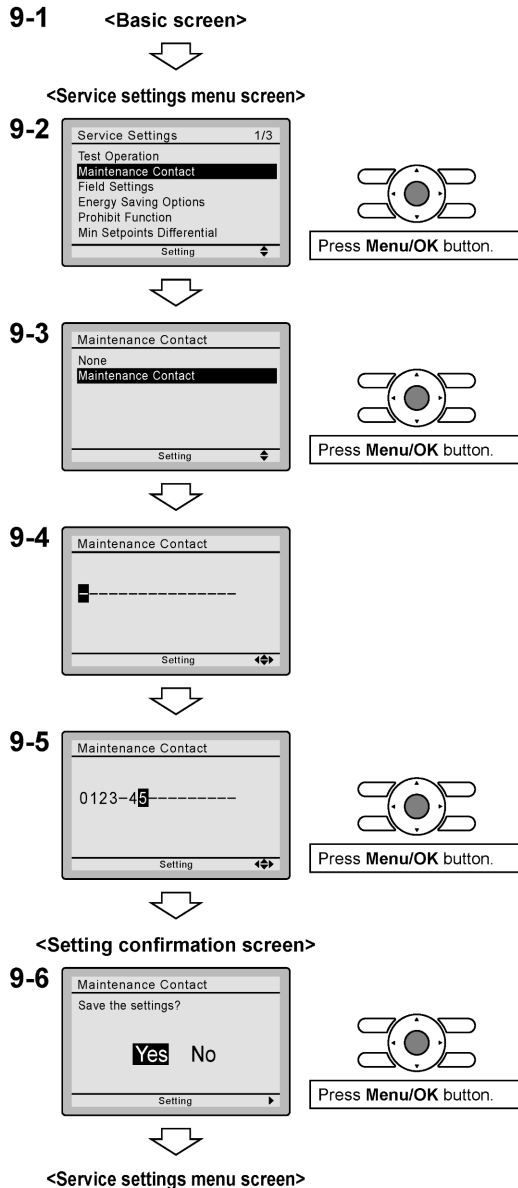

## 10. Confirming Registered Details

**10-1** Press **Menu/OK** button in the basic screen.  
Main menu is displayed.  
Select **Maintenance Information** in the main menu, and press **Menu/OK** button.


**10-2** Press **Cancel** button twice.  
The basic screen returns.

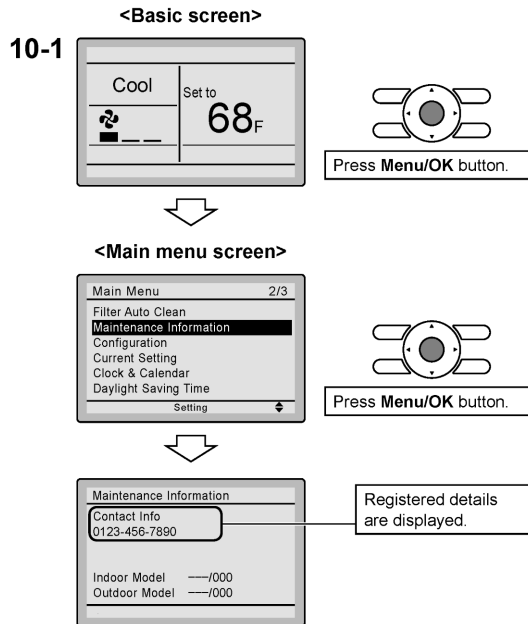



## 11. Clock & Calendar

**11-1** Press **Menu/OK** button in the basic screen.  
Main menu is displayed.  
Select **Clock & Calendar** in the main menu, press **Menu/OK** button.

**11-2** Press **▲▼** buttons to select **Date & Time** on the clock & calendar screen.  
\* The date & time screen will appear when **Menu/OK** button is pressed.

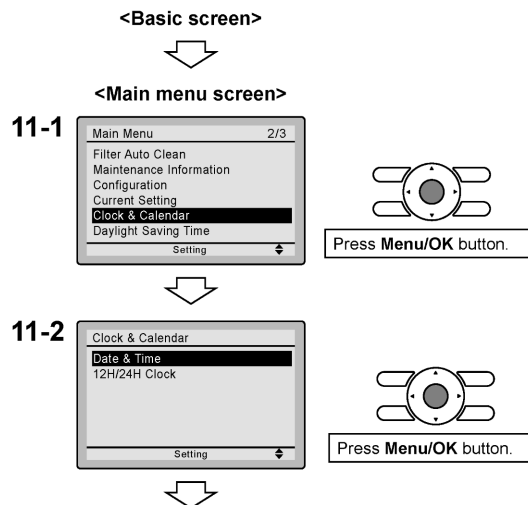


 **11-3** Select **year**, **month**, **day** and **time** by using ◀▶ (Left/Right) button and set by using ▲▼ (Up/Down) button in the date & time screen. Press and hold the button for continuous change of the numeric value.  
 \* Day of the week is set automatically.

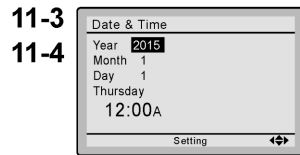

Press **Menu/OK** button.

 **11-4** Press **Menu/OK** button. Setting confirmation screen is displayed.



Press **Menu/OK** button.

**11-5** Select **Yes** and press **Menu/OK** button. Setting details are saved and basic screen returns.

<Basic screen>



\* If power outage exceeds 48 hours, reset is needed.

## 12. Language

 **12-1** Press **Menu/OK** button in the basic screen. Main menu is displayed. Select **Language** in the main menu, press **Menu/OK** button.


<Basic screen>

<Main menu screen>

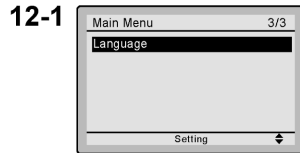

Press **Menu/OK** button.

**12-2** Press ▲▼ (Up/Down) buttons to select **Language** on the language screen. **English/Français/Español**. Press **Menu/OK** button.

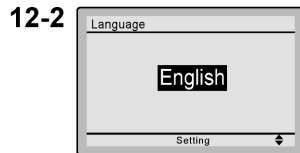



### 11.5 <BRC082A41W, BRC082A42W(S)> Wireless Remote Controller

	1	1	2	3	4	5	6	7
BRC082A41W	1		1	1	1	2	1	2
BRC082A42W		1	1	1	1	2	1	2
BRC082A42S		1	1	1	1	2	1	2

	8	9	10	11	12	13
BRC082A41W	1	1	4	4	1	
BRC082A42W	1	1	3	4	1	1
BRC082A42S	1	1	3	4	1	1

Figure 1

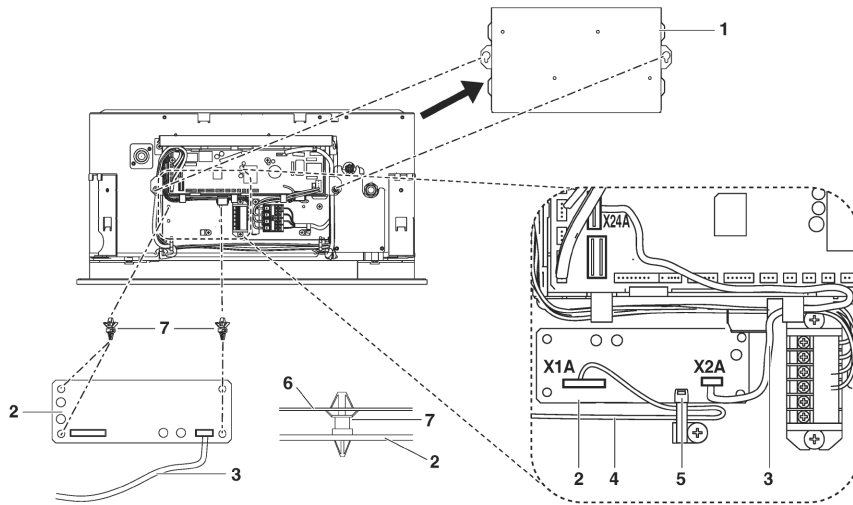


Figure 2

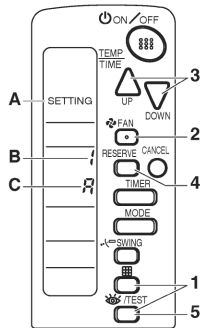


Figure 3

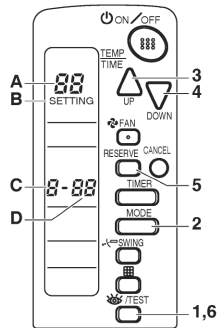


Figure 4

## Contents

<b>Safety considerations</b> .....	<b>1</b>
<b>Before installation</b> .....	<b>1</b>
Accessories.....	1
Note to the installer.....	1
<b>Remote controller installation</b> .....	<b>2</b>
Installing the wireless remote controller.....	2
Determination of address and MAIN/SUB remote controller.....	2
Setting procedure.....	2
Installation of the transmitter board.....	3
Installation of the decoration panel.....	3
Installation of the receiver in case of BRC082A41W ....	4
Installation of the receiver in case of BRC082A42W/S ....	4
<b>Field setting</b> .....	<b>5</b>



READ THIS MANUAL ATTENTIVELY BEFORE STARTING UP THE UNIT. DO NOT THROW IT AWAY. KEEP IT IN YOUR FILES FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORTCIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

The English text is the original instruction. Other languages are translations of the original instructions.

## Safety considerations

Please read this “Safety considerations” carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure at start up operation that the unit operates properly. Please instruct the customer how to operate the unit and how to perform maintenance.

## Meaning of caution symbols



Failure to observe these instructions properly may result in property damage or personal injury.

Information classified as **NOTE** contains instructions to ensure proper use of the equipment.



- Refer also to the installation manual supplied with the indoor unit and the installation manual supplied with the decoration panel.
- There is only 1 possible installation position of this kit into the decoration panel. It is therefore recommended that installation orientation of the decoration panel is confirmed prior to installation of this kit.
- Ensure that nothing interrupts operation of the wireless remote controller.
- Ensure that the signal from the remote controller can easily be transmitted.
- Ensure that the operation display lamp and other indicator lamps can easily be seen.
- Ensure that there is neither a source of light nor a fluorescent lamp near the receiver.
- Ensure that the receiver is not exposed to direct sunlight.

## Before installation

### Accessories

See figure 1. Check if the following accessories are included with your kit.

- 1 Receiver
- 2 Transmitter board
- 3 Wireless remote controller
- 4 Remote controller holder
- 5 Alkaline battery of type AAA.LR03
- 6 Unit number label
- 7 Screw for installing remote controller holder
- 8 Installation manual
- 9 Operation manual
- 10 Clamp
- 11 Plastic spacer
- 12 Plastic band
- 13 Sealing

### Note to the installer

Be sure to instruct the customer how to properly operate the system showing him/her the supplied operation manual.

 
## Remote controller installation

### Installing the wireless remote controller


- Do not throw the remote controller or subject it to powerful shocks and do not store the remote controller where it may be exposed to moisture or direct sunlight.
- When operating, point the transmitting part of the remote controller in the direction of the receiver.
- The direct transmitting distance of the remote controller is approximately 23ft (7m).
- The signal cannot be transmitted if something such as curtains blocks the receiver and the remote controller.

#### Installing to a wall or a pillar

- Turn on all the fluorescent lamps in the room, if any, and find a location where the remote controller signals are properly received by the indoor unit (within 23ft (7m)).
- Fix the remote controller holder with the supplied screws.





- Mount the remote controller on to the hook of the remote controller holder and then push it toward the wall.

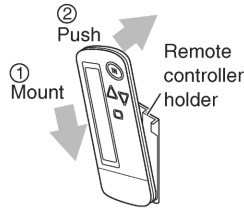

#### How to insert the batteries

 - Slide the back cover to take it off.
- Insert 2 dry batteries AAA, LR03 (alkaline).

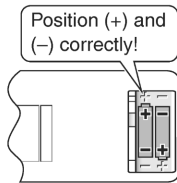

- Replace the back cover.

### Determination of address and MAIN/SUB remote controller

- If setting multiple wireless remote controllers to operate in one room, perform address setting for the receiver and the wireless remote controller.
- If using both a wired remote controller and a wireless remote controller with one indoor unit, change the MAIN/SUB switch of the transmitter board.

## Setting procedure

### Setting the transmitter board

Set the wireless address switch (SS2) on the transmitter board according to the table below.

	Unit No.		
	1	2	3
Wireless address switch (SS2)			

When using both a wired and a wireless remote controller for 1 indoor unit, the wired controller should be set to MAIN. Therefore, set the MAIN/SUB switch (SS1) of the transmitter board to SUB.

	MAIN	SUB
MAIN/SUB switch (SS1)		

### Setting the address of the wireless remote controller

(See figure 3)

- A Field Set mode
- B Address (is factory set to “1”)
- C Display setting

#### Setting from the remote controller

- Hold down the button and the /TEST button for at least 4 seconds to enter the Field Set mode. (Indicated in the display area in the figure.)
- Press the FAN button and select an appropriate display setting (A/B). Each time the button is pressed the display switches between “A” and “B”. Refer to “Display setting A/B” on page 3 for full comprehension of this feature.
- Press the button and button to set the address.
 

Address can be set from 1 to 6, but set it to 1-3 and to same address as the receiver. (The receiver does not work with address 4-6.)
- Press the RESERVE button to confirm the setting.
- Press the /TEST button to quit the Field Set mode and to return to normal display again.

Display setting *⌘*/*Ⓛ*

The wireless remote controller has 2 possible display settings. The standard setting *⌘* permanently indicates all operational items whereas the multi system display setting *Ⓛ* indicates operations for a limited period of time after execution of settings only.

In case the target indoor unit is simultaneously being controlled;

- by another unit in group control,
- by a wired remote controller,
- by a centralized remote controller.

the indoor unit sometimes does not respond to ON/OFF and temperature setting commands from the wireless remote controller.


In order not to confuse the customer with possible discrepancies between the wireless remote controller display and the actual operation state of the indoor unit, it is recommended to set the display on the wireless remote controller to *Ⓛ* in such a control configuration.

Check what setting the customer prefers and adjust the display setting accordingly.

Display setting	Remote controller display	Result of the display setting in case the target indoor unit is simultaneously being controlled by more than 1 device
<i>⌘</i> : standard	All operational items are permanently displayed.	In the operation mode changeover, temperature setting or the like are carried out from the wireless remote controller, the indoor unit rejects the instruction. (Signal receiving sound, 1 long beep or 3 short beeps) As a result, a display discrepancy between the operation state of the indoor unit and the indication on the wireless remote controller display occurs.
<i>Ⓛ</i> : multi system	Operations only remain displayed for a short time after execution of the commands.	Since the indications on the wireless remote controller are turned off, a discrepancy such as described above no longer occurs.

Affix the unit number label

Affix corresponding unit number labels onto both air outlet of the decoration panel and onto back of the wireless remote controller.

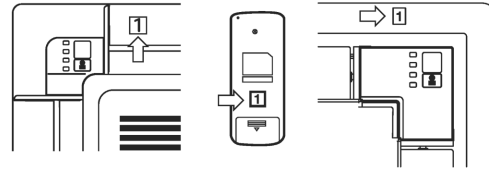

**NOTE** Set the Unit No. of the receiver and the wireless remote controller to be equal. If the settings differ, the signal from the remote controller cannot be transmitted.

Installation of the transmitter board

(See figure 2)

- 1 Electrical wiring box cover
- 2 Transmitter board
- 3 Shorter wire harness
- 4 Longer wire harness
- 5 Clamp
- 6 Electrical wiring box
- 7 Plastic spacer

- 1 Cut off the power supply.
- 2 Remove the electrical wiring box cover as described in the installation manual supplied with the indoor unit.
- 3 Attach four plastic spacers (7) to the transmitter board (2) and install it in the electrical wiring box (6).
- 4 Connect the shorter wire harness from the X2A connector on transmitter board (2) to X24A connector on the printed circuit board in the electrical wiring box of indoor unit. Lay down the shorter wire harness as shown in the figure 2.
- 5 When the receiver is installed bring the longer wire harness to the electrical wiring box of indoor unit and connect it to X1A connector on the transmitter board.
- 6 Clamp the wire harness by the clamp (5) as shown in the figure 2.


Installation of the decoration panel

Install the decoration panel as described in the installation manual supplied with the decoration panel.



**NOTE** Make sure that the wire harness (longer one) from the transmitter board is not caught between the indoor unit and the decoration panel, and between the ceiling and the decoration panel.  
The installation process of the receiver depends on used decoration panel.

**Installation of the receiver in case of BRC082A41W**

- 1 Remove the suction grille as described in the installation manual supplied with the decoration panel.
- 2 Detach the brand name plate part of the decoration panel piece, before attaching the decoration panel. This part is not needed hereafter.
- 3 Remove the electrical wiring box cover as described in the installation manual supplied with the indoor unit. (Be sure to turn off power, before removing the electrical wiring box cover.)

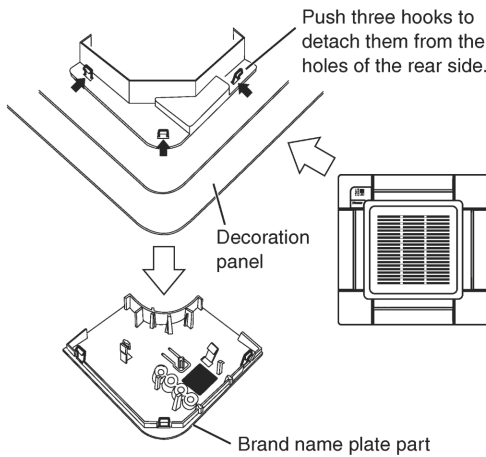

- 4 Pass the wire harness from the receiver through the wiring hole of the decoration panel. Then attach the receiver to the decoration panel. Lead the wire harness to the electrical wiring box on the indoor unit and connect it to X1A connector on the transmitter board.

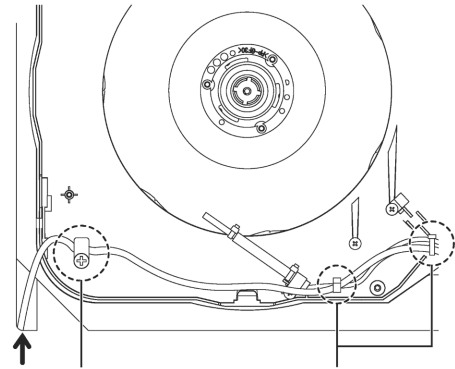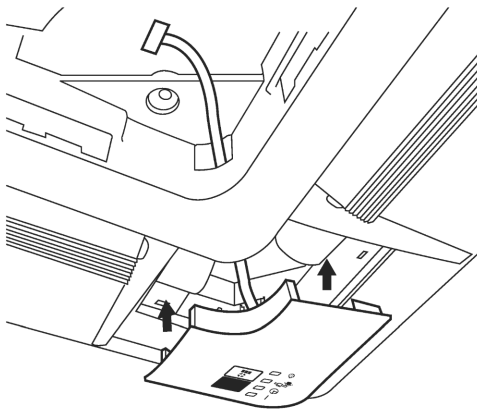


Remove the screw and input the plastic band. Then screw it back. The wire harness goes through the plastic band.


Clamp the wire harness from the receiver to other cables with the clamp.

**Installation of the receiver in case of BRC082A42W/S**




- 1 Remove the suction grille as described in the installation manual supplied with the decoration panel.
- 2 The receiver (1) should be installed in the corner that is surrounded by 2 square marks on one side and 1 square mark on the other, as shown in the illustration. Then remove the plastic corner cover.

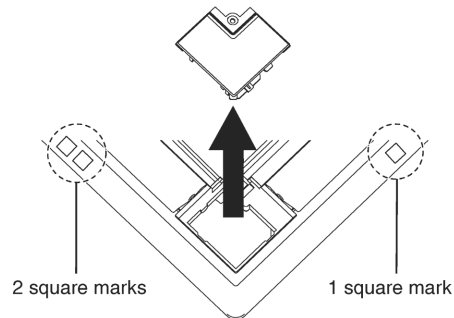

- 3 Break off the plastic cover from back side of the panel.

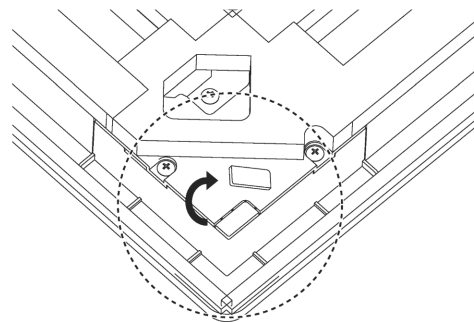

- 4 Pass the wire harness through the hole and insert the cover into its position and screw it.

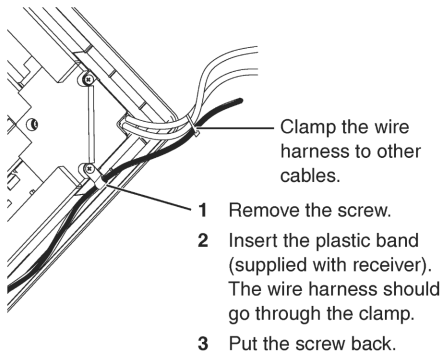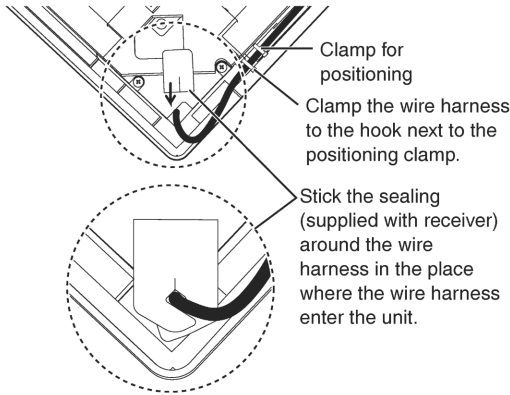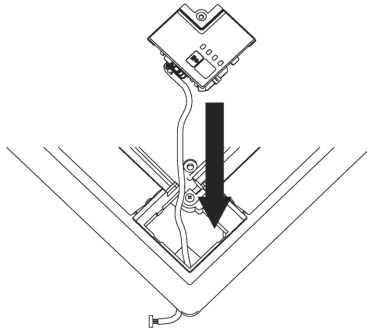

## Field setting

If optional accessories are mounted on the indoor unit, the indoor unit setting may have to be changed. Refer to the instruction manual (option handbook) for each optional accessory.

(See figure 4)

- A Mode No.
- B Field Set mode
- C First code No.
- D Second code No.

### Procedure

- 1 When in normal mode, hold down the /TEST button for at least 4 seconds to enter the Field Set mode.
- 2 Select the desired Mode No. with the MODE button.
- 3 Press the button and select the First code No.
- 4 Press the button and select the Second code No.
- 5 Press the RESERVE button to confirm the settings.
- 6 Press the /TEST button to quit the Field Set mode and to return to normal display again.

**Example**

If the time to clean air filter is set to "Filter Contamination-Heavy", set Mode No. to "13", First code No. to "03", and Second code No. to "02".

Mode No.	First code No.	Description of setting		Second code No.				
				01		02		03
13	03	Sets operation time until AIR FILTER CLEANING TIME INDICATOR lamp lights up. (When dirt and dust levels are high, change the setting to "Filter Contamination-Heavy".)	Long-life filter	Light	±2,500 hrs.	Heavy	±1,250 hrs.	—
	03	Changes AIR FILTER CLEANING TIME INDICATOR lamp on/off settings.		On		Off		—
13	03	Setting air outlet velocity. This setting is to be changed in function of ceiling height (H).		≤8-7/8ft (≤2.7m)	8-7/8<H≤9-13/16ft (2.7<H≤3.0m)	9-13/16<H≤11-1/2ft (3.0<H≤3.5m)		
	04	Selection of air flow direction. This setting is to be changed when blocking pad optional kit is used.		4-way flow	3-way flow	2-way flow		
	04	Airflow direction range setting. This setting is to be changed when range of swing flap movement needs to be changed.		Upper	Medium	Lower		

**NOTE**

Factory settings of the Second code No. are marked in grey backgrounds.

Do not use any settings not listed in the table.

For group control with a wireless remote controller, initial settings for all the indoor units of the group are equal.

(For group control, refer to the installation manual supplied with the indoor unit for group control.)

## 11.6 Outdoor Unit

# Contents

<b>Safety Considerations</b> .....	1	4. Refrigerant piping .....	6
<b>Accessories</b> .....	3	5. Pressure test and evacuating system.....	7
<b>Precautions for Selecting a Location</b> .....	3	6. Refilling refrigerant .....	8
<b>Precautions on Installation</b> .....	4	7. Refrigerant piping work .....	8
<b>Outdoor Unit Installation Diagram</b> .....	4	<b>Wiring</b> .....	9
<b>Installation Space Requirements</b> .....	5	<b>Facility Setting</b>	
<b>Outdoor Unit Installation</b> .....	5	<b>(cooling at low outdoor temperature)</b> .....	11
1. Installing the outdoor unit .....	5	<b>Pump Down Operation</b> .....	11
2. Drain work .....	6	<b>Trial Operation and Testing</b> .....	12
3. Flaring the pipe end.....	6	1. Trial operation and testing .....	12
		2. Test items .....	12

# Safety Considerations





Read these **Safety Considerations for Installation** carefully before installing an air conditioner or heat pump. After completing the installation, make sure that the unit operates properly during the startup operation.


Instruct the user on how to operate and maintain the unit.

Inform users that they should store this installation manual with the operation manual for future reference.


Always use a licensed installer or contractor to install this product. Improper installation can result in water or refrigerant leakage, electric shock, fire, or explosion.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

-  **DANGER** ..... Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** ..... Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** ..... Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
-  **NOTE** ..... Indicates situations that may result in equipment or property-damage accidents only.

-  **DANGER** .....
  - Refrigerant gas is heavier than air and replaces oxygen. A massive leak can lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
  - Do not ground units to water pipes, gas pipes, telephone wires, or lightning rods as incomplete grounding can cause a severe shock hazard resulting in severe injury or death. Additionally, grounding to gas pipes could cause a gas leak and potential explosion causing severe injury or death.

- If refrigerant gas leaks during installation, ventilate the area immediately. Refrigerant gas may produce toxic gas if it comes into contact with fire. Exposure to this gas could cause severe injury or death.
- After completing the installation work, check that the refrigerant gas does not leak throughout the system.
- Do not install unit in an area where flammable materials are present due to risk of explosions that can cause serious injury or death.
- Safely dispose all packing and transportation materials in accordance with federal/state/local laws or ordinances. Packing materials such as nails and other metal or wood parts, including plastic packing materials used for transportation may cause injuries or death by suffocation.

-  **WARNING** .....
  - Only qualified personnel must carry out the installation work. Installation must be done in accordance with this installation manual. Improper installation may result in water leakage, electric shock, or fire.
  - When installing the unit in a small room, take measures to keep the refrigerant concentration from exceeding allowable safety limits. Excessive refrigerant leaks, in the event of an accident in a closed ambient space, can lead to oxygen deficiency.
  - Use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shock, fire, or the unit falling.
  - Install the air conditioner or heat pump on a foundation strong enough that it can withstand the weight of the unit. A foundation of insufficient strength may result in the unit falling and causing injuries.
  - Take into account strong winds, typhoons, or earthquakes when installing. Improper installation may result in the unit falling and causing accidents.



- Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local, state, and national regulations. An insufficient power supply capacity or improper electrical construction may lead to electric shock or fire.
  - Make sure that all wiring is secured, that specified wires are used, and that no external forces act on the terminal connections or wires. Improper connections or installation may result in fire.
  - When wiring, position the wires so that the electrical wiring box cover can be securely fastened. Improper positioning of the electrical wiring box cover may result in electric shock, fire, or the terminals overheating.
  - Before touching electrical parts, turn off the unit.
  - The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
  - Securely fasten the outdoor unit terminal cover (panel). If the terminal cover/panel is not installed properly, dust or water may enter the outdoor unit causing fire or electric shock.
  - When installing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R410A) such as air. Any presence of air or other foreign substance in the refrigerant circuit can cause an abnormal pressure rise or rupture, resulting in injury.
  - Do not change the setting of the protection devices. If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may occur.
- (b) Tight -- R410A does not contain any chlorine, does not destroy the ozone layer, and does not reduce the earth's protection against harmful ultraviolet radiation. R410A can contribute to the greenhouse effect if it is released. Therefore take proper measures to check for the tightness of the refrigerant piping installation. Read the chapter *Refrigerant Piping Work* and follow the procedures.
- Since R410A is a blend, the required additional refrigerant must be charged in its liquid state. If the refrigerant is charged in a state of gas, its composition can change and the system will not work properly.
  - The indoor unit is for R410A. See the catalog for indoor models that can be connected. Normal operation is not possible when connected to other units.
  - Remote controller (wireless kit) transmitting distance can be shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types). Install the indoor unit far away from fluorescent lamps as much as possible.
  - Indoor units are for indoor installation only. Outdoor units can be installed either outdoors or indoors. This unit is for indoor use.
  - Do not install the air conditioner or heat pump in the following locations:
    - (a) Where a mineral oil mist or oil spray or vapor is produced, for example, in a kitchen. Plastic parts may deteriorate and fall off or result in water leakage.
    - (b) Where corrosive gas, such as sulfurous acid gas, is produced. Corroding copper pipes or soldered parts may result in refrigerant leakage.
    - (c) Near machinery emitting electromagnetic waves. Electromagnetic waves may disturb the operation of the control system and cause the unit to malfunction.
    - (d) Where flammable gas may leak, where there is carbon fiber, or ignitable dust suspension in the air, or where volatile flammables such as thinner or gasoline are handled. Operating the unit in such conditions can cause a fire.
  - Take adequate measures to prevent the outdoor unit from being used as a shelter by small animals. Small animals making contact with electrical parts can cause malfunctions, smoke, or fire. Instruct the user to keep the area around the unit clean.





### CAUTION

- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- The heat exchanger fins are sharp enough to cut. To avoid injury wear gloves or cover the fins while working around them.
- Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor, and other refrigerant cycle parts. Your hands may suffer burns or frostbite if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear proper gloves.
- Install drain piping to proper drainage. Improper drain piping may result in water leakage and property damage.
- Insulate piping to prevent condensation.
- Be careful when transporting the product.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- Do not use a charging cylinder. Using a charging cylinder may cause the refrigerant to deteriorate.
- Refrigerant R410A in the system must be kept clean, dry, and tight.
  - (a) Clean and Dry -- Foreign materials (including mineral oils such as SUNISO oil or moisture) should be prevented from getting into the system.

### NOTE

- The outdoor unit should be positioned where the unit and power supply wires (breaker panel to outdoor unit) are at least 10ft (3m) away from any televisions or radios. (The unit may cause interference with the picture or sound.) Depending on the radio waves, a distance of 10ft (3m) may not be sufficient to eliminate the noise.
- Dismantling the unit, treatment of the refrigerant, oil and additional parts must be done in accordance with the relevant local, state, and national regulations.
- Do not use the following tools that are used with conventional refrigerants: gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, or refrigerant recovery equipment.
- If the conventional refrigerant and refrigerator oil are mixed in R410A, the refrigerant may deteriorate.
- This air conditioner or heat pump is an appliance that should not be accessible to the general public.
- As design pressure is 604 psi, the wall thickness of field-installed pipes should be selected in accordance with the relevant local, state, and national regulations.
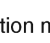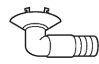
# Accessories

(A) Installation manual 		1	(B) Drain socket  This is at the bottom of the packaging.		1
(C) Drain cap (1) 	09/12 class	4	(D) Drain cap (2) 	09/12 class	2
	15/18/24 class	6		15/18/24 class	3
(E) Warranty		1			

# Precautions for Selecting a Location

- 1) Choose a place solid enough to bear the weight and vibration of the unit, where the operating sound will not be amplified.
- 2) Choose a location where the hot air discharged from the unit or the operating sound will not cause a nuisance to the neighbors of the user.
- 3) Avoid locations, such as near bedrooms, where the operating sound may cause disturbance.
- 4) There must be sufficient space to carry the unit into and out of the site.
- 5) There must be sufficient space for air passage and no obstructions around the air inlet and the air outlet.
- 6) The site must not be prone to flammable gas leaks in the surrounding area.
- 7) In coastal areas or other places with a salty atmosphere or one containing sulfate gas, corrosion may shorten the life of the air conditioner.
- 8) Since water will flow from the drain of the outdoor unit, do not place under the unit anything which must be kept away from moisture.

**NOTE**

Cannot be installed suspended from a ceiling or stacked.

**⚠ CAUTION**

When operating the air conditioner in a low outdoor ambient temperature, be sure to follow the instructions described below.

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, it is recommended to install a baffle plate on the air discharge side of the outdoor unit.
- In heavy snow areas, select an installation site where the snow will not affect the unit.


- Construct a large canopy.
- Construct a pedestal.



Install the unit high enough off the ground to prevent burying in snow.

# Precautions on Installation

- Check the strength and level of the installation surface so that the unit does not cause any operating vibrations or noise after installation.
- Fix the unit in place securely using foundation bolts, as in the figure. (Prepare 4 sets of 5/16 inch (M8) or 3/8 inch (M10) foundation bolts, nuts and washers; all separately available.)
- It is best to screw in the foundation bolts until their ends are 3/4 inch (20mm) from the foundation surface.

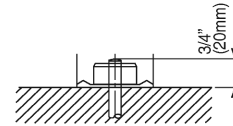

# Outdoor Unit Installation Diagram

	RX09/12*	RX15/18*	RX24*
Max. allowable piping length	65-5/8ft (20m)	98-1/2ft (30m)	
Min. allowable piping length	10ft (3m)		
Max. allowable piping height	49-1/4ft (15m)	65-5/8ft (20m)	
Additional refrigerant required for refrigerant pipe exceeding 32.8ft (10m) in length.	0.21oz/ft (20g/m)		
Gas pipe	O.D. 3/8 inch (9.5mm)	O.D. 1/2 inch (12.7mm)	O.D. 5/8 inch (15.9mm)
Liquid pipe	O.D. 1/4 inch (6.4mm)		

\*Be sure to add the proper amount of additional refrigerant. Failure to do so may result in reduced performance.  
 \*\*The suggested shortest pipe length is 10ft (3m), in order to avoid noise from the outdoor unit and vibration. (Mechanical noise and vibration may occur depending on how the unit is installed and the environment in which it is used.)

Allow 11-13/16" (300mm) of work space below the ceiling surface.


Wrap the insulation pipe with finishing tape from bottom to top.

**CAUTION**  
 Keep the piping length between 10ft (3m) and 65-5/8ft (20m) (for 09/12 class), 10ft (3m) and 98-1/2ft (30m) (for 15/18/24 class).

	X	Y	Z
09/12 class	18-1/2 inch (470mm)	12-1/8 inch (308mm)	3-13/16 inch (97mm)
15/18/24 class	23-5/8 inch (600mm)	13-5/8 inch (346mm)	4-15/16 inch (125mm)

In sites with poor drainage, use block bases for the outdoor unit. Adjust foot height until the unit is level. Otherwise, water leakage or pooling of water may occur.

Appearance of outdoor units may differ from some models.

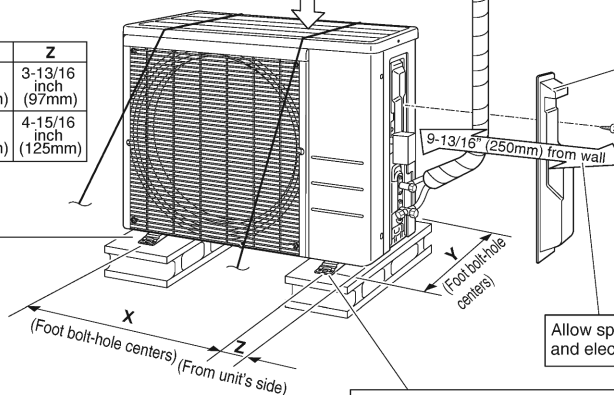

**Stop valve cover**  
**How to remove the stop valve cover**  
 1) Remove the screw on the stop valve cover.  
 2) Slide the stop valve cover downward to remove it.  
**How to attach the stop valve cover**  
 1) Insert the upper part of the stop valve cover into the outdoor unit.  
 2) Tighten the screw.


Allow space for piping and electrical servicing.

Where there is a danger of the unit falling, use foot bolts, or wires.


# Installation Space Requirements

- Position the unit on a horizontal surface. Any tilt in the unit should be 3° or less to the horizontal.
- Where a wall or other obstacle is in the path of the outdoor unit's intake or exhaust airflow, follow the installation space requirements below.
- For any of the below installation patterns, the wall height on the outlet side should be 47-1/4 inch (1200mm) or less.


## 09/12 class

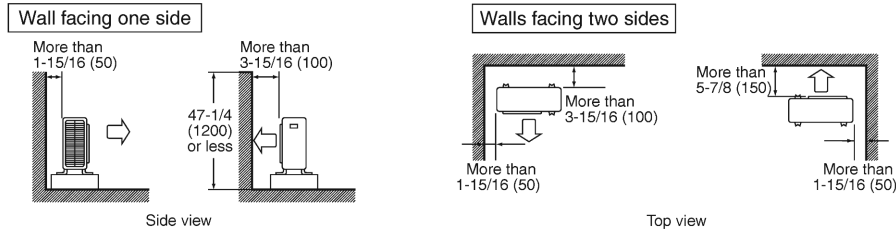


## Walls facing three sides

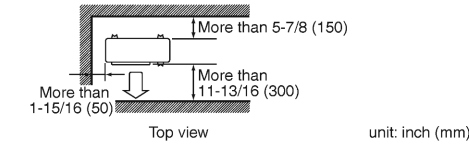

## 15/18/24 class

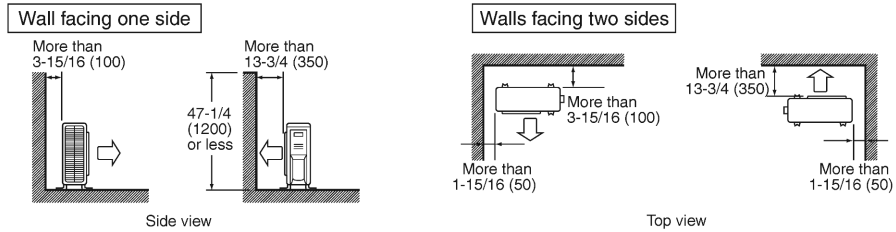

## Walls facing three sides

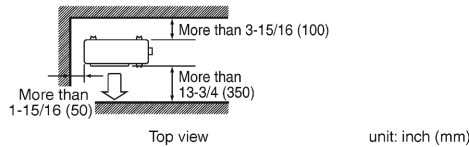


# Outdoor Unit Installation

## 1. Installing the outdoor unit

- 1) When installing the outdoor unit, refer to "Precautions for Selecting a Location" and the "Outdoor Unit Installation Diagram".
- 2) If drain work is necessary, follow the procedures on the next page.


## 2. Drain work

- If the drain port is covered by a mounting base or floor surface, place additional foot bases of at least 1-1/4 inch (30mm) in height under the outdoor unit's feet.
  - In cold areas, do not use a drain socket, drain caps (1,2) and a drain hose with the outdoor unit. (Drain water may freeze, impairing heating performance.)
- Attach ① drain cap (1) and ② drain cap (2).
  - Attach ③ drain socket.
    - When attaching ③ drain socket to the bottom frame, make sure to connect the drain hose to the drain socket first.

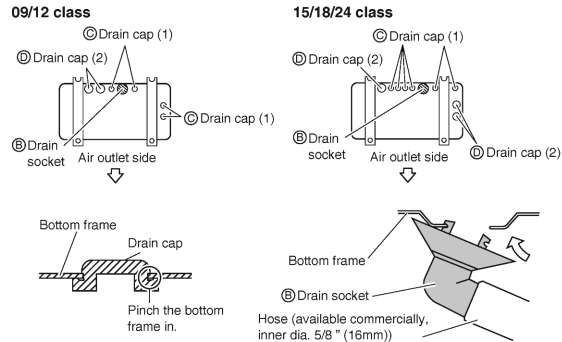

## 3. Flaring the pipe end

- Cut the pipe end with a pipe cutter.
- Remove burrs with the cut surface facing downward, so that the filings do not enter the pipe.
- Put the flare nut on the pipe.
- Flare the pipe.
- Check that the flaring has been done correctly.

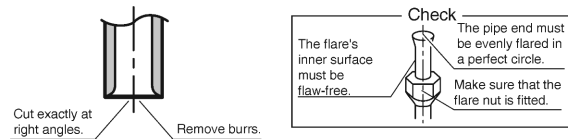

**Flaring**

Set exactly at the position shown below.

A	Flare tool for R410A		
	Clutch-type	Clutch-type (Rigid-type)	Wing-nut type (Imperial-type)
	0-0.020 inch (0-0.5mm)	0.039-0.059 inch (1.0-1.5mm)	0.059-0.079 inch (1.5-2.0mm)

### ⚠ WARNING


- Do not apply mineral oil to the flare.
- Prevent mineral oil from getting into the system as this would reduce the service life of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with this unit.
- Never install a dryer to this R410A unit in order to guarantee its service life.
- The drying material may dissolve and damage the system.
- Incomplete flaring may result in refrigerant gas leakage.

## 4. Refrigerant piping

### ⚠ CAUTION

- Use the flare nut fixed to the main unit. (This is to prevent the flare nut from cracking as a result of deterioration over time.)
  - To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
  - Use a torque wrench when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.
- Align the centers of both flares and tighten the flare nuts 3 or 4 turns by hand, then tighten them fully with a spanner and a torque wrench.

Flare nut tightening torque				
Gas side			Liquid side	
3/8 inch (9.5mm)	1/2 inch (12.7mm)	5/8 inch (15.9mm)	1/4 inch (6.4mm)	
24-1/8 – 29-1/2 lbf • ft (32.7-39.9 N • m)	36-1/2 – 44-1/2 lbf • ft (49.5-60.3 N • m)	45-5/8 – 55-5/8 lbf • ft (61.8-75.4 N • m)	10-1/2 – 12-3/4 lbf • ft (14.2-17.2 N • m)	
Width across flats	11/16 inch (17mm)	3/4 inch (19mm)	7/8 inch (22mm)	1-1/16 inch (27mm)
Valve cap tightening torque	10-1/2 – 12-5/8 lbf • ft (14.2-17.2 N • m)	12-5/8 – 15-3/8 lbf • ft (17.1-20.9 N • m)	16 – 20-1/4 lbf • ft (21.6-27.4 N • m)	35-3/8 – 44-1/8 lbf • ft (48-59.8 N • m)
Service port cap tightening torque				
8 – 10-7/8 lbf • ft (10.8-14.7 N • m)				

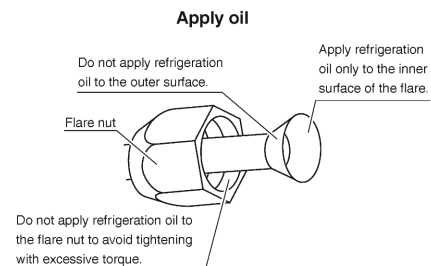


# Outdoor Unit Installation

## 5. Pressure test and evacuating system

### ⚠ WARNING

- Make sure that air or any matter other than refrigerant (R410A) does not get into the refrigeration cycle.
- If refrigerant gas leaks should occur, ventilate the room as soon and as much as possible.
- R410A, as well as other refrigerants, should always be recovered and never be released directly into the environment.
- Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.

- When piping work is complete, it is necessary to perform a pressure test and evacuate system with a vacuum pump.
- If using additional refrigerant, purge the air from the refrigerant pipes and indoor unit using a vacuum pump, then charge additional refrigerant.
- Use a hexagonal wrench (3/16 inch (4mm)) to operate the stop valve rod.
- All refrigerant pipe joints should be tightened with a torque wrench to the specified tightening torque.

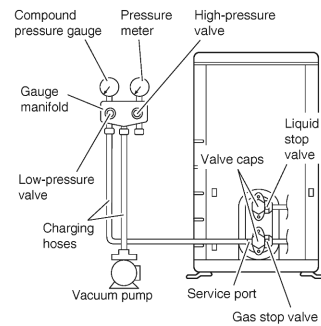

- 1) Pressurize the liquid pipe and gas pipe from the service ports of each stop valve to 550psi (3.8MPa) (do not pressurize more than 550psi (3.8MPa)) for 1 hour minimum, 24 hours recommended. If there is a pressure drop, check for leaks, make repairs and perform the pressure test again.
  - 2) Connect the gauge manifold's charging hose to the gas stop valve's service port.
  - 3) Fully open the gauge manifold's low-pressure valve (Lo) and completely close its high-pressure valve (Hi). (High-pressure valve will require no further operation.)
  - 4) Evacuate system using vacuum pump to below 500 microns for 1 hour minimum.
  - 5) Close the gauge manifold's low-pressure valve (Lo) and stop vacuum pump. (Maintain this condition for 4-5 minutes to make sure that the compound pressure gauge pointer does not swing back.)\*1
  - 6) Remove the valve caps from the liquid stop valve and gas stop valve.
  - 7) Turn the liquid stop valve's rod 90° counter-clockwise with a hexagonal wrench to open the valve. Close it after 5 seconds, and check for gas leakage. Using soapy water, check for gas leakage from the indoor unit's flare and outdoor unit's flare and valve rods. After the check is complete, wipe all soapy water off.
  - 8) Disconnect the charging hose from the gas stop valve's service port, then fully open the liquid and gas stop valves. (Do not attempt to turn the valve rod further than it can go.)
  - 9) Tighten the valve caps and service port caps for the liquid and gas stop valves with a torque wrench to the specified torques. Refer to "4. Refrigerant piping" on page 6 for details.
- \*1 If the compound pressure gauge pointer swings back, the refrigerant may have water content or there may be a loose pipe joint. Check all pipe joints and retighten nuts as needed, then repeat steps 3) through 5).

## 6. Refilling refrigerant

Check the type of refrigerant to be used on the machine nameplate.

### Precautions when adding R410A

#### Fill from the liquid pipe in liquid form.

R410A is a mixed refrigerant, so adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

- 1) Before filling, check whether the cylinder has a siphon attached or not. (It should have something like “liquid filling siphon attached” displayed on it.)

Filling a cylinder with an attached siphon



Stand the cylinder upright when filling.

(There is a siphon pipe inside, so the cylinder need not be upside-down to fill with liquid.)

Filling other cylinders




Turn the cylinder upside-down when filling.

- Be sure to use the R410A tools to ensure pressure and to prevent foreign objects entering.

## 7. Refrigerant piping work

### 7-1. Cautions on pipe handling

- Protect the open end of the pipe from dust and moisture.
- All pipe bends should be as gentle as possible. Use a pipe bender for bending.

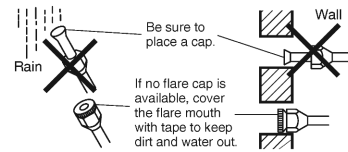


### 7-2. Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

- Insulation material: Polyethylene foam  
Heat transfer rate: 0.041 to 0.052W/mK (0.024 to 0.030Btu/ft<sup>2</sup>h°F (0.035 to 0.045kcal/mh°C))  
Be sure to use insulation that is designed for use with HVAC Systems.
- ACR Copper only.
- Be sure to insulate both the gas and liquid piping and observe the insulation dimensions as below.

	Piping size	Minimum bend radius	Piping thickness	Thermal insulation size	Thermal insulation thickness
Gas side	O.D. 3/8 inch (9.5mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 15/32-19/32 inch (12-15mm)	13/32 inch (10mm) Min.
	O.D. 1/2 inch (12.7mm)	1-9/16 inch (40mm) or more		I.D. 9/16-5/8 inch (14-16mm)	
	O.D. 5/8 inch (15.9mm)	1-15/16 inch (50mm) or more	0.039 inch (1.0mm) (C1220T-O)	I.D. 5/8-13/16 inch (16-20mm)	
Liquid side	O.D. 1/4 inch (6.4mm)	1-3/16 inch (30mm) or more	0.031 inch (0.8mm) (C1220T-O)	I.D. 5/16-13/32 inch (8-10mm)	

- Use separate thermal insulation pipes for gas and liquid refrigerant pipes.

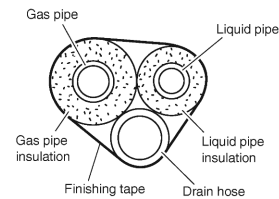


# Wiring

## ⚠ WARNING

- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electric shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- The circuit must be protected with safety devices in accordance with local and national codes, i.e. a circuit breaker.
- Use an all-pole disconnection type circuit breaker with at least 1/8 inch (3mm) between the contact point gaps.
- When carrying out wiring, take care not to pull at the conduit.
- Do not connect the power wire to the indoor unit. Doing so may cause electric shock or fire.


- Do not turn on the circuit breaker until all work is completed.
  - 1) Strip the insulation from the wire (3/4 inch (20mm)).
  - 2) Connect the inter-unit wires between the indoor and outdoor units so that the terminal numbers match. Tighten the terminal screws securely. It is recommended that a slot-head screwdriver be used to tighten the screws. The screws are packed with the terminal block.

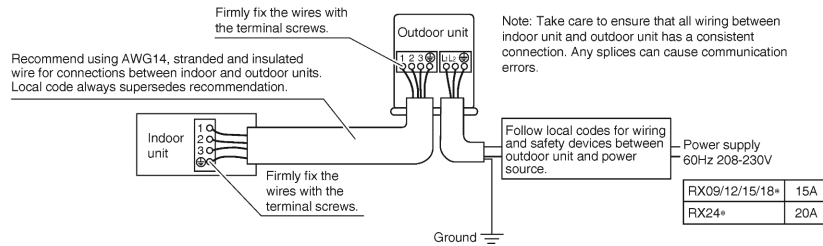

### 09/12 class

[Method of mounting conduit]

- A protection plate is fixed for protection from the high-voltage section.
  - 1) Dismount the stop valve cover by removing the screw.
  - 2) Dismount the protection plate by removing the 2 screws.
  - 3) Dismount the conduit mounting cover by removing the 2 screws.
  - 4) Pass wires through the conduit and secure them with a lock nut.
  - 5) After completing the work, reattach the stop valve cover, the conduit mounting cover, and the protection plate to its original position.

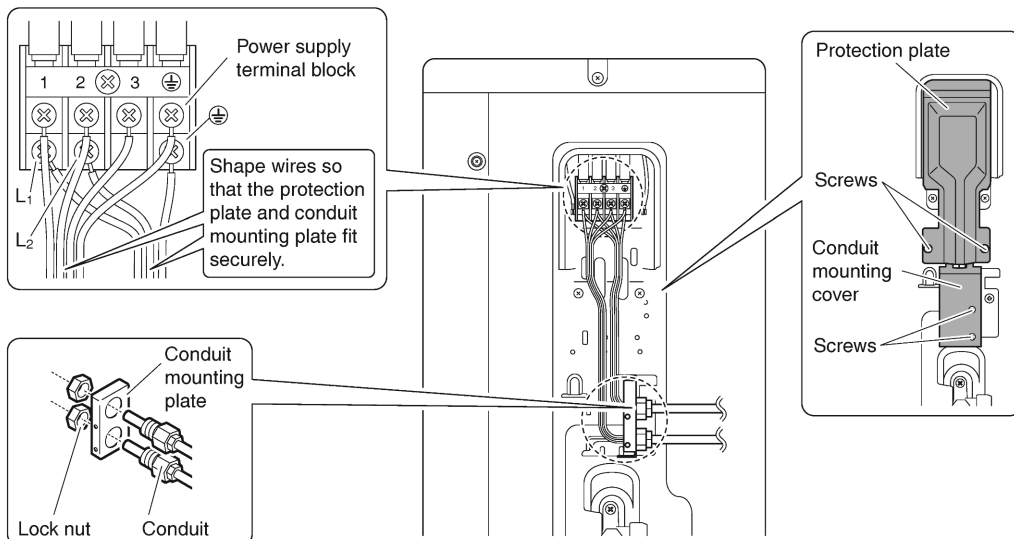




**15/18/24 class**

[Method of mounting conduit]


- 1) Dismount the service lid by removing the 2 screws.
- 2) Pass wires through the conduit and secure them with a lock nut.
- 3) After completing the work, reattach the service lid to its original position.

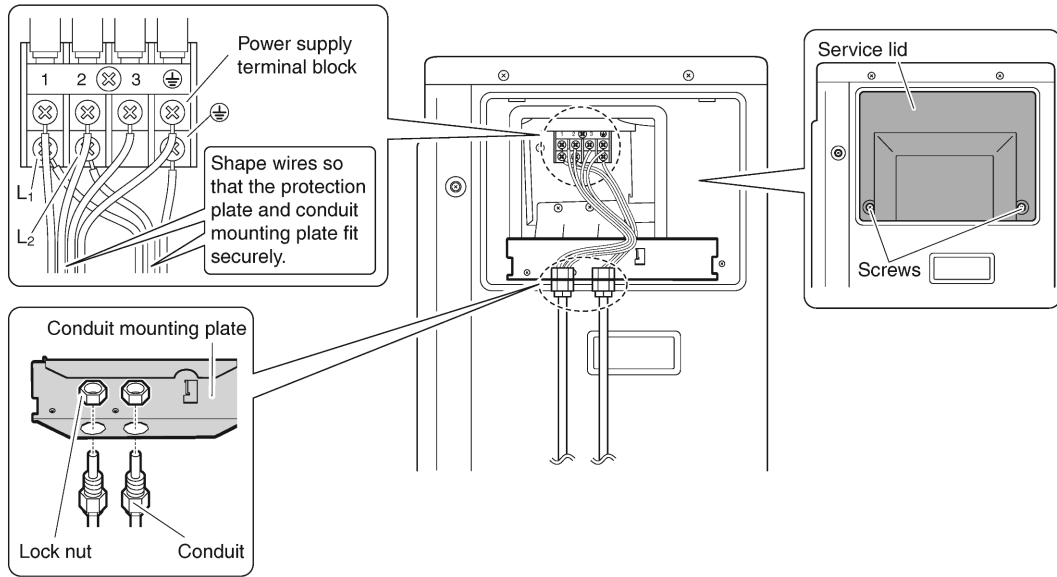


**CAUTION**

**Precautions to be taken for power supply wiring**

- When using stranded wires, make sure to use the round crimp-style terminal for connection to the power supply terminal block.

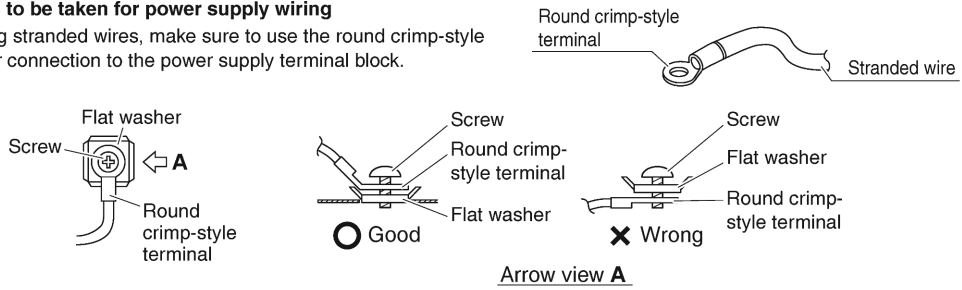

- When connecting the inter-unit wires to the terminal block using a single core wire, be sure to curl the end of the lead. Improper work may cause heat and fires.

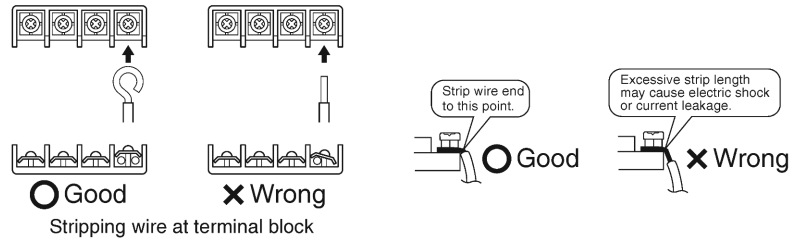

# Facility Setting (cooling at low outdoor temperature)

This function is limited only for facilities (the target of air conditioning is equipment (such as computer)).  
Never use it in a residence or office (the space where there is a human).

- Cutting jumper 6 (J6) on the circuit board will extend the operation range to 14°F (-10°C). Installing an air direction adjustment grille (sold separately) will further extend the operation range to -4°F (-20°C). In these cases, the unit will stop operating if the outdoor temperature falls below -4°F (-20°C), restarting once the temperature rises above this level.
  - 1) Remove the top plate of the outdoor unit. (09/12 class: 3 screws, 15/18/24 class: 6 screws)
  - 2) Remove the front plate. (09/12 class: 4 screws, 15/18/24 class: 8 screws)
  - 3) Cut the jumper (J6) of the PCB inside.


## ⚠ CAUTION

- If the outdoor unit is installed where the heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
- Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
- Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used. A humidifier might cause dew jumping from the indoor unit outlet vent.
- Cutting jumper 6 (J6) sets the indoor fan tap to the highest position. Notify the user about this.

# Pump Down Operation

In order to protect the environment, be sure to pump down when relocating or disposing of the unit.

- 1) Remove the valve cap from the liquid stop valve and gas stop valve.
- 2) Carry out forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop forced cooling operation.
- 5) Attach the valve cap once procedures are complete.

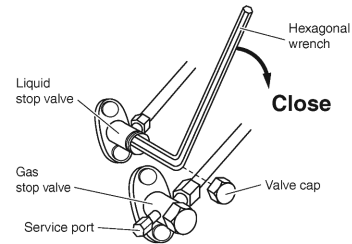


## Forced cooling operation




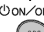
### ■ Using the indoor unit's remote controller


[For wired remote controller]

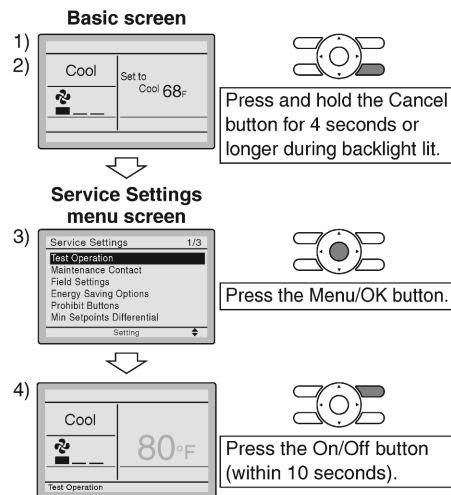- 1) Set to COOL operation using the remote controller.
- 2) Press and hold the Cancel button for 4 seconds or longer. Service settings menu is displayed.
- 3) Select **Test Operation** in the service settings menu, and press the Menu/OK button. Basic screen returns and "Test Operation" is displayed at the bottom.
- 4) Press the On/Off button within 10 seconds, and the forced cooling operation starts.
  - Forced cooling operation will stop automatically after about 15 minutes. To stop the operation, press the On/Off button.



[For wireless remote controller]

- 1) Press  and select the COOL operation.
  - 2) Press  twice. "Test" is displayed.
  - 3) Press  within 10 seconds, and the forced cooling operation starts.
- Forced cooling operation will stop automatically after about 15 minutes.
- To stop the operation, press .

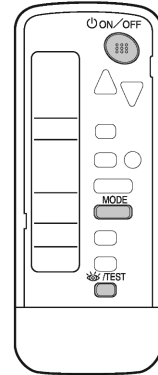

# Trial Operation and Testing

## 1. Trial operation and testing

Refer to the installation manual for the indoor unit.

## 2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly grounded.	Electrical leakage	
The specified wires are used for inter-unit wiring.	No operation or burn damage	
Indoor or outdoor unit's air inlet or air outlet are unobstructed.	Incomplete cooling/heating function	
Stop valves are opened.	Incomplete cooling/heating function	
Check that the connector of the lead wires of the decoration panel is connected securely.	Louvers do not move	
Indoor unit properly receives wireless remote control commands.	No operation	

# 12. Operation Manual

## Contents

### ■ Read Before Operation

Safety Considerations ..... 1

Names of Parts ..... 4

### ■ Care

Care and Cleaning ..... 5


## Safety Considerations


Read these **Safety Considerations for Operations** carefully before operating an air conditioner or heat pump.


Make sure that the unit operates properly during the startup operation. Instruct the user on how to operate and maintain the unit.


Inform users that they should store this operation manual with the installation manual for future reference.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

 **DANGER** ..... Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING** ..... Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** ..... Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **NOTE** ..... Indicates situations that may result in equipment or property-damage accidents only.

### **DANGER**

- Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.
- Any abnormalities in the operation of the air conditioner or heat pump, such as smoke or fire, could result in severe injury or death. Turn off the power and contact your dealer immediately.
- Refrigerant gas may produce toxic gas if it comes into contact with fire, such as from a fan heater, stove, or cooking device. Exposure to this gas could cause severe injury or death.
- For refrigerant leakage, consult your dealer. Refrigerant gas is heavier than air and replaces oxygen. A massive leak could lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- If equipment utilizing a burner is used in the same room as the air conditioner or heat pump, there is the danger of oxygen deficiency which could lead to an asphyxiation hazard resulting in serious injury or death. Be sure to ventilate the room sufficiently to avoid this hazard.
- Safely dispose of the packing materials. Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death by suffocation.

### WARNING

- Contact your dealer for repair and maintenance. Improper repair and maintenance may result in water leakage, electric shock, and fire. Only use accessories made by Daikin that are specifically designed for use with the equipment and have them installed by a professional.
- Contact your dealer to move and reinstall the air conditioner or heat pump. Incomplete installation may result in water leakage, electric shock, and fire.
- Never let the indoor unit or the remote controller get wet. Water can cause an electric shock or a fire.
- Never use flammable spray such as hair spray, lacquer, or paint near the unit. Flammable spray may cause a fire.
- When a fuse blows out, never replace it with one of incorrect ampere ratings or different wires. Always replace any blown fuse with a fuse of the same specification.
- Never inspect or service the unit by yourself. Contact a qualified service person to perform this work.
- Turn off all electrical power before doing any maintenance to avoid the risk of serious electric shock; never sprinkle or spill water or liquids on the unit.
- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Do not allow children to play on or around the unit to prevent injury.
- The heat exchanger fins are sharp enough to cut. To avoid injury wear gloves or cover the fins while working around them.
- Do not put a finger or other objects into the air inlet or air outlet. The fan is rotating at high speed and will cause injury.
- Check the unit foundation for damage on a continuous basis, especially if it has been in use for a long time. If left in a damaged condition the unit may fall and cause injury.
- Never touch the internal parts of the controller. To check and adjust internal parts, contact your dealer.
- Be sure to establish a ground.  
Do not ground the unit to a utility pipe, arrester, or telephone ground. Incomplete grounding may cause electrical shock, or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.
- Be sure to install a ground fault circuit interrupter. Failure to install a ground fault circuit interrupter may result in electric shock or fire.

### CAUTION

- Do not use the air conditioner or heat pump for any other purposes other than comfort cooling or heating. Do not use the unit for cooling precision instruments, food, plants, animals or works of art.
- Do not place items under the indoor unit as they may be damaged by condensates that may form if the humidity is above 80% or if the drain outlet gets blocked.
- Before cleaning, stop the operation of the unit by turning the power off or by pulling the supply cord out from its receptacle. Otherwise, an electric shock and injury may result.
- Do not wash the air conditioner or heat pump with excessive water. An electric shock or fire may result.
- Avoid placing the controller in a spot splashed with water. Water entering the controller may cause an electric shock or damage the internal electronic parts.
- Do not operate the air conditioner or heat pump when using a room-fumigation type of insecticide. Failure to observe this could cause the chemicals to be deposited in the unit and can endanger the health of those who are hypersensitive to chemicals.
- Do not turn off the power immediately after stopping operation. Always wait for at least 5 minutes before turning off the power. Otherwise, water leakage may occur.
- The appliance is not intended for use by young children or infirm persons without supervision.
- The remote controller should be kept away from children so they cannot play with it.
- Consult with the installation contractor for cleaning.
- Incorrect cleaning of the inside of the air conditioner or heat pump could make the plastics parts break and cause water leakage or electric shock.
- Do not touch the air inlet or aluminum fin of the air conditioner or heat pump as they can cut and cause injury.
- Do not place objects in direct proximity of the outdoor unit. Do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, animals can cause the unit to malfunction, and cause smoke or fire when they make contact with electrical parts.
- For care and cleaning, call service personnel.

# Safety Considerations

## NOTE


- Never press the button of the remote controller with a hard, pointed object. The remote controller may be damaged.
- Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
- Do not place appliances that produce open flames in places that are exposed to the airflow of the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.
- Do not expose the controller to direct sunlight. The LCD display can become discolored and may fail to display the data.
- Do not wipe the controller operation panel with benzene, thinner, chemical dust cloth, etc. The panel may get discolored or the coating can peel off. If it is heavily dirty, soak a cloth in a water-diluted neutral detergent, squeeze it well and wipe the panel clean. Then wipe it with another dry cloth.
- Dismantling of the unit, disposal of the refrigerant, oil, and additional parts, should be done in accordance with the relevant local, state, and national regulations.
- Operate the air conditioner or heat pump in a sufficiently ventilated area and not surrounded by obstacles. Do not use the air conditioner or heat pump in the following places.
  - a. Places with a mist of mineral oil, such as cutting oil.
  - b. Locations such as coastal areas where there is a lot of salt in the air.
  - c. Locations such as hot springs where there is a lot of sulfur in the air.
  - d. Locations such as factories where the power voltage varies a lot.
  - e. In cars, boats, and other vehicles.
  - f. Locations such as kitchens where oil may splatter or where there is steam in the air.
  - g. Locations where equipment produces electromagnetic waves.
  - h. Places with an acid or alkaline mist.
  - i. Places where fallen leaves can accumulate or where weeds can grow.
- Take snow protection measures. Contact your dealer for the details of snow protection measures, such as the use of a snow protection hood.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with your dealer for electrical work and grounding work.
- Pay attention to operating sound. Be sure to use the following places:
  - a. Places that can sufficiently withstand the weight of the air conditioner or heat pump yet can suppress the operating sound and vibration.
  - b. Places where warm air from the air outlet of the outdoor unit or the operating sound of the outdoor unit does not annoy neighbors.
- Make sure that there are no obstacles close to the outdoor unit. Obstacles close to the outdoor unit may drop the performance of the outdoor unit or increase the operating sound of the outdoor unit.
- Consult your dealer if the air conditioner or heat pump in operation generates unusual noise.
- Make sure that the drainpipe is installed properly to drain water. If no water is discharged from the drainpipe while the air conditioner or heat pump is in the cooling mode, the drainpipe may be clogged with dust or dirt and water leakage from the indoor unit may occur. Stop operating the air conditioner or heat pump and contact your dealer.

This is an appliance that is not accessible to the general public.

Read Before Operation


## Names of Parts

### Indoor Unit

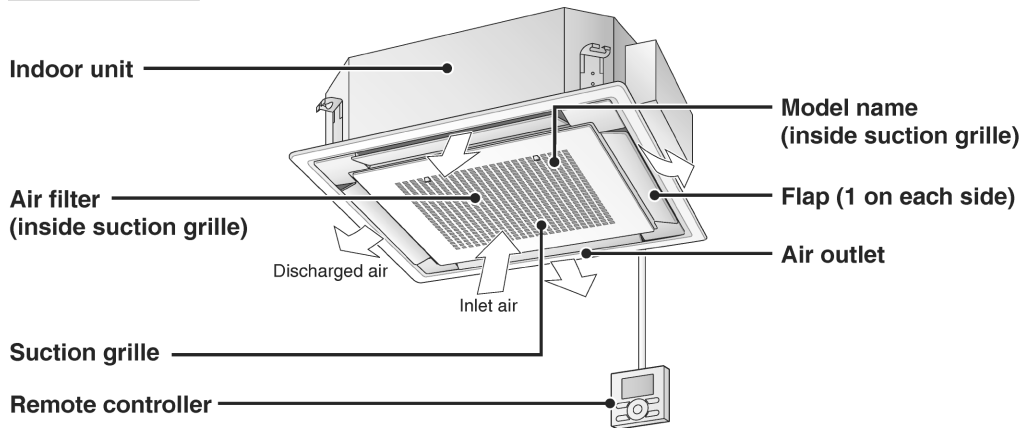


• The appearance of the suction grille and remote controller may differ between different models.

### Decoration panel

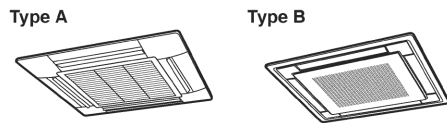


### Remote controller

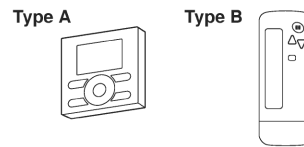

### Outdoor Unit

• The appearance of the outdoor unit may differ between different models.

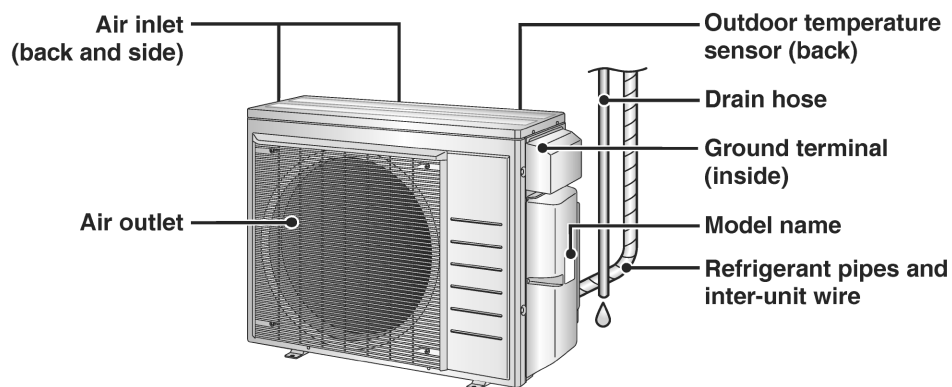

Care

# Care and Cleaning

## ⚠ WARNING

- Only a qualified service person is allowed to perform maintenance.
- Before cleaning, be sure to stop unit operation and turn off the circuit breaker. Otherwise, an electric shock and injury may result.
- Contact a qualified person regarding the attachment of accessories and be sure to use only accessories specified by the manufacturer. If an accessory is attached incorrectly, water leakage, an electric shock, or fire may result.

## ⚠ CAUTION

- When cleaning, use a sturdy and stable stand and watch your step.
- Make sure to firmly support the suction grille with your hand while performing maintenance tasks to prevent it from falling out.

### ■ Quick reference

#### Cleaning parts

##### Outside panel and flaps

- Wipe the parts with a soft cloth.
- When it is difficult to remove stains, use water or a neutral detergent.
- If the flaps are stained severely, contact your dealer and have the flaps replaced.

If dirty

##### Air filter

- Vacuum dust or wash the filter.

When the air filter cleaning time indicator lamp on the decoration panel lights up or when "Time to clean filter" displays on the wired remote controller

▶ Page 6

##### Remote controller


- Wipe them with a soft cloth.

If dirty

##### Suction grille

- Wipe it with a soft damp cloth.

If dirty ▶ Page 7,8

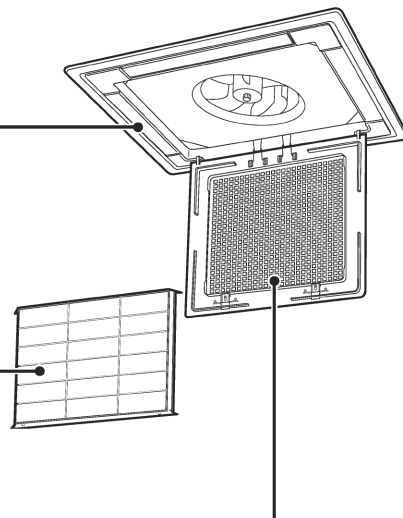

#### Notes on cleaning

For cleaning, do not use any of the following:

- Water hotter than 104°F (40°C)
- Volatile liquid such as benzene, gasoline and thinner
- Polishing compounds or liquid insecticide
- Rough materials such as a scrubbing brush






## ■ Cleaning the air filter

Clean the air filter when the air filter cleaning time indicator lamp on the decoration panel lights up or when "Time to clean filter" displays on the wired remote controller.

- If the unit is installed in a room where the impurity content of the air is high, clean the filter more frequently.
- If the filter has become difficult to clean, replace the air filter. (Additional air filter sold separately.)


### 1. Open the suction grille.

- Push the 2 catches away from you and slowly open the suction grille. (To close, perform the steps in reverse.)

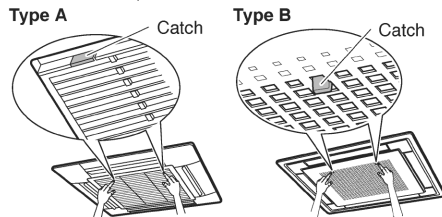


### 2. Remove the air filter.

- Pull the knobs of the air filter downward to disconnect the hooks, and remove the air filter.

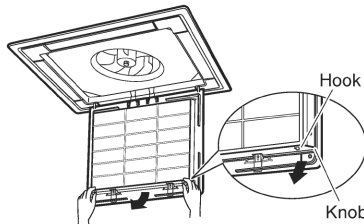

### 3. Clean the air filter with a vacuum cleaner or wash it with water.

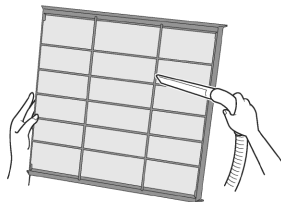


### If the dust does not come off easily

- Wash the air filter using a soft brush and a neutral detergent, then let it dry in the shade.



### 4. Reattach the air filter.

- 4-1 Hook one side of the air filter on to the protrusions on the suction grille.
- 4-2 Push the other side of the air filter into place.

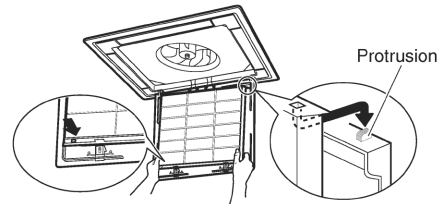

### 5. Close the suction grille.

- Refer to STEP 1.

### 6. After turning on the power, reset the filter sign in accordance with the instructions in the operation manual for the wired remote controller or wireless remote controller.

- The air filter cleaning time indicator lamp on the decoration panel turns off or "Time to clean filter" disappears from the display on the wired remote controller.


Care

## Care and Cleaning

### ■ Cleaning the suction grille (for type A)


#### 1. Open the suction grille.

- Push the 2 catches away from you and slowly open the suction grille. (To close, perform the steps in reverse.)

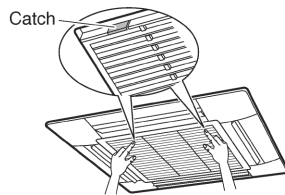

#### 2. Remove the suction grille.

- Open the suction grille until it is 45 degrees to the ceiling and then lift it upward.

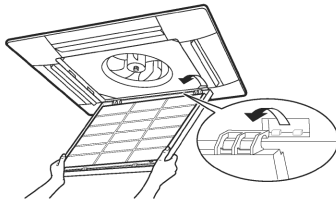

#### 3. Remove the air filter. ▶ Page 6

#### 4. Clean the suction grille.

Wash with a soft bristle brush and a neutral detergent or water, and dry thoroughly.



- **When very dirty**  
Directly apply the type of detergent used for cleaning ventilation fans or ovens, wait for about 10 minutes, and then rinse with water.

#### 5. Reattach the air filter. ▶ Page 6

#### 6. Reattach the suction grille.

- Refer to STEP 2.


#### 7. Close the suction grille.

- Refer to STEP 1.

### ■ Cleaning the suction grille (for type B)


#### 1. Open the suction grille.

- Push the 2 catches away from you and slowly open the suction grille. (To close, perform the steps in reverse.)

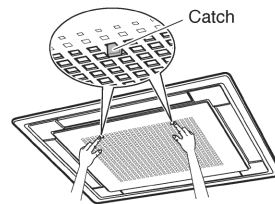

#### 2. Remove the suction grille.

- Open the suction grille so that it hangs by the hinges at 90 degrees to the ceiling.
- Pinch the wire catches inward as shown in the figure.

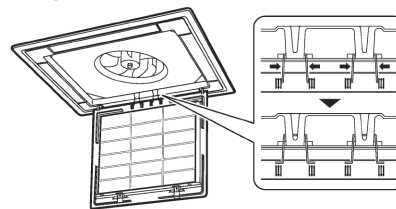

#### 3. Remove the air filter. ▶ Page 6

#### 4. Clean the suction grille.

Wash with a soft bristle brush and a neutral detergent or water, and dry thoroughly.



- **When very dirty**  
Directly apply the type of detergent used for cleaning ventilation fans or ovens, wait for about 10 minutes, and then rinse with water.

#### 5. Reattach the air filter. ▶Page 6

#### 6. Reattach the suction grille.

- Refer to STEP 2.

#### 7. Close the suction grille.

- Refer to STEP 1.

#### ■ Prior to a long period of non-use

#### 1. Operate the FAN mode for several hours to dry out the inside.

- To start the operation, refer to the operation manual for the remote controller.

#### 2. After operation stops, turn off the circuit breaker for the room air conditioner.

#### 3. Clean the air filter and reattach it.

#### 4. To prevent battery leakage, take out the batteries from the remote controller. (Only for the wireless remote controller)

#### ■ We recommend periodical maintenance

- In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a qualified contractor.
- For qualified contractor maintenance, please contact the dealer where you bought the air conditioner.

## 12.1 With <BRC1E73> Wired Remote Controller

# Safety Considerations




The original instructions are written in English. All other languages are translation of the original instructions.

Read these **SAFETY CONSIDERATIONS** carefully before operating the remote controller.





Train the customer to operate and maintain the remote controller.






Inform customers that they should store this Operations Manual with the Installation Manual for future reference.

Meanings of **WARNING** and **CAUTION** Symbols:







 <b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 <b>NOTE</b>	Indicates situations that may result in equipment or property-damage accidents only.





- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Keep water and moisture away.		Keep wet hands away.


 <b>WARNING</b>	
	<ul style="list-style-type: none"> <li>• <b>Do not modify or repair the remote controller.</b> Consult your Daikin dealer for any modification or for repairs.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not relocate or reinstall the remote controller by yourself.</b> Improper installation may result in electric shocks or fire. Consult your Daikin dealer to relocate or for any reinstallation.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not use flammable materials (e.g., hairspray or insecticide) near the remote controller.</b> Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause cracking, damaging the product, causing electric shocks, or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Consult the dealer if the remote controller was submerged under water due to a natural disaster, such as a flood or hurricane.</b> <b>Do not operate the remote controller at this time or a malfunction, electric shock, or fire can occur.</b></li> </ul>

**—Items to be Strictly Observed—**

 <b>CAUTION</b>	
	<ul style="list-style-type: none"> <li>• <b>Do not allow children to play with the remote controller to avoid causing damage to the product.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Never disassemble the remote controller.</b> Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer for internal inspections and adjustments.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not touch the remote controller buttons with wet fingers.</b> Touching the buttons with wet fingers can cause an electric shock.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not wash the remote controller.</b> Doing so may cause electric leakage and result in electric shocks or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Never let the remote controller to get wet.</b> Water can cause damage to the remote controller, and may cause an electric shock or fire.</li> </ul>

 <b>NOTE</b>	
	<ul style="list-style-type: none"> <li>• <b>Never press the button of the remote controller with a hard and pointed object.</b> The remote controller may be damaged.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Never pull or twist the electric wire of the remote controller.</b> It may cause the unit to malfunction.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not wipe the remote controller with benzine, thinner, chemical dustcloth, etc.</b> The remote controller may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the remote controller clean. And wipe it with another dry cloth.</li> </ul>

## Button Locations and Descriptions

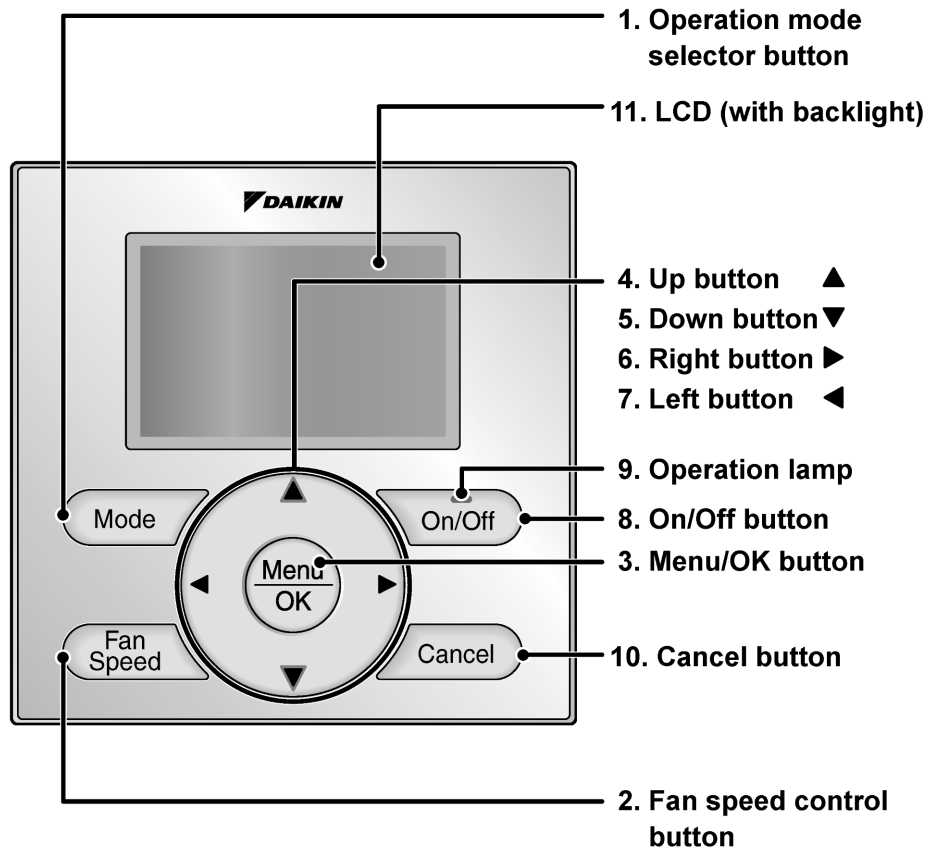

Functions other than basic operation items (i.e., On/Off, Operation Mode, Fan Speed, and Setpoint) are set from the menu screen.

### NOTE

- Do not install the remote controller in places exposed to direct sunlight, the LCD will be damaged.
- Do not pull or twist the remote controller cord, the remote controller may be damaged.
- Do not use objects with sharp ends to press the buttons on the remote controller, damage may result.

### 1. Operation mode selector button

- Press this button to select the operation mode of your preference. (See page 10.)
- \* Available modes vary with the indoor unit model.

### 2. Fan speed control button

- Press this button to select the fan speed of your preference. (See page 11.)
- \* Available fan speeds vary with the indoor unit model.

### 3. Menu/OK button

- Used to enter the main menu. (See page 20 for the menu items.)
- Used to enter the selected item.

### 4. Up button ▲

- Used to raise the setpoint.
- The item above the current selection will be highlighted. (The highlighted items will be scrolled continuously when the button is continuously pressed.)
- Used to change the selected item.

### 5. Down button ▼

- Used to lower the setpoint.
- The item below the current selection will be highlighted. (The highlighted items will be scrolled continuously when the button is continuously pressed.)
- Used to change the selected item.

### 6. Right button ►

- Used to highlight the next items on the right-hand side.
- Each screen is scrolled in the right-hand direction.

### 7. Left button ◀

- Used to highlight the next items on the left-hand side.
- Each screen is scrolled in the left-hand direction.

### 8. On/Off button

- Press this button and system will start.
- Press this button again to stop the system.

### 9. Operation lamp

- This lamp illuminates solid green during normal operation.
- This lamp flashes if an error occurs.

### 10. Cancel button

- Used to return to the previous screen.

### 11. LCD (with backlight)


- The backlight will be illuminated for approximately 30 seconds by pressing any button.
- If two remote controllers are used to control a single indoor unit, only the controller accessed first will have backlight functionality.

# Names and Functions

## Liquid Crystal Display



- Three types of display mode (Standard, Detailed and Simple) are available.
- Standard display is set by default.
- Detailed and Simple displays can be selected in the main menu. (See page 40.)

### Standard display

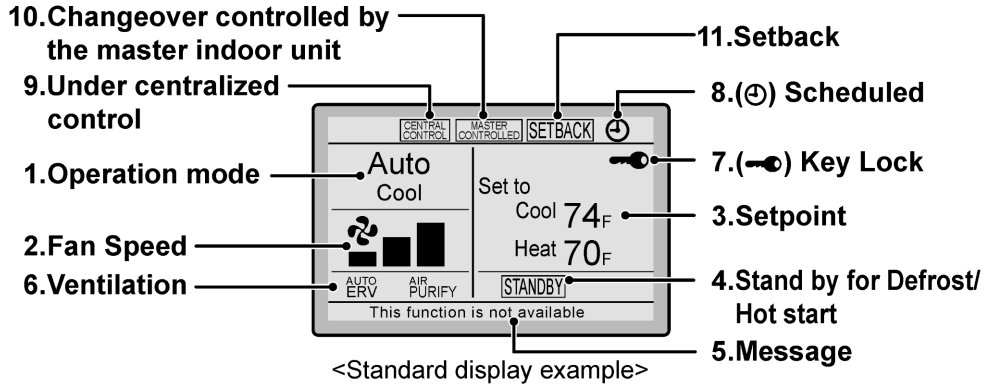


### Detailed display

- The airflow direction, clock, and selectable item appear on Detailed display screen in addition to the items appearing on Standard display.

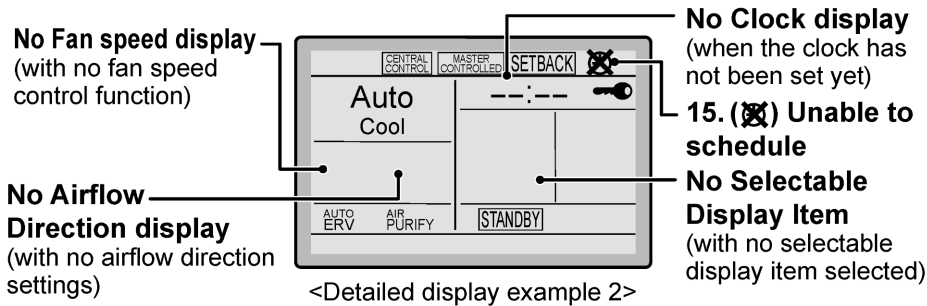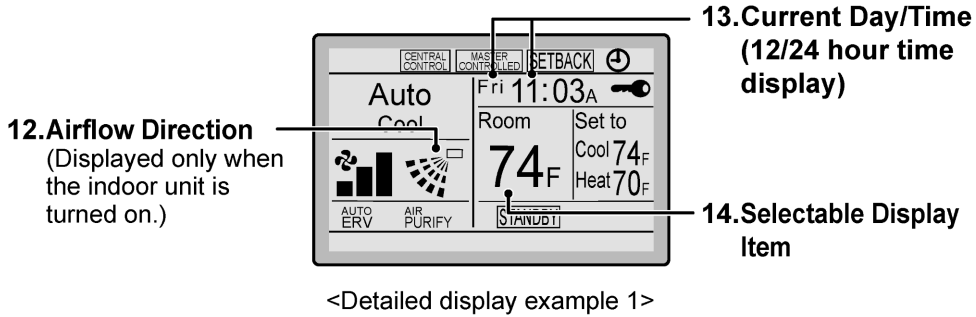

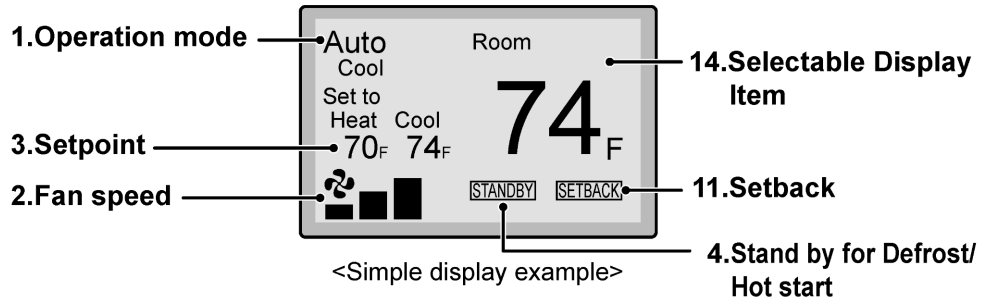

**Simple display****Note for all display modes**

- Depending on the field settings, while the indoor unit is stopped, OFF may be displayed instead of the operation mode and/or the setpoint may not be displayed.

# Names and Functions

## 1. Operation mode

- Used to display the current operation mode: Cool, Heat, Vent, Fan, Dry or Auto.
- In Auto mode, the actual operation mode (Cool or Heat) will be also displayed.
- Operation mode cannot be changed when OFF is displayed.  
Operation mode can be changed after starting operation.


## 2. Fan Speed

- Used to display the fan speed that is set for the indoor unit.
- The fan speed will not be displayed if the connected model does not have fan speed control functionality.

## 3. Setpoint

- Used to display the setpoint for the indoor unit.
- Use the Celsius/Fahrenheit item in the main menu to select the temperature unit (Celsius or Fahrenheit).

## 4. Stand by for Defrost/Hot start

“” (See page 12.)

If ventilation icon is displayed in this field:

- Indicates that an energy recovery ventilator (ERV) is connected.  
For details, refer to the Operation Manual of the ERV.

## 5. Message

The following messages may be displayed.

“This function is not available”

- Displayed for a few seconds when an Operation button is pressed and the indoor unit does not provide the corresponding function.
- In a remote control group, the message will not appear if at least one of the indoor units provides the corresponding function.

“Error: Push Menu button”

“Warning: Push Menu button”

- Displayed if an error or warning is detected (see page 50).



“Time to clean filter”

“Time to clean element”

“Time to clean filter & element”

- Displayed as a reminder when it is time to clean the filter and/or element (see page 48).

## 6. Ventilation

- Displayed when an energy recovery ventilator is connected.
- **Ventilation Mode icon.** “ AUTO ERV BYPASS ”  
These icons indicate the current ventilation mode (ERV only) (AUTO, ERV, BYPASS).
- **Air Purify ICON** “ AIR PURIFY ”  
This icon indicates that the air purifying unit (Optional) is in operation.

## 7. Key Lock (See page 19.)

- Displayed when the key lock is set.

## 8. Scheduled (See page 30.)

- Displayed if the Schedule or Off timer is enabled.

## 9. Under Centralized control “”

- Displayed if the system is under the management of a multi-zone controller (Optional) and the operation of the system through the remote controller is limited.

## 10. Changeover controlled by the master indoor unit “” (VRV only)

- Displayed when another indoor unit on the system has the authority to change the operation mode between cool and heat.

---

**11. Setback “” (See page 14.)**

---

- The setback icon flashes when the unit is turned on by the setback control.

---

**12. Airflow Direction “”**

---

- Displayed when the airflow direction and swing are set (see page 23).
- If the connected indoor unit model does not include oscillating louvers this item will not be displayed.

---

**13. Current Day/Time (12/24 hour time display)**

---

- Displayed if the clock is set (see page 42).
- If the clock is not set, “-- : --” will be displayed.
- 12 hour time format is displayed by default.
- Select 12/24 hour time display option in the main menu under “Clock & Calendar”.

---

**14. Selectable Display Item**

---

- Room temperature is selected by default.
- For other choices see page 41.

---



 
**15. ~~Unable~~ Unable to schedule**

---

- Displayed when the clock needs to be set.
- The schedule function will not work unless the clock is set.

# Basic Operation

## Cool/Heat/Auto/Fan Operation (SkyAir and VRV)

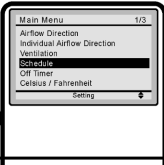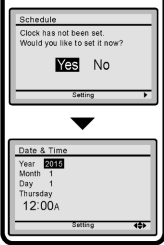
How to follow the operation manual	Operation procedure	Operation button display
<p><b>Operation screen display</b></p> <p>Describes screens that will be displayed on the remote controller in operation.</p> <p><b>1</b></p>  <p><b>2</b></p> 	<p>Explains the sequence of operation for the remote controller. Operate the buttons according to the procedure.</p> <ul style="list-style-type: none"> <li>• Display the main menu screen. (See page 22.)</li> <li>• Press <b>▼▲</b> buttons to select <b>Schedule</b> the main menu screen. Press <b>Menu/OK</b> button to display the timer screen.</li> <li>• Before setting the schedule, the clock must be set.</li> <li>• If the clock has not been set, a screen like the one on the left will appear. Press <b>▶◀</b> buttons to select <b>Yes</b> and press <b>Menu/OK</b> button.</li> <li>• The date &amp; time screen will appear.</li> <li>• Set the current year, month, day, and time. (See clock settings on page 42.)</li> </ul>	<p>Displays the location of buttons to be operated.</p> 

### Preparation


- For mechanical protection purposes, apply power to the outdoor units at least six hours before starting the operation of the system.

### Operation

**1**

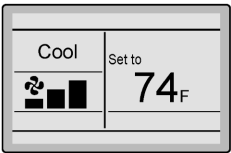

 
- Press **Mode** button several times until the desired mode Cool, Heat, Fan, or Auto mode is selected.




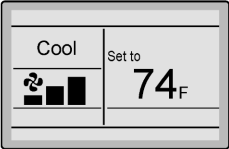
\* Unavailable operation modes are not displayed.

**Note**


- Both heat and cool mode may not be selected if the unit is master controlled. See page 16 if MASTER CONTROLLED icon flashes.


**2**  • Press **On/Off** button.  
The Operation lamp will illuminate solid green and the system will start operating.



**3**  • The setpoint will increase by 1°F (or 1°C) when ▲ button is pressed and decrease by 1°F (or 1°C) when ▼ button is pressed.

\*Setpoint is not available in fan or dry mode.

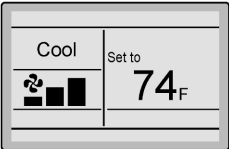


**4**  • To change the fan speed, press **Fan Speed** button and select the fan speed from;


- Low/High/Auto for two-speed
- Low/Medium/High/Auto for three-speed
- Low/Med Low/Medium/Med High/High/Auto for five-speed

depending on the indoor unit model.


\* Auto cannot be selected if the indoor unit does not have Auto Fan speed function.  
\* The system may change the fan speed automatically for equipment protection purposes.  
\* The system may turn off the fan when the room temperature is satisfied.  
\* It is normal for a delay to occur when changing the fan speed.  
\* If the Auto is selected for the fan speed, the fan speed varies automatically based on the difference between setpoint and room temperature.

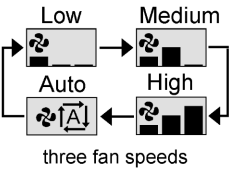

three fan speeds

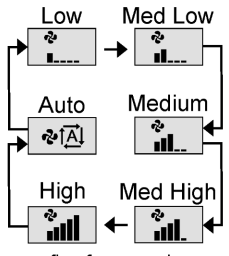

five fan speeds



## Basic Operation

### 5

- Adjust Airflow Direction from the main menu (see page 23).

\* If the connected indoor unit does not have oscillating louvers, this function will not be available.

### 6



- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.



\* When the system is stopped while in the heating mode, the fan will continue to operate for approximately one minute to remove residual heat from the indoor unit.

#### Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the indoor unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the indoor unit.

## Characteristics of Heat Mode

The system automatically controls the following operating modes to prevent the reduction of heating capacity and space comfort.

#### Defrost operation

- The system will automatically go into defrost operation to prevent frost accumulation at the outdoor unit and subsequent loss of heating capacity.
- The indoor unit fan will stop, and "STANDBY" will be displayed on the remote controller.
- The system will finish the Defrost operation and return to normal usually within six to eight minutes. It won't last for more than ten minutes.

#### Hot start

- When the system starts heating operation, the indoor unit fan will operate with a delay in order to prevent a cold draft. (In that case, "STANDBY" will be displayed on the remote controller.)


## Dry Mode

### Preparation


- For equipment protection purposes, apply power to the outdoor units at least six hours before starting the operation of the system.
- The dry mode may not be selected if the remote controller is master controlled and the system is not already in the cooling mode of operation. (see page 18 for details)

### Operation

1

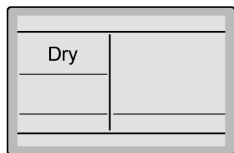

 - Press **Mode** button several times until the Dry mode is selected.



\* The dry mode may not be available depending on the type of indoor unit.

2



- Press **On/Off** button. The Operation lamp will illuminate solid green and the system will start operating.



\* In Dry mode, the system maintains automatic temperature and fan speed control. Therefore, temperature setpoint or fan speed settings are not available while the indoor unit is in the Dry mode.

3

- Adjust Airflow Direction from the main menu (see page 23).

\* If the connected indoor unit does not have oscillating louvers, this function will not be available.

## Basic Operation



- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.




### Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the indoor unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the indoor unit.

## Characteristic of Dry mode

The Dry mode dehumidifies the space at reduced cooling capacity to prevent the room temperature from dropping to an uncomfortable level.

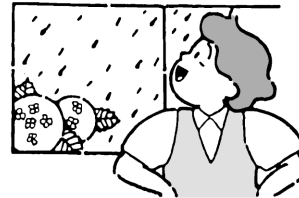

## Setback


The Setback function can be used to maintain the space temperature in an assigned range for an unoccupied period.

### Note

- When enabled, the Setback mode becomes active when the indoor unit is turned off by either the user, a schedule event or an off timer.
- This function is not available by default. It can be enabled by the system installer.



**Operation**

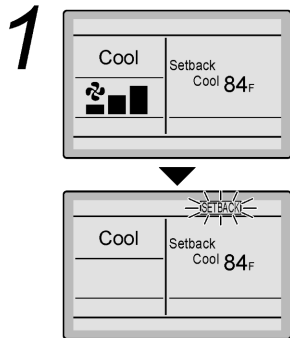


- The setback icon flashes when the unit is turned on by the setback control.

**Ventilation Mode** When the Indoor Unit is Interlocked with Energy Recovery Ventilator

**Preparation**

- For equipment protection purposes, apply power to the outdoor units at least six hours before starting the operation of the system.

**Operation**

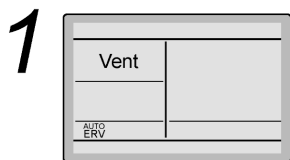

- When operating the energy recovery ventilator (ERV) between seasons without the indoor unit, set the control to ventilation mode.



2

- Changes to the ventilation mode are made from the main menu.


\*Ventilation Mode: Auto, ERV, and Bypass


3


- Changes to the ventilation rate are made from the main menu.


\*Ventilation Rate: Low or High

# Basic Operation

**4**  • Press **On/Off** button.  
The Operation lamp will illuminate solid green and the system will start operating.




**5**  • When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.




## Setting the Cool / Heat Changeover Master

(VRV only)

**Setting Changes** See page 18 for an explanation of the cool/heat changeover master indoor unit.

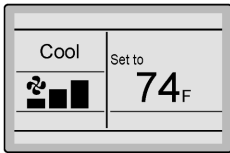
**1**  • Press **Mode** button on the remote controller of the changeover master indoor unit for at least four seconds while the backlight is illuminated.

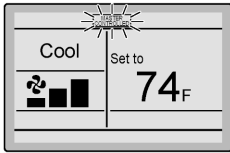



• The “**MASTER CONTROLLED**” icon on each remote controller for the indoor units connected to the same outdoor unit or Branch Selector unit will start flashing.

\* Vent mode setting changes are possible regardless of the cool/heat changeover master indoor unit.  
\* If the outdoor unit is configured as cool/heat changeover master, all remote controllers serving the associated indoor units will display its “**MASTER CONTROLLED**” icon.

• Set the cool/heat changeover master indoor unit as outlined below.



**Selection Settings** The icon "  " will flash on all remote controllers when the power is turned ON for the first time.

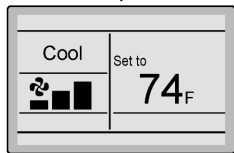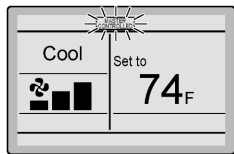2





- Press **Mode** button on the remote controller of the indoor unit which is to serve as the cool/heat changeover master.




The remote controller for the changeover master indoor unit is established and the  icon is no longer displayed. Other remote controllers in the system (indoor units served by the same outdoor unit or indoor units served by the same branch selector unit) will now display the  icon.

3

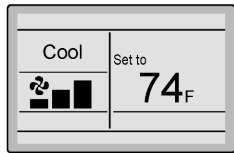

- Press **Mode** button on the remote controller of the indoor unit designated as the cool/heat changeover master (the remote controller not displaying the  icon) repeatedly until the desired mode is selected. The display will change to **Fan, Dry, Auto, Cool, Heat** each time the button is pressed.
- Simultaneously, the other indoor units on the system will follow suit and change modes to reflect the new mode selected at the changeover master remote controller.

 

# Basic Operation

## Cool / Heat Mode Selection Availability


- “Cool”, “Heat”, and “Auto” are all only available for selection on the cool/heat changeover master indoor unit. The following table indicates the available operating modes of the other indoor units on the system based upon the selected mode of the master indoor unit.

When the master indoor unit is set to	The other indoor units in the system can be set to			
	Cool	Dry	Heat	Fan
Cool mode	✓	✓		✓
Dry mode	✓	✓		✓
Heat mode			✓	✓
Fan mode				✓
Auto mode (Cooling operation)	✓	✓		✓
Auto mode (Heating operation)			✓	✓


## Precautions for Selecting the Cool / Heat Changeover Master Indoor Unit

- The cool/heat changeover master must be set for a single indoor unit in the following applications

### (2-Pipe Heat Pump System)

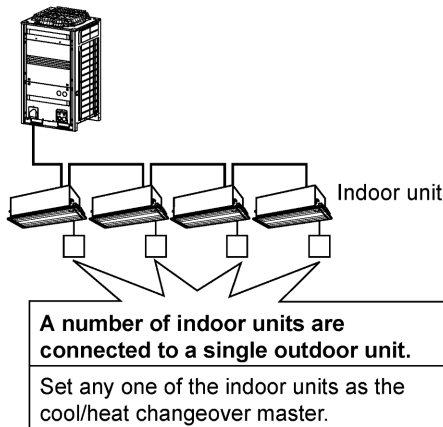


### (3-Pipe Heat Recovery System)

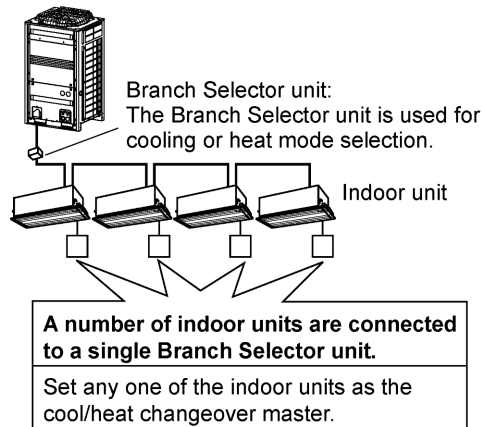

## Key Lock


**Operation** Confirm and cancel Key Lock settings in the basic display screen.

1

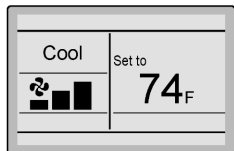



Basic screen

 - Press **Menu/OK** button for at least four seconds while the backlight is illuminated.



2

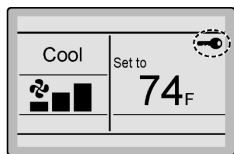

- “” is displayed.  
All buttons are disabled when the keys are locked.
- To cancel the key lock mode, continue pressing **Menu/OK** button for at least four seconds while the backlight is illuminated.

## Quick Reference

■ The main menu has the following items.

Menu item		Description	Reference page
<b>Airflow Direction</b>		<p><b>Used to configure airflow direction settings.</b></p> <ul style="list-style-type: none"> <li>• The airflow direction louver is automatically operated up and down (left and right).</li> <li>• The fixed airflow directions are configurable for five positions.</li> </ul> <p>* This function is not available on all indoor unit models.</p>	23
<b>Individual Airflow Direction</b> (depends on indoor unit model)	<b>Louver Setting</b>	<p>Set the airflow direction individually for each of the 4 louvers.</p> <ul style="list-style-type: none"> <li>• Maximum 16 units (unit 0 till 15).</li> </ul>	25
	<b>Louver Setting List</b>	Setting table for louver.	26
	<b>Reset All Louvers Position</b>	Reset all louvers to factory default setting.	27
<b>Ventilation</b> (Ventilation operation settings for energy recovery ventilator)	<b>Ventilation Rate</b>	Used to set "Low" or "High"	28
	<b>Ventilation Mode</b>	Used to set Auto, ERV, or Bypass.	29
<b>Schedule</b>	<b>Daily Patterns</b>	<ul style="list-style-type: none"> <li>• Day settings are selected from four patterns, i.e., "7Days", "Weekday/Sat/Sun", "Weekday/Weekend", and "Everyday".</li> </ul>	31
	<b>Settings</b>	<ul style="list-style-type: none"> <li>• Set the startup time and operation stop time.</li> <li>ON: Startup time, cooling and heating temperature setpoints can be configured.</li> <li>OFF: Operation stop time, cooling and heating setback temperature setpoints can be configured.</li> <li>( --: Indicates that the setback function is disabled for this time period. )</li> <li>_: Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.</li> <li>• Up to five actions can be set for each day.</li> </ul>	32
<b>Off Timer</b>		<p><b>Used to set the run-time for the indoor unit using this controller.</b></p> <ul style="list-style-type: none"> <li>• Possible to set in 10 minute increments from 30 to 180 minutes.</li> </ul>	35
<b>Celsius / Fahrenheit</b>		<ul style="list-style-type: none"> <li>• Used to select whether temperature values will be displayed in Celsius or Fahrenheit.</li> </ul>	—

Menu item		Description	Reference page
<b>Filter Auto Clean</b>		Set the time when the filter needs to be automatically cleaned. For the detailed operation refer to the Operation Manual of the self cleaning decoration panel.	—
<b>Maintenance Information</b>		Used to display the maintenance information.	37
<b>Configuration</b>	<b>Draft Prevention</b> (Only available with Occ. sensor installed indoor unit model)	The draft prevention function can be <b>enabled</b> or <b>disabled</b> . When enabled, the Occ. sensor will adjust the louver's position to prevent air blowing directly on occupant.	38
	<b>Contrast Adjustment</b>	Used to make LCD contrast adjustment.	39
	<b>Display</b>	<b>Used to set the display mode.</b> <ul style="list-style-type: none"> <li>• Display mode Standard, Detailed, or Simple display</li> <li>• Detailed and Simple displays provide the selectable display item among Room Temp, System, None or Outside Air Temp.</li> </ul>	40
<b>Current Settings</b>		<ul style="list-style-type: none"> <li>• Used to display a list of current settings for available items.</li> </ul>	42
<b>Clock &amp; Calendar</b>	<b>Date &amp; Time</b>	<b>Used to configure date and time settings and corrections.</b> <ul style="list-style-type: none"> <li>• The default time display is 12H.</li> <li>• The clock will maintain accuracy to within ±30 seconds per month.</li> <li>• If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.</li> </ul>	42
	<b>12H/24H Clock</b>	The time can be displayed in either a 12 hour or a 24 hour time format.	45
<b>Daylight Saving Time</b>		Used to adjust the clock in observance of daylight saving time.	45
<b>Language</b>		The display language can be selected between <b>English, Francais, or Espanol.</b>	48

Note: Available setting items vary with the indoor unit model.

<p><b>Sub Remote Controller Menu Items</b></p> <p>If two remote controllers are connected to a single indoor unit, the following menu items are not set in the sub remote controller. In this case, the following items should be configured in the main remote controller.</p> <ul style="list-style-type: none"> <li>• Individual Airflow Direction</li> <li>• Schedule</li> <li>• Off timer</li> <li>• Setback</li> <li>• Draft Prevention</li> </ul>	<p style="text-align: center;">Indoor unit</p> <p style="text-align: center;">Outdoor unit      Two remote controllers in control</p>
--	---

# Menu Options

## Navigating the Main Menu Screen


### ■ Display Method for Main Menu

#### Operation


**1**

Cool

Set to **74<sub>F</sub>**

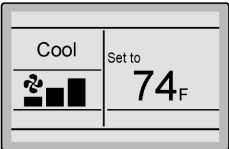

- Press **Menu/OK** button.



Basic screen

**2**

Main Menu 1/3

**Airflow Direction**

Individual Airflow Direction

Ventilation

Schedule

Off Timer

Celsius / Fahrenheit

Setting



- The main menu screen is displayed.

← Instructions for navigating the main menu will appear.

Main menu screen


**3**

- Selecting items from the main menu.
  1. Press ▼▲ buttons to select the desired item to be set.
  2. Press **Menu/OK** button to display the details for the selected item.

**4**

- To go back to the basic screen from the main menu, press **Cancel** button.



#### Note

- If a button is not pressed for 5 minutes during configuration, the controller will automatically revert to the basic screen.




## Airflow Direction


### ■ Configuring Airflow direction

#### Operation


1

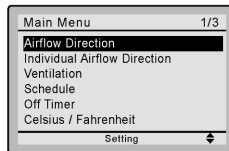

- Display the main menu screen.  
(See page 22.)
- Press ▼▲ buttons to select **Airflow Direction** and press **Menu/OK** button.


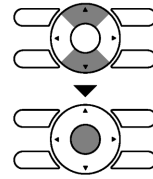


2

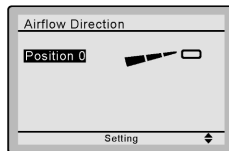


- (1) Adjusting method when there is single airflow direction.

- Select the desired airflow direction from **Position 0**, **Position 1**, **Position 2**, **Position 3**, **Position 4**, **Swing** or **Auto** using ▼▲ buttons.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

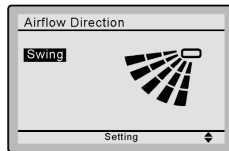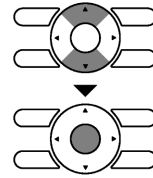


Airflow direction setting (up/down)

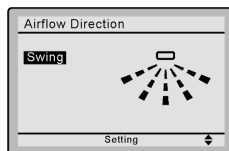

Airflow direction setting (left/right)

#### Note


- The airflow directions appear on the screen as follows:

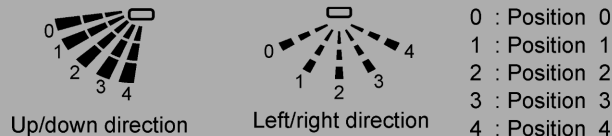


#### Notice

These operation and screen are example of single airflow direction type indoor unit. It is different from Single flow cassette model.

# Menu Options

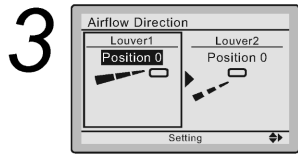

When front/back direction is selected

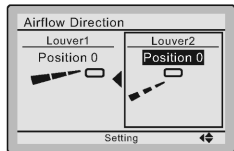

When left/right direction is selected




(2) Adjusting method for selecting dual airflow directions.

- Press ◀▶ buttons, to select front/back or left/right direction setting.



**Notice**



These operation and screen are example of dual airflow directions type indoor unit (Single flow cassette model).

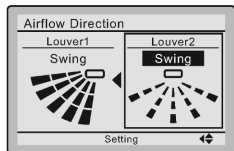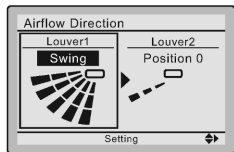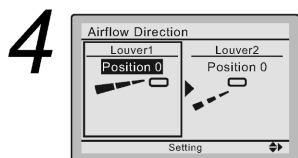

- Select the desired airflow direction from **Position 0** , **Position 1** , **Position 2** , **Position 3** , **Position 4** , **Swing** or **Auto** using ▼▲ buttons.

- Selecting **Swing** will cause the airflow direction louver to swing position 0 to 4.
- Setting **Auto** is not available when left/right direction is selected.

 - Press **Menu/OK** button to confirm the settings and return to the basic screen.

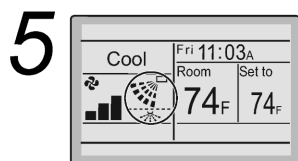


Basic screen (Detailed display)

- If dual airflow directions are set, then the dual airflow direction icons are displayed in the basic screen.



# Individual Airflow Direction

## ■ Louver Setting



### Operation

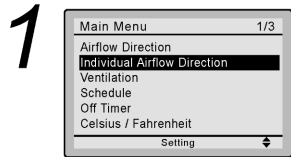


- Display the main menu screen. (See page 22.)
- Select **Individual Airflow Direction** and press **Menu/OK** button.

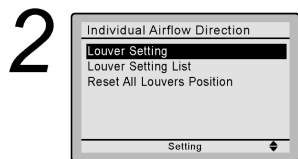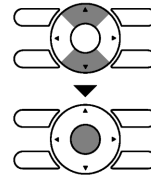

- Select **Louver Setting** and press **Menu/OK** button.

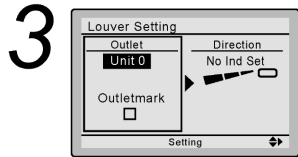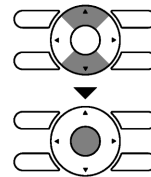


- Use ▼▲ buttons to select the unit and outlet mark.
- Maximum 16 units for each group (unit 0 till 15) can be selected.


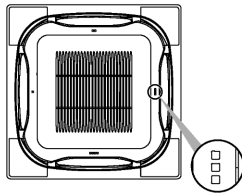


**Note**  
 In case of four outlets (cassette type), you can control each one of the four louvers individually (the following marks are beside each air outlet: □, □□, □□□, □□□□).

# Menu Options

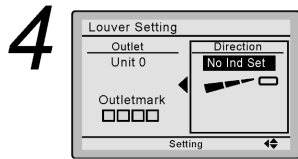

- Press ◀▶ button to select the airflow direction.
- Use ▼▲ buttons to change the airflow direction to the following:  
**No Ind Set** , **Position 0** , **Position 1** , **Position 2** , **Position 3** , **Position 4** , **Swing** or **Blocked** .  
**No Ind Set** : No Individual Louver Setting.  
**Blocked** : Individual airflow is blocked.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

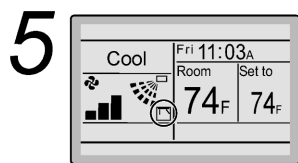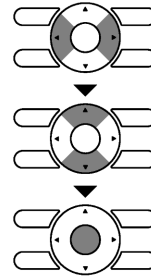


Basic screen  
(Detailed display)



- If individual airflow direction is set, then the individual airflow direction icon is displayed in the basic screen.

## ■ Louver Setting List


### Operation

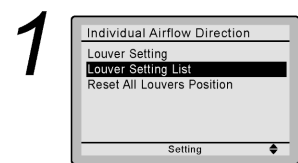

- Display the individual airflow direction screen. (See page 25.)
- Press ▼▲ buttons to select **Louver Setting List** and press **Menu/OK** button.

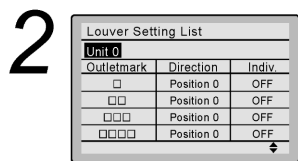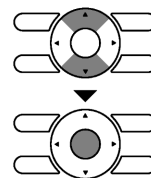


- A table shows the current settings. Press ▼▲ buttons to go to the next unit.
- Press **Cancel** button to return to the previous menu.

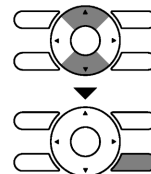

## ■ Reset All Louvers Position

### Operation


1

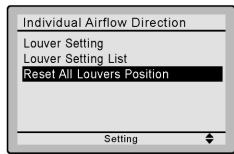


- Display the individual airflow direction screen.

(See page 25.)


- Press ▼▲ buttons to select **Reset All Louvers Position** and press **Menu/OK** button.

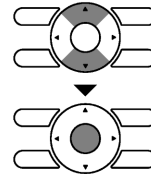

2

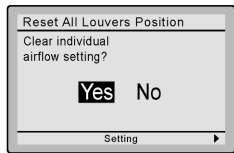

- Press ◀▶ buttons to select **Yes**.
- Press **Menu/OK** button to confirm the reset and to return to the basic screen.

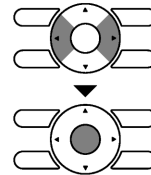


## Operational Details and Functions

There are two types of airflow direction settings.

### Airflow direction swing

The louvers automatically oscillate up and down.

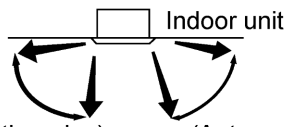


(Automatic swing)

(Automatic swing)

### Airflow direction

You can select from one of five fixed directions. (This has no relation to the angle of the louvers.)

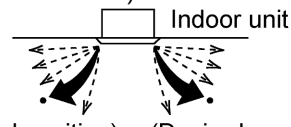

(Desired position)

(Desired position)

## Movement of airflow direction louver

Under the operating conditions shown next, airflow direction is controlled automatically. Actual operation may be different than what is displayed on the remote controller.


# Menu Options

<b>Operating condition</b>	<ul style="list-style-type: none"> <li>• Room temperature is higher than the remote controller's setpoint (in heating operation).</li> <li>• When defrosting (in heating operation). (The airflow discharges horizontally to avoid creating a draft for the room occupants.)</li> <li>• Under continuous operation with the airflow discharging horizontally.</li> </ul>
----------------------------	--


## Ventilation

### ■ Ventilation screen display properties

#### Operation

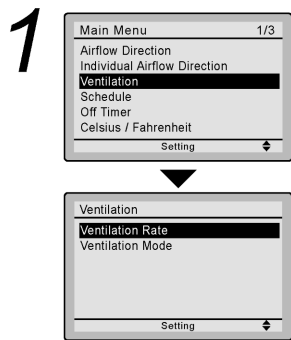


- 1 • Display the main menu screen.  
(See page 22.)
- Press ▼▲ buttons to select **Ventilation** on the main menu screen.  
(For models with no ventilation function, **Ventilation** will not be displayed on the main menu screen.)  
Press **Menu/OK** button to display the ventilation screen.

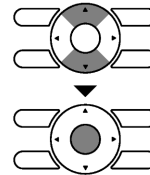


### ■ Changing the ventilation rate


#### Operation

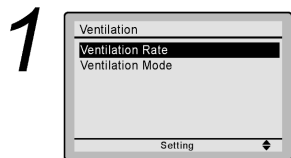

- 1 • Navigate to the ventilation screen (see above).
- Press ▼▲ buttons to select **Ventilation Rate** on the ventilation screen.  
Press **Menu/OK** button to display the ventilation rate screen.

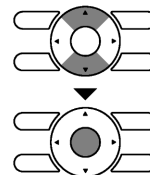


**2**




- Press ▼▲ buttons to toggle between the **Low** and **High** settings.

\* Only modes that can be set are displayed.

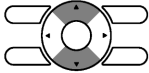

**3**


- Selecting and confirming the desired ventilation rate will take you back to the basic screen.  
(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation rate.)




## ■ Changing the ventilation mode

### Operation


**1**

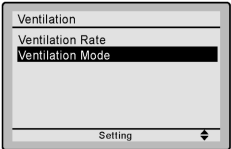

- Display the ventilation screen.  
(See page 28.)
- Press ▼▲ buttons to select **Ventilation Mode** on the ventilation screen.  
Press **Menu/OK** button to display the ventilation mode screen.

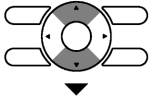


**2**

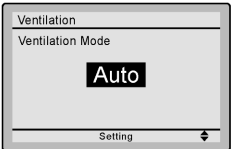


- Pressing ▼▲ buttons cycles through the settings in the order shown below.

→ **Auto** ↔ **ERV** ↔ **Bypass** ←

\* Only modes that can be set are displayed.

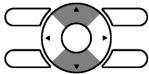

# Menu Options

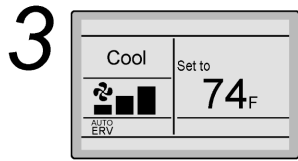

- Selecting and confirming the desired ventilation mode will take you back to the basic screen.  
(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation mode.)



## Ventilation Mode

### Auto mode

Using information from the indoor unit (cool, heat, fan, and setpoint) and the energy recovery ventilator unit (indoor and outdoor temperatures), the ventilation mode is automatically changed between ERV and Bypass.

### ERV mode

Outside air is passed through the ERV core and is supplied to the conditioned space.


### Bypass mode

Outside air is supplied to the conditioned space without passing through the ERV core.


## Schedule

### ■ Setting the schedule



**Operation** The schedule will disappear when a multizone controller is connected, but can be re-enabled by the system installer.

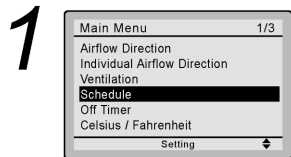


- Display the main menu screen.  
(See page 22.)
- Press **▼▲** buttons to select **Schedule**. Press **Menu/OK** button to display the schedule screen.

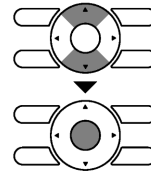




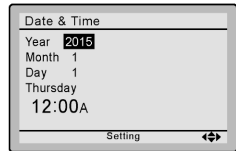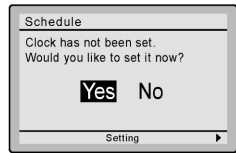


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press ◀▶ buttons to select **Yes** and press **Menu/OK** button.
- The date & time screen will appear.
- Set the current year, month, day, and time. (See clock settings on page 42.)

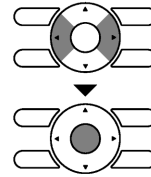

2

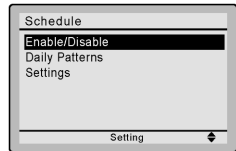


- Press ▼▲ buttons to select the desired function on the schedule screen and press **Menu/OK** button.

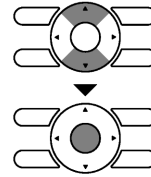


## ■ Daily Patterns

### Operation


1

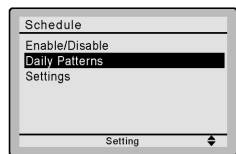


- The schedule screen will appear.
- Press ▼▲ buttons to select **Daily Patterns** on the schedule screen. The daily patterns screen will appear when **Menu/OK** button is pressed.

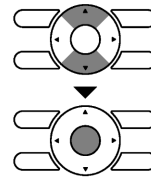

2

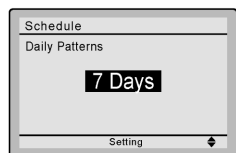


- Press ▼▲ buttons to select **7 Days**, **Weekday/Sat/Sun**, **Weekday/Weekend** or **Everyday** on the daily patterns screen. The confirmation screen will appear when **Menu/OK** button is pressed.

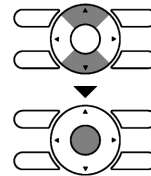


# Menu Options

**3**

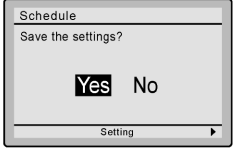


- Press ◀▶ buttons to select **Yes** on the confirmation screen.
- Pressing **Menu/OK** button enters the daily patterns in the schedule and takes you back to the main menu screen.

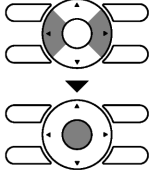


## ■ Settings

### Operation


**1**

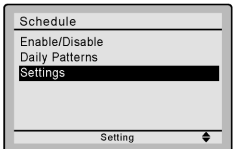

- The schedule screen will appear.
- Press ▼▲ buttons to select **Settings** on the schedule screen.
- The settings screen will appear when **Menu/OK** button is pressed.

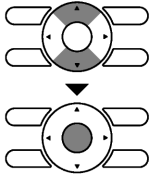


**2**

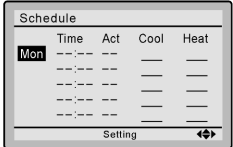


Schedule	Time	Act	Cool	Heat
Mon	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---
	---	---	---	---


- Press ▼▲ buttons to select the day to be set.
- \* It cannot be selected in the case of **EVDY**.

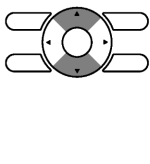

**3**

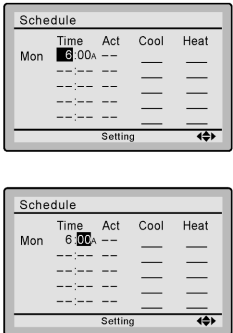

- Input the time for the selected day.
- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to input the desired operation start time. Each press of ▼▲ buttons moves the numbers by 1 hour or 1 minute.

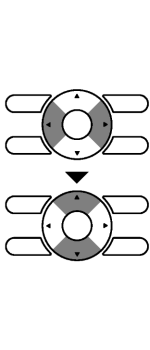


4

Schedule				
Time	Act	Cool	Heat	
Mon 6:00a	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
Setting				

Schedule				
Time	Act	Cool	Heat	
Mon 6:00a	ON	90F	80F	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
Setting				

- Press buttons to move the highlighted item and press buttons to configure ON/OFF/-- settings. --, ON, or OFF changes in sequence when buttons are pressed.

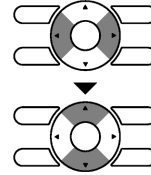

- ON: The temperature setpoints can be configured.
- OFF: The setback temperature setpoints can be configured.
- : The temperature setpoints and setback temperature setpoints become disabled.

Schedule				
Time	Act	Cool	Heat	
Mon 6:00a	ON	75F	70F	---
8:00a	OFF	---	---	---
---	---	---	---	---
---	---	---	---	---
Setting				

- The cooling and heating temperature setpoints for both ON and OFF (Setback) are configured.

- : Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.
- : Indicates that the setback function is disabled for this time period.

5

Schedule				
Time	Act	Cool	Heat	
Mon 6:00a	ON	75F	70F	---
8:00a	OFF	85F	50F	---
5:30p	ON	75F	70F	---
10:00p	---	---	---	---
---	---	---	---	---
Setting				

Schedule				
Time	Act	Cool	Heat	
Mon 6:00a	ON	75F	70F	---
8:00a	OFF	85F	50F	---
5:30p	ON	75F	70F	---
10:00p	OFF	82F	62F	---
---	---	---	---	---
Setting				



Schedule				
Time	Act	Cool	Heat	
Tue 6:00a	ON	75F	70F	---
8:00a	OFF	85F	50F	---
5:30p	ON	75F	70F	---
10:00p	OFF	82F	62F	---
---	---	---	---	---
Setting				

A maximum of five actions per day can be set.

- Press **Menu/OK** button when settings for each day are completed. The confirmation screen will appear.


To copy the settings for the previous day, press **Mode** button so that the existing settings will be copied.

 Example: The contents for Monday are copied by pressing **Mode** button after selecting Tuesday.

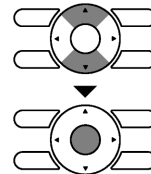


# Menu Options

**6**

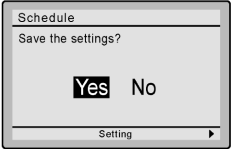


- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the settings for each day and takes you back to the basic screen.

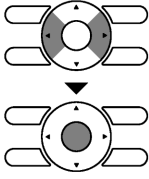


 **Enabling or disabling the schedule**

**Operation**


**1**

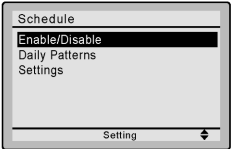


- Display the schedule screen. (See page 30.)
- Press ▼▲ buttons to select **Enable / Disable** on the schedule screen. Press **Menu/OK** button to display the enable/disable screen.

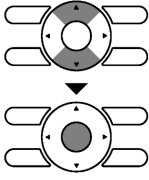


**2**

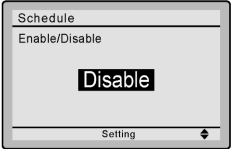


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen. Press **Menu/OK** button after selecting the item. The confirmation screen is displayed.

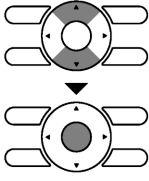

**3**

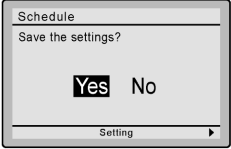

- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the enable/disable setting for the schedule and takes you back to the basic screen.


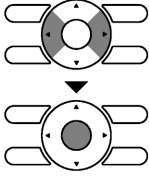


## Off Timer

### ■ Configuring and Confirming the Off Timer settings



#### Operation

- 1**

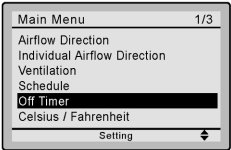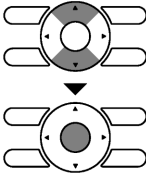
  - Display the main menu screen.  
(See page 22.)
  - Press **▼▲** buttons to select the **Off Timer** on the main menu screen. Press **Menu/OK** button to display the off timer screen.



---

- 2**

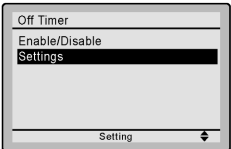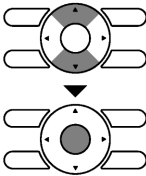
  - Press **▼▲** buttons to select **Settings** on the off timer screen. Press **Menu/OK** button to display the configuration screen.



---

- 3**

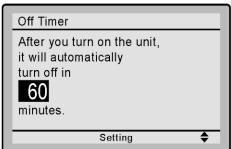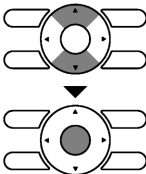
  - Use **▼▲** buttons to set the time from operation start until the unit automatically stops. Selections can be made in increments of 10 minutes from 30 to 180 minutes. Holding down the button causes the number to change continuously.
  - Select the desired time and press **Menu/OK** button. The confirmation screen will appear.

---

- 4**

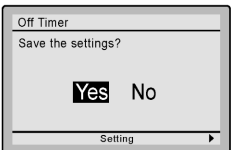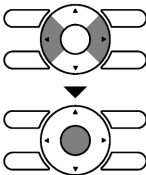
  - Press **◀▶** button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the off timer and takes you back to the basic screen.


# Menu Options




## Enabling or disabling the off timer

### Operation

1

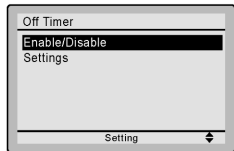


- Navigate to the off timer screen.  
(See page 35.)
- Press ▼▲ buttons to select **Enable/Disable** on the off timer screen. Press **Menu/OK** button to display the enable/disable screen.

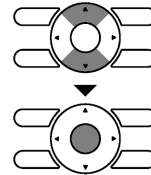


2




- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen. Press **Menu/OK** button after selecting the item. Then the confirmation screen is displayed.

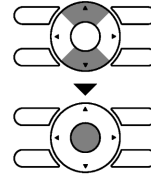

3

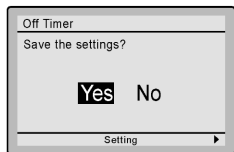

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the enable/disable for the off timer and takes you back to the basic screen.

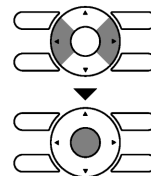


## Maintenance Information


### ■ Displaying the service contact and model information

#### Operation


1

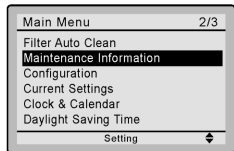

- Display the main menu screen.  
(See page 22.)
- Press ▼▲ buttons to select **Maintenance Information** on the main menu screen and press **Menu/OK** button.

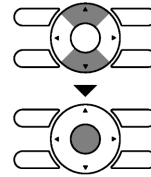


2

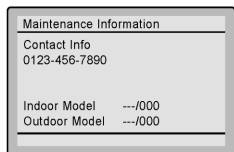

- The phone number for the contact is displayed at the top of the screen.  
(If it has not yet been entered, it will not be displayed.)
- The model information of the indoor and outdoor units for your product will be displayed on the bottom of the screen.  
(For some models the product code may be displayed. )

\*The model name will not be displayed if the indoor unit PCB has been replaced.

 \*The error code history may also be displayed. If the Operation lamp is not flashing, the unit is working properly. The error code history is no longer displayed if you press **On/Off** button for more than 4 seconds.




# Menu Options

## Configuration


### ■ Draft Prevention

#### Operation


**1**

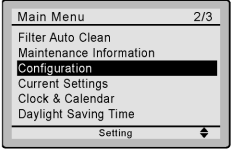


- Display the main menu screen. (See page 22.)
- Press ▼▲ buttons to select **Configuration** and press **Menu/OK** button.

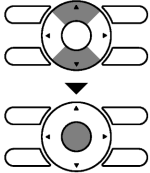


**2**

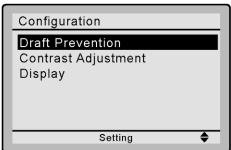


- Press ▼▲ buttons to select **Draft Prevention** and press **Menu/OK** button.

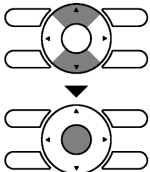


**3**

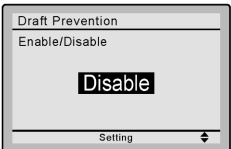


- Press ▼▲ buttons to select **Enable** or **Disable**.
- The confirmation screen will appear when **Menu/OK** button is pressed.

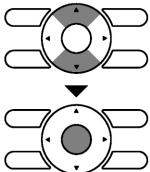

**4**

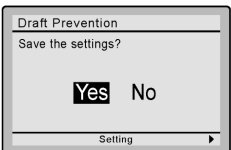

- Press ◀▶ buttons to select **Yes**.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

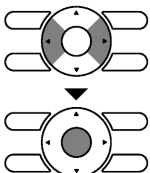





## ■ Contrast Adjustment

### Operation


1

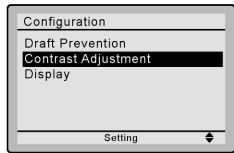


- Navigate to the configuration screen.  
(See page 38.)
- Press ▼▲ buttons to select **Contrast Adjustment** on the configuration screen. Press **Menu/OK** button to display the contrast adjustment screen.

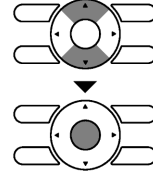

2

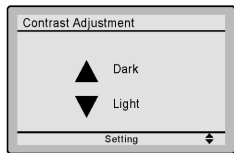

- On the contrast adjustment screen press ▼▲ buttons until you reach the desired contrast. After setting, press **Menu/OK** button and return to the basic screen.

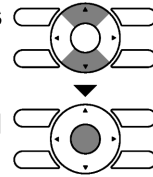


# Menu Options

## ■ Display


### Display Mode

#### Operation


1

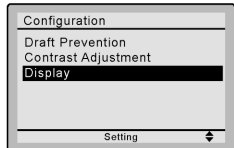


- Navigate to the configuration screen. (See page 38.)
- Press ▼▲ buttons to select **Display** on the configuration screen. Press **Menu/OK** button to display the display screen.

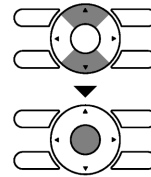


2

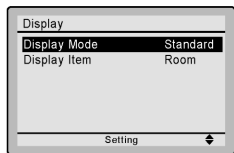


- Press ▼▲ buttons to select **Display Mode** on the display screen. Press **Menu/OK** button to display the display mode screen.

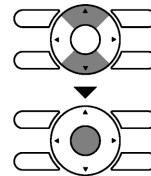

3

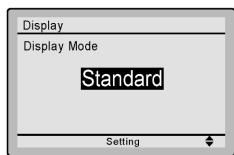

- Press ▼▲ buttons to select **Standard**, **Detailed** or **Simple** on the display screen.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.

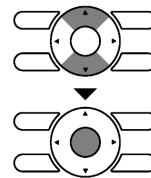


\* Refer to **Display Item** to change the selectable display item for Detailed and Simple display modes. (See page 41.)


## Display Item

### Operation


1

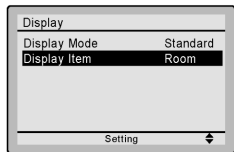


- Navigate to the display screen.  
(See page 40.)
- Press ▼▲ buttons to select **Display Item** on the display screen. Press **Menu/OK** button to display the display item screen.

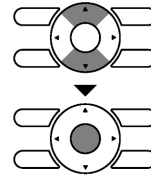

2

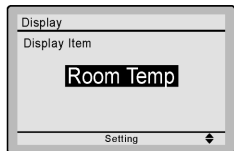

 - Pressing ▼▲ buttons displays the following.



\* Some models may not display these items even if they are selected.

- Be sure to read the following notes regarding display of room temperature and outside air temperature.

#### Room Temp

..... The temperature at the remote controller.

The temperature that is detected may be affected by the location of the remote controller.

#### Outside Air Temp

..... The temperature at the outdoor unit.

The temperature that is detected may be affected by factors such as the location of the unit (for example, if it is in direct sunlight) and unit operation during defrosting.

- After setting, press **Menu/OK** button to confirm settings and return to the basic screen.




# Menu Options



## Current Settings

### Confirming the current settings


#### Operation

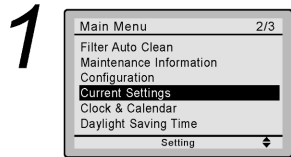

- Display the main menu screen. (See page 22.)
- Press ▼▲ buttons to select **Current Settings** on the main menu screen and press **Menu/OK** button.

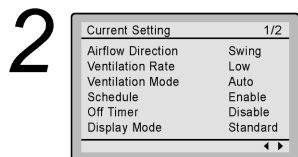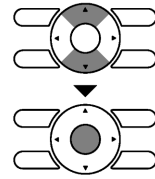

- A list showing the current setting status will appear. Press ◀▶ buttons to go to the next item.
- Pressing **Cancel** button takes you back to the main menu screen.

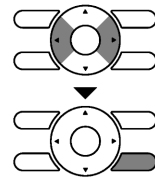


Display items	
Airflow Direction	Off Timer
Ventilation Rate	Display Mode
Ventilation Mode	Display Item
Schedule	Filter Auto Clean

\* Display items may differ depending on the model. Only the items that can be set are displayed.


## Clock & Calendar

### Date & Time


#### Operation

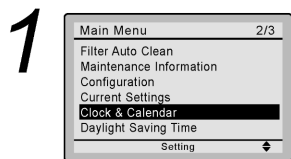


- Display the main menu screen. (See page 22.)
- Press ▼▲ buttons to select **Clock & Calendar** on the main menu screen. Press **Menu/OK** button to display the clock & calendar screen.

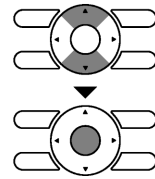


**2**

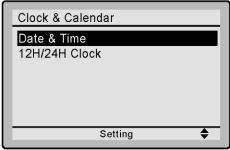


- Press ▼▲ buttons to select **Date & Time** on the clock & calendar screen. Press **Menu/OK** button to display the date & time screen.

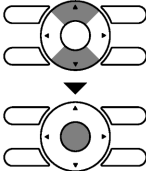


**3**

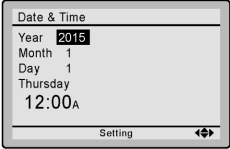


- Select **Year** with ◀▶ buttons. Change the year with ▼▲ buttons. Holding down the button causes the number to change continuously.

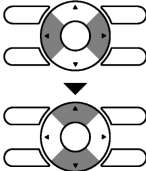


**4**

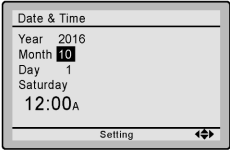


- Select **Month** with ◀▶ buttons. Change the month with ▼▲ buttons. Holding down the button causes the number to change continuously.

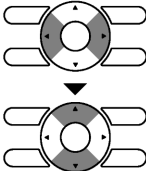


**5**

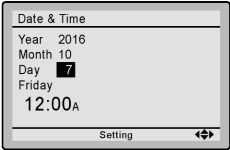


- Select **Day** with ◀▶ buttons. Change the day with ▼▲ buttons. Holding down the button causes the number to change continuously. Days of the week change automatically.

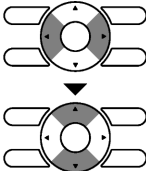


**6**

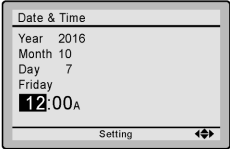


- Select **Hour** with ◀▶ buttons. Change the hour with ▼▲ buttons. Holding down the button causes the number to change continuously.

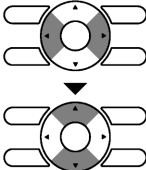


# Menu Options

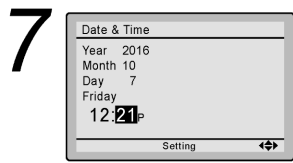


- Select **Minute** with ◀▶ buttons.
- Change the minute with ▼▲ buttons. Holding down the button causes the number to change continuously.
- Press **Menu/OK** button.
- The confirmation screen will appear.

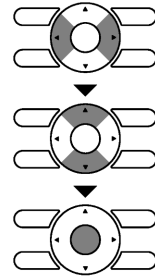

Note: \_\_\_\_\_  
 The date can be set between January 1, 2015 and December 31, 2099.

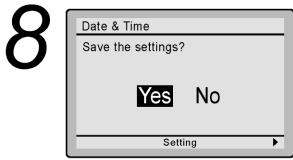

- Press ◀▶ button to select **Yes** on the confirmation screen.
- Press **Menu/OK** button to confirm the clock and return to the basic screen.

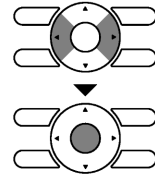


\*When setting the schedule, the display returns to the settings screen.


## ■ 12H/24H CLOCK

### Operation


1

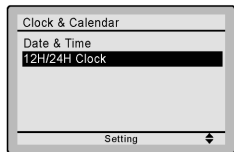


- Display the clock & calendar screen. (See page 42.)
- Press ▼▲ buttons to select **12H/24H Clock** on the clock & calendar screen. The 12H/24H clock screen will appear when **Menu/OK** button is pressed.

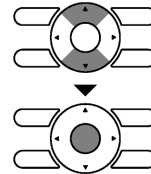


2

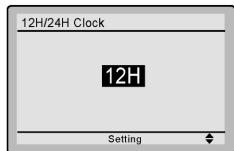


- By default, the time display is set to the 12H format.
- Press ▼▲ buttons to select **12H** or **24H** on the 12H/24H clock screen.
- The confirmation screen will appear when **Menu/OK** button is pressed.

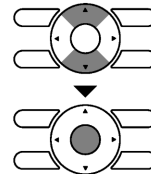

3

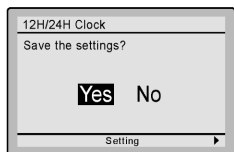

- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the 12H or 24H and takes you back to the basic screen.

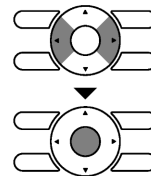


## Daylight Saving Time


### ■ How to display Daylight Saving Time

#### Operation

1

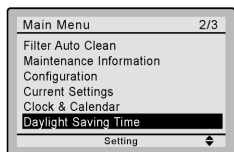


- Display the main menu screen. (See page 22.)
- Press ▼▲ buttons to select **Daylight Saving Time** on the main menu screen. Press **Menu/OK** button to display the daylight saving time screen.

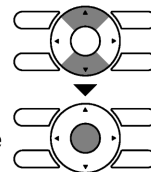

# Menu Options



## Enabling or disabling Daylight Saving Time

### Operation

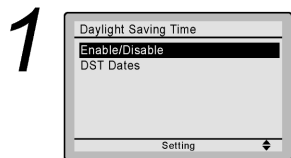



1

- Display the daylight saving time screen. (See page 45.)
- Press ▼▲ buttons to select **Enable/Disable** on the daylight saving time screen. Press **Menu/OK** button to display the enable/disable screen.

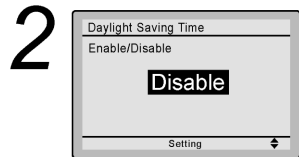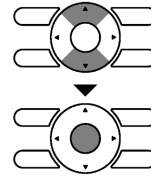


2

- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen.
- Press **Menu/OK** button to display the setting confirmation screen.

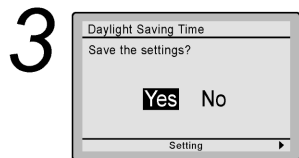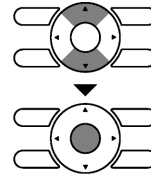


3

- Press ◀▶ buttons to select **Yes** on the setting confirmation screen. Pressing **Menu/OK** button confirms the daylight saving time enable/disable setting and takes you back to the basic screen.

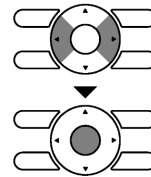


## Setting the date

### Operation

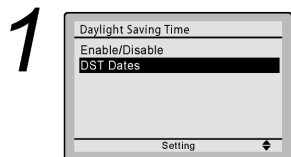


1

- Display the daylight saving time screen. (See page 45.)
- Press ▼▲ buttons to select **DST Dates** on the daylight saving time screen. Press **Menu/OK** button to display the duration setting screen.




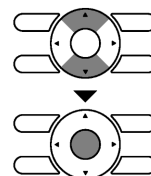





2

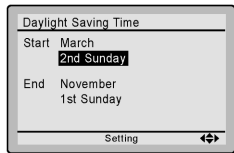

   
 
- Press ▼▲ buttons to select the start month and the end month.
- Press ◀▶ buttons to select a week. Press ▼▲ buttons to select the start week and the end week.
- After setting the Start and End dates, press **Menu/OK** button to display the setting confirmation screen.



3

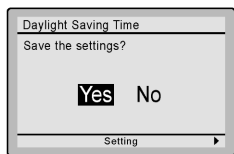

  - Press ◀▶ buttons to select **Yes** on the setting confirmation screen. Pressing **Menu/OK** button confirms the Daylight Saving Time settings and takes you back to the basic screen.



### When Daylight Saving Time is enabled

When the time in the remote controller reaches 2:00 a.m. on the specified start date, the clock is automatically set forward by one hour. When the time in the remote controller reaches 2:00 a.m. on the end date, the clock is automatically set back by one hour.


# Menu Options

## Language


### ■ Selectable Languages

#### Operation


1

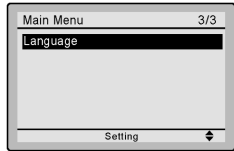


- Display the main menu screen. (See page 22.)
- Press ▼▲ buttons to select **Language** on the main menu screen and press **Menu/OK** button.

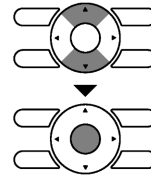

2

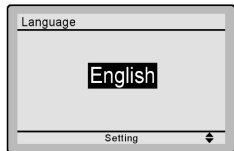

- Press ▼▲ buttons to select the preferred language on the language screen. **English/Français/Español** are available.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.

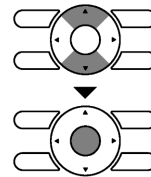


# Maintenance

## Reset Filter Indicator

#### Operation

1

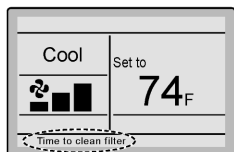

- When it is time to clean or replace the filter, one of the following messages will be displayed on the bottom of the basic screen.

 
- Time to clean filter**
- Time to clean filter & element**
- Time to clean element**

\*This is not displayed when Simple display is set.


- Wash, clean, or replace the filter or element.  
For details, refer to the operation manual supplied with the indoor unit.

2



- Reset the filter indicator when the filter or element is cleaned or replaced.
- Press **Menu/OK** button.  
The main menu screen will be displayed.



3

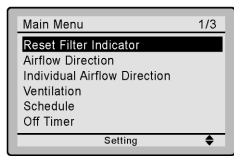

- Press ▼▲ buttons to select **Reset Filter Indicator** on the main menu screen and press **Menu/OK** button.

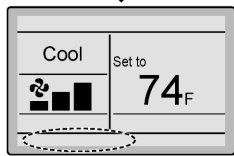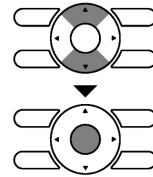

- The displayed message “Time to clean filter” is no longer displayed on the basic screen when the filter sign is reset.

## Maintaining the Unit and LCD Display

- Wipe the LCD and surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth.

### Note


- Do not use any paint thinner, organic solvent, or strong acid.

# Reference Information

## Error Code Display

■ Contact your Daikin dealer in the following cases

### Operation

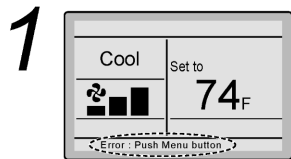

- If an error occurs, either one of the following items will flash in the basic screen.



**Error: Push Menu button**

- \* The Operation lamp will flash.
- \* For Simple display, the message is not displayed, and only the Operation lamp flashes.

**Warning: Push Menu button**

- \* The Operation lamp will not flash.
- \* For Simple display, the message is not displayed, and the Operation lamp does not flash, either.

- Press **Menu/OK** button.

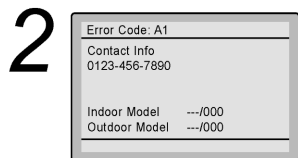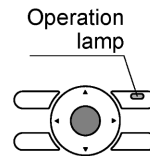

- The error code will flash and the service contact and model name or code may be displayed.
- Notify your Daikin dealer of the Error code and model name or code.

## After-sale Service

### Warning

- **Do not relocate or reinstall the remote controller by yourself.**  
Improper installation may result in electric shocks or fire.  
Consult your Daikin dealer.



### ■ Advise your Daikin Dealer of the following items

- Model name
- Date of installation
- Failure conditions: As precise as possible.
- Your address, name, and telephone number

### ■ Repairs after Warranty Period

Consult your Daikin dealer.

### ■ Inquiry about After-sale Service

Contact your Daikin dealer.

## 12.2 With <BRC082A41W, BRC082A42W(S)> Wireless Remote Controller

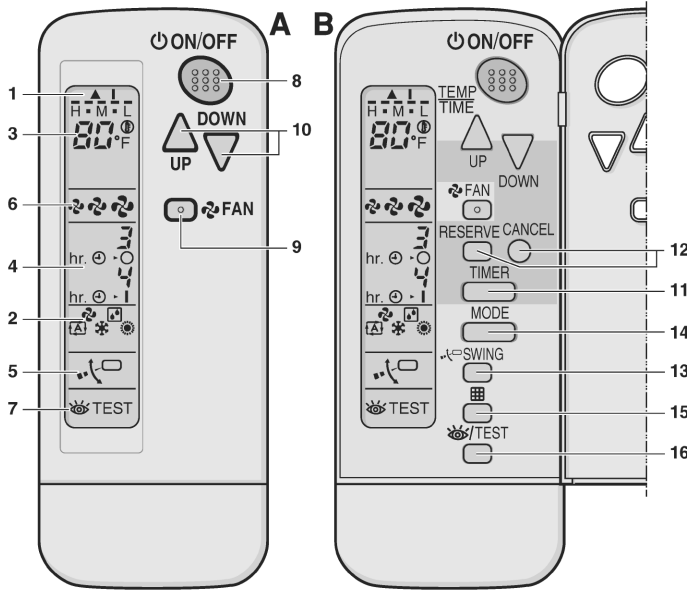


Figure 1

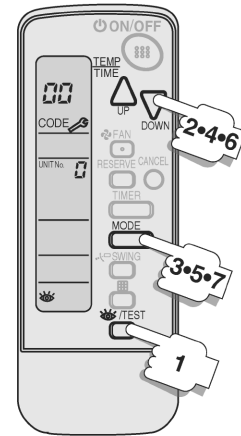


Figure 2

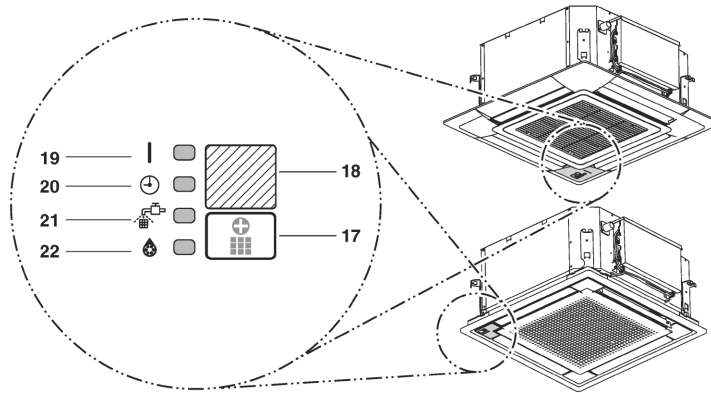


Figure 3

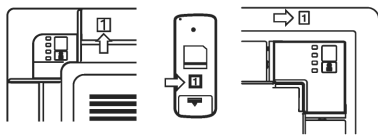


Figure 4

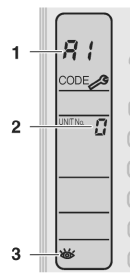


Figure 5

## Contents

<b>Safety considerations .....</b>	<b>1</b>
<b>Names and functions of the operating section .....</b>	<b>2</b>
<b>Handling for wireless remote controller .....</b>	<b>3</b>
Precautions in handling remote controller.....	3
Installation site .....	3
Placing the remote controller in the remote controller holder.....	3
How to put the batteries .....	3
When to change batteries.....	3
In case of a centralized control system.....	3
<b>Operation range .....</b>	<b>4</b>
<b>Operation procedure .....</b>	<b>4</b>
COOLING, HEATING, AUTOMATIC, FAN and DRY operation .....	4
Adjustment .....	5
Program timer operation .....	6
Emergency operation.....	6
Precautions for group control system or two remote control system.....	6
<b>Troubleshooting .....</b>	<b>7</b>
Emergency stop .....	7
In case besides emergency stop .....	7
<b>When you think there is something wrong ...</b>	<b>8</b>



Thank you for purchasing this Daikin remote controller. Carefully read this operation manual before using the air conditioner. It will tell you how to use the unit properly and help you if any trouble occurs. After reading the manual, file it away for future reference.

The English text is the original instruction. Other languages are translations of the original instructions.

## Safety considerations

To gain full advantage of the air conditioner's functions and to avoid malfunction due to mishandling, we recommend that you read this instruction manual carefully before use. The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.



**WARNING**  
Failure to follow these instructions properly may result in personal injury or loss of life.

**CAUTION**  
Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

Information classified as **NOTE** contains instructions to ensure proper use of the equipment. After reading, keep this manual in a convenient place so that you can refer to it whenever necessary. If the equipment is transferred to a new user, be sure also to hand over the manual.



### WARNING

- Be aware that prolonged, direct exposure to cool or warm air from the air conditioner, or to air that is too cool or too warm can be harmful to your physical condition and health.
- When the air conditioner is malfunctioning (giving off a burning odor, etc.) turn off power to the unit and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shock or fire hazards.
- Do not attempt to install or repair the air conditioner yourself. Improper workmanship may result in water leakage, electric shock or fire hazards. Please contact your local dealer or qualified personnel for installation and maintenance work.
- Ask your dealer to perform servicing or repairs whenever necessary. Improper servicing or repairs may result in water leaks, electric shock or fire.
- Do not place objects, including rods, your fingers, etc., in the air inlet or outlet. Injury may result due to contact with the air conditioner's highspeed fan blades.
- Consult your local dealer regarding relocation and reinstallation of the air conditioner. Improper installation work may result in leakage, electric shock or fire hazards.






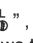









### CAUTION

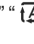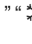- Do not use the air conditioner for purposes other than those for which it is intended. Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
- To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the air conditioner.
- Do not expose plants or animals directly to air flow from the unit as this may cause adverse effects.
- To avoid electric shock, do not operate with wet hands.
- Do not place burners or heaters in places exposed to the air flow from the unit as this may impair combustion of the burner or heater.
- Do not place flammable sprays or operate spray containers near the unit as this may result in fire.

## Names and functions of the operating section

See figure 1, (figure 1B shows the remote controller with front cover opened)

- 1 DISPLAY “▲” (SIGNAL TRANSMISSION)  
This lights up when a signal is being transmitted.
- 2 DISPLAY “ “ “ “ “” (OPERATION MODE)  
This display shows the current OPERATION MODE.
- 3 DISPLAY “”, “” (SET TEMPERATURE)  
This display shows the set temperature.
- 4 DISPLAY “hr.  hr. ” (PROGRAMMED TIME)  
This display shows PROGRAMMED TIME of the system start or stop.
- 5 DISPLAY “” (SWING FLAP)  
Refer to “AIR FLOW DIRECTION ADJUST” on page 5.
- 6 DISPLAY “ “ “” (FAN SPEED)  
The display shows the set fan speed.
- 7 DISPLAY “TEST” (INSPECTION/TEST OPERATION)  
When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.
- 8 ON/OFF BUTTON  
Press the button and the system will start. Press the button again and the system will stop.
- 9 FAN SPEED CONTROL BUTTON  
Press this button to select the fan speed, LOW, MEDIUM or HIGH, of your choice.
- 10 TEMPERATURE SETTING BUTTON  
Use this button for SETTING TEMPERATURE.
- 11 TIMER MODE START/STOP BUTTON  
Refer to “TIMER MODE START/STOP” on page 6.
- 12 TIMER RESERVE/CANCEL BUTTON  
Refer to “PROGRAMMING TIME” on page 6.
- 13 AIR FLOW DIRECTION ADJUST BUTTON  
Refer to “AIR FLOW DIRECTION ADJUST” on page 5.
- 14 OPERATION MODE SELECTOR BUTTON  
Press this button to select OPERATION MODE.
- 15 FILTER SIGN RESET BUTTON  
Refer to the section of MAINTENANCE in the operation manual attached to the indoor unit.
- 16 INSPECTION/TEST OPERATION BUTTON  
This button is used only by qualified service persons for maintenance purposes.

See figure 3, (receiver on decoration panel)

- 17 EMERGENCY OPERATION SWITCH  
This switch is readily used if the remote controller does not work.
- 18 RECEIVER  
This receives the signals from the remote controller.
- 19 OPERATION LAMP (Red)  
This lamp stays lit while the air conditioner runs. It blinks when the unit is in trouble.
- 20 TIMER LAMP (Green)  
This lamp stays lit while the timer is set.
- 21 AIR FILTER CLEANING TIME INDICATOR LAMP (Red)  
Lights up when it is time to clean the air filter.
- 22 DEFROST LAMP (Orange)  
Lights up when the defrosting operation has started.




- NOTE**
- For the sake of explanation, all indications are shown on the display in figure 1 contrary to actual running situations.
  - If the AIR FILTER CLEANING TIME INDICATOR lamp lights up, clean the air filter as explained in the operation manual provided with the indoor unit.  
After cleaning and reattaching the air filter, press the FILTER SIGN RESET button on the remote controller. The AIR FILTER CLEANING TIME INDICATOR lamp on the receiver will go out.
  - The DEFROST lamp will blink when the power is turned on. This is not a malfunction.



## Handling for wireless remote controller

### Precautions in handling remote controller

- Direct the transmitting part of the remote controller to the receiving part of the air conditioner.
- If something blocks the transmitting and receiving path of the indoor unit and the remote controller such as curtains, it will not operate.

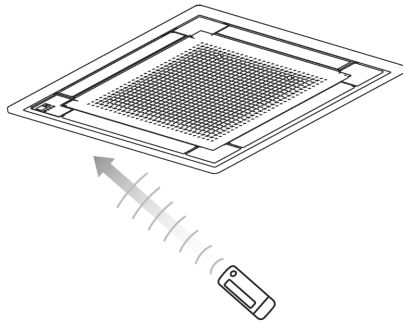


- Transmitting distance is approximately 23ft (7m).
- 2 short beeps from the receiver indicates that the transmission is properly done.
- Do not drop or get it wet. It may get damaged.
- Never press the button of the remote controller with a hard, pointed object. The remote controller may get damaged.

### Installation site

- It is possible that signals will not be received in rooms that have electronic fluorescent lighting. Please consult with the salesman before buying new fluorescent lights.
- If the remote controller operated some other electrical apparatus, move that machine away or consult your dealer.


## Placing the remote controller in the remote controller holder

Choose a place where the signals reach the unit.  
Install the remote controller holder to a wall or a pillar with the attached screw.

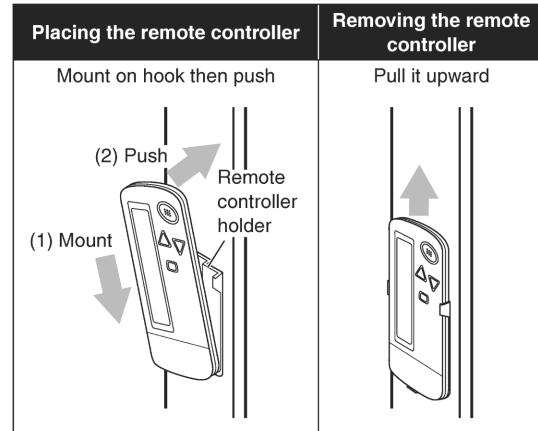


## How to put the batteries

 - 1 Slide the back cover to take it off.




- 2 Insert 2 dry batteries AAA, LR03 (alkaline).

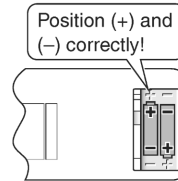

- 3 Replace the back cover.

## When to change batteries

Under normal use, batteries last about a year. However, if the remote controller display begins to fade and the possible transmission range becomes shorter within a year, replace both batteries as specified above.

- NOTE**  Replace the two batteries at the same time, do not use new and old batteries intermixed. In case the remote controller is not used for a long time, take out all batteries in order to prevent liquid leak of the battery.

## In case of a centralized control system

If the indoor unit is under centralized control, it is necessary to switch the remote controller's setting. In this case, contact your dealer.

## Operation range

- Refer to the operation manual provided with the indoor unit or with the outdoor unit.
- If the indoor temperature or humidity is beyond operating conditions as listed in the indoor unit or outdoor unit manuals, it may happen
  - that safety devices work,
  - that the air conditioner does not operate,
  - that water drips from the indoor unit.
- The setting temperature range of the remote controller is 60°F (16°C) to 90°F (32°C).

## Operation procedure

- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

## COOLING, HEATING, AUTOMATIC, FAN and DRY operation

Operate in the following order:

AUTOMATIC operation can be selected only by heat pump system.

For systems without a cool/heat changeover remote control switch

### 1 OPERATION MODE SELECTOR

See figure 1

Press the OPERATION MODE SELECTOR button several times and select the OPERATION MODE of your choice as follows:

- COOLING operation ..... ❄️
- HEATING operation ..... ☀️
- AUTOMATIC operation ..... 🔄
  - In this operation mode, COOL/HEAT changeover is automatically conducted.
- FAN operation ..... 🌀
- DRY operation ..... 🧊
  - This operation is to decrease the humidity in your room with the minimum temperature decrease.
  - The set point is the air temperature when starting operation by DRY operation.
  - Micro computer automatically determines TEMPERATURE and FAN SPEED.
  - DRY operation will not activate when room temperature is 57°F (14°C) or less.

### 2 ON/OFF

Press ON/OFF button.  
The OPERATION lamp lights up or goes off and the system starts or stops operation.



Do not turn OFF power immediately after the unit stops. Wait at least 5 minutes. Failure to do so may result in water leakage etc.

### Explanation of HEATING operation DEFROST operation

- As the frost on the coil of an outdoor unit increase, heating effect decreases and the system goes into DEFROST operation.
- The FAN operation stops and the DEFROST lamp of the indoor unit goes on.  
After about 4 to 12 minutes of DEFROST operation, the system returns to HEATING operation.

### Heating capacity and outdoor air temperature



- Heating capacity drops as outdoor air temperature lowers. If feeling cold, use another heater at the same time with this air conditioner.
- Hot air is circulated to warm the room. It will take some time from when the air conditioner is first started until the entire room becomes warm. The internal fan automatically turns at low speed until the air conditioner reaches a certain temperature on the inside.
- If hot air accumulates on the ceiling and feet are left feeling cold, it is recommended to use a circulator. For details, contact the place of purchase.

### Adjustment



For programming TEMPERATURE, FAN SPEED and AIR FLOW DIRECTION, follow the procedure shown below.

 **TEMPERATURE SETTING**

Press TEMPERATURE SETTING button and program the setting temperature.

-  Each time this button is pressed, setting temperature rises 1°F (0.56°C).
- UP**
-  Each time this button is pressed, setting temperature lowers 1°F (0.56°C).
- DOWN**

**In case of AUTOMATIC operation**

-  Each time this button is pressed, setting temperature shifts to "H" side.
- UP**
-  Each time this button is pressed, setting temperature shifts to "L" side.
- DOWN**

°F(°C)

	H	•	M	•	L
Setting temperature	77 (25)	73 (23)	71.5 (22)	70 (21)	66 (19)

• The setting is impossible for FAN operation

- The setting temperature range of the remote controller is 60°F (16°C) to 90°F (32°C).

 **FAN SPEED CONTROL**


Press FAN SPEED CONTROL button.

- LOW, MEDIUM or HIGH fan speed can be selected.
- The micro computer may sometimes control the fan speed in order to protect the unit.


 **AIR FLOW DIRECTION ADJUST**

The movable limit of the flap is changeable. Contact your dealer for details.

- Up and down adjustment

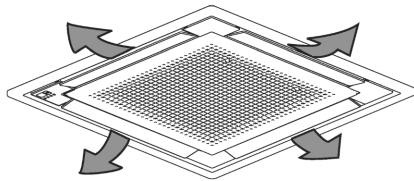

Press the AIR FLOW DIRECTION ADJUST button to select the air direction as shown below.

 Display appears and the air flow direction continuously varies. (Automatic swing setting.)

Press AIR FLOW DIRECTION ADJUST button to select the air direction of your choice.

Display vanishes and the air flow direction is fixed. (Fixed air flow direction setting.)

- Movement of the swing flap  
For the following conditions, the micro computer controls the air flow direction so it may be different from the display.


Operation mode	HEATING
Operation conditions	<ul style="list-style-type: none"> <li>■ When starting operation.</li> <li>■ When room temperature is higher than the set temperature.</li> <li>■ In DEFROST operation. (The flaps turn to the horizontal position to avoid blowing cold air directly on the occupants of the room.)</li> </ul>

**NOTE** ■ Operation mode includes AUTOMATIC operation.

### Program timer operation


Operate in the following order.

- The timer is operated in the following two ways:
  - Programming the stop time (⏸ ▶ ○).
  - Programming the start time (⏸ ▶ |).
- The timer can be programmed for a maximum of 72 hours.
- The start and the stop time can be simultaneously programmed.


**1**  **TIMER MODE START/STOP**


Press the TIMER MODE START/STOP button several times and select the mode on the display. The display blinks.


- For setting the timer stop ..... ⏸ ▶ ○
- For setting the timer start ..... ⏸ ▶ |

**2**  **PROGRAMMING TIME**

Press the TEMPERATURE SETTING button and set the time for stopping or starting the system.


 UP  
When this button is pressed, the time advances by 1 hour.

 DOWN  
When this button is pressed, the time goes backward by 1 hour.

**3**  **TIMER RESERVE**


Press the TIMER RESERVE button.


- The timer setting procedure ends.
- The display changes from blinking light to a constant light.

**4**  **TIMER CANCEL**

Press the TIMER CANCEL button to cancel programming. The display vanishes.

*For example.*  
When the timer is programmed to stop the system after 3 hours and start the system after 4 hours, the system will stop after 3 hours and then 1 hour later the system will start.

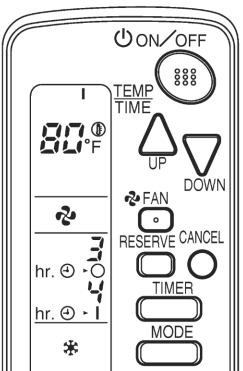

**NOTE**  After the timer is programmed, the display shows the remaining time.

### Emergency operation

When the remote controller does not work due to battery failure or the absence thereof, use the switch which is located beside the discharge grille on the indoor unit. When the remote controller does not work, contact your dealer.


**1 START**

Press the emergency operation switch.

- The unit runs in the previous mode.
- The system operates with the previously set air flow direction.

**2 STOP**


Press the emergency operation switch again.

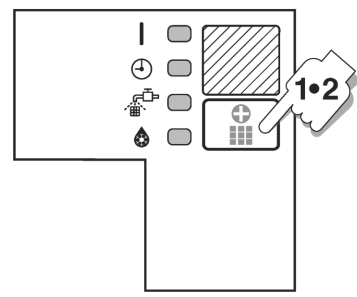

### Precautions for group control system or two remote control system

This system provides two other control systems beside individual control (one remote controller controls one indoor unit) system. Confirm the following if your unit is of the following control system type:

- Group control system  
One remote controller controls up to 16 indoor units. All indoor units are equally set.
- Two remote controller control system  
Two remote controllers control one indoor unit. (In case of group control system, one group of indoor units.) The unit follows individual operation.

**NOTE**  Cannot have a two remote controller control system with only wireless remote controllers. (It will be a two remote controller control system having one wired remote controller and one wireless remote controller.)

- Under two remote controller control system, wireless remote controller cannot control timer operation.
- Only the OPERATION lamp out of 3 other lamps on the indoor unit display functions. Contact your dealer in case of changing the combination or setting of group control and two remote controller control systems.

## Troubleshooting

### Emergency stop

(See figure 2)

When the air conditioner stops unexpectedly, the OPERATION lamp on the indoor unit starts blinking. Take the following steps yourself to read the malfunction code that appears on the display. Contact your dealer with this code. It will help pinpoint the cause of the trouble and speeding up the repair.

1



Press the INSPECTION/TEST button to select the inspection mode.  
"UNIT No." lights up and the unit number "□" blinks.

2



Press the TEMPERATURE SETTING button and change the unit number.  
Hold down the TEMPERATURE SETTING button until the indoor unit emits one of the following beep tones.

#### Number of beeps

- 3 short beeps ..... perform all steps from 3 to 6
- 1 short beep ..... perform steps 3 and 6
- 1 long beep.....No trouble

3



Press the OPERATION MODE SELECTOR button.  
"□" on the left-hand of the malfunction code blinks.

4



Press the TEMPERATURE SETTING button and change the malfunction code.  
Press until the indoor unit makes 2 short beeps.

5



Press the OPERATION MODE SELECTOR button.  
"□" on the right-hand of the malfunction code blinks.

6



Press the TEMPERATURE SETTING button and change the malfunction code.  
Press until the indoor unit makes a long beep.  
The malfunction code is fixed when the indoor unit makes a long beep.

7



Reset of the display.

Press OPERATION MODE SELECTOR button to get the display back to its normal state.

### In case besides emergency stop

- 1 The unit does not operate at all.
  - Check if the receiver is exposed of sunlight or strong light. Keep receiver away from light.
  - Check if there are batteries in the remote controller. Place the batteries.
  - Check if the indoor unit number and wireless remote controller number are equal. See figure 4. Operate the indoor unit with the remote controller of the same number. Signals transmitted from a remote controller of a different number cannot be accepted. (If the number is not mentioned, it is considered as "1".)
- 2 The system operates but it does not sufficiently cool or warm.
  - Check if the set temperature is proper.
  - Check if the FAN SPEED is not set to LOW SPEED.
  - Check if the air flow angle is proper.
 Contact the place of purchase in the following case.



When you detect a burning odor, shut OFF power immediately and contact the place of purchase. Using the equipment in anything but proper working condition can result in equipment damage, electric shock and/or fire.

#### Trouble

The OPERATION lamp of the indoor unit is blinking and the unit does not work at all. See figure 5.

- 1 Malfunction code
- 2 Unit No. which sensed trouble
- 3 INSPECTION display

#### Remedial action

Check the malfunction code (□) on the remote controller. Notify and inform the model name and what the malfunction code indicates to your dealer.

## When you think there is something wrong

The following symptoms do not indicate air conditioner malfunction:

### Symptom 1: The system does not operate

Example	Reason
The system does not restart immediately after the ON/OFF button is pressed.	If the OPERATION lamp lights, the system is in normal condition. It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.
If operation stops as a result of changing the temperature setting, there will be a delay before operation restarts if the setting is lowered (in COOLING) or raised (in HEATING) again.	It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.
If the reception beep is rapidly repeated 3 times (It sounds only twice when operating normally.)	Control is set to the optional controller for centralized control.
If the DEFROST lamp on the indoor unit's display is lit when heating is started.	This indication is to warn against cold air being blown from the unit. There is nothing wrong with the equipment.
The outdoor unit stops.	Because the room temperature reaches to the set temperature. The indoor unit goes into FAN operation.

### Symptom 2: The unit stops once in a while

Example	Reason
The remote controller indicates "U4" and "U5", the unit stops. Within several minutes the unit restarts.	Due to electrical noise other than that from the air conditioner, the communication between the units is cut off and the unit stops. When the noise is gone, the unit automatically restarts.

### Symptom 3: No changeover is available between HEATING and COOLING modes

Example	Reason
The indoor unit makes a long beep sound.	When operation changeover is under control, the control is set to the mode that cannot be carried out.

### Symptom 4: Air flow rate cannot be obtained as set

Example	Reason
During HEATING operation, even if the FAN SPEED CONTROL button is pressed, the air flow rate does not change.	When the room temperature reaches the indoor unit set temperature, the outdoor unit stops and the air flow rate of indoor unit drops to the minimum. This is to avoid the cold air from getting in contact with the people in the room.

### Symptom 5: Air discharge direction is not as set

Example	Reason
The remote controller indication and the air discharge direction is not the same. Air discharge direction swing is impossible.	Because it is controlled by microcomputer. Refer to "AIR FLOW DIRECTION ADJUST" on page 5.

### Symptom 6: Only a part of indication shows

Example	Reason
Even if the unit is operated, only the operation indication shows, or even if the indication shows, soon after, the indication other than that for operation disappears.	The corresponding indoor unit is that for multi-system and the remote controller is set to the multi-system.

### Symptom 7: No indication shows or all indication show

Example	Reason
When the remote controller button is pressed.	The battery is dead.

### Symptom 8: Insufficient cooling

Example	Reason
It is in DRY operation.	The DRY operation is an operation mode trying to keep the room temperature constant as much as possible. Refer to "COOLING, HEATING, AUTOMATIC, FAN and DRY operation" on page 4.

## 13. Options

### 13.1 Option List

#### 13.1.1 Indoor Unit

	Option Name		Model Name
1	Decoration panel (required)	New design (white)	BYFQ60C2W1W
		New design (silver)	BYFQ60C2W1S
		Current design (white)	BYFQ60B3W1
2	Remote controller (required)	Wired type ★1	BRC1E73
		Wireless type	BRC082A42W ★2 ★6 BRC082A42S ★3 ★6 BRC082A41W ★4 ★6
3	Sensor kit		BRYQ60A2W ★2 / BRYQ60A2S ★3
4	Sealing member of air discharge outlet		BDBHQ44C60
5	Panel spacer		KDBQ44BA60A ★4
6	Fresh air intake kit (direct installation type)		KDDQ44XA60
7	Longlife filter		KAFQ441BA60
8	Central remote controller		DCS302C71
9	Unified ON/OFF controller		DCS301C71
10	Schedule timer controller		DST301BA61
11	Adaptor for wiring ★5		KRP1C75
12	Wiring adaptor for electrical appendices ★5		KRP4A74
13	Installation box for adaptor PCB		KRP1BA101
14	Remote sensor		KRCS01-4B


- Notes:**
- ★1 Wiring for wired remote controller should be obtained locally.
  - ★2 For BYFQ60C2W1W
  - ★3 For BYFQ60C2W1S
  - ★4 For BYFQ60B3W1
  - ★5 Installation box for adaptor PCB (KRP1BA101) is necessary.
  - ★6 Sensing function and individual flap control function are not available.

#### 13.1.2 Outdoor Unit





	Option Name	09/12 Class	15/18 Class
1	Air direction adjustment grille	KPW937E4	KPW063A4
2	Back protection wire net	KKG067A41	KKG063A42
3	Drain plug ★	KKP937A4	
4	Drain pan heater	FTDBHMS, KEH067A41E	FTDBHML, KEH063A4E
5	Snow hood (intake side plate)	KPS067A41	KPS063A41
6	Snow hood (intake rear plate)	KPS067A42	KPS063A44
7	Snow hood (outlet)	KPS067A44	KPS063A47

- Note:** ★ Standard accessory

## 13.2 &lt;BRYQ60A2W(S)&gt; Sensor Kit

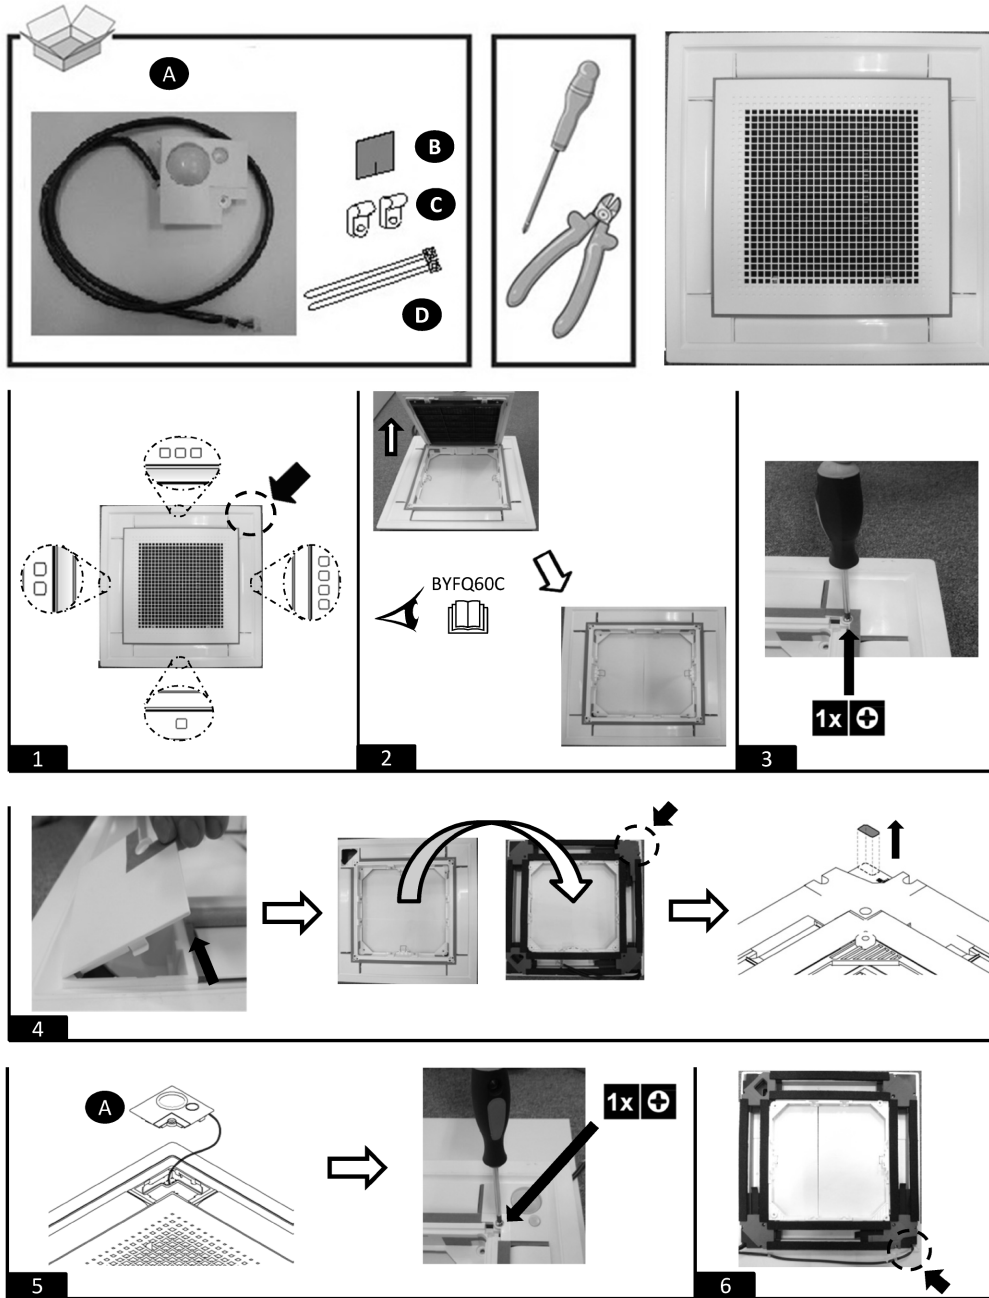



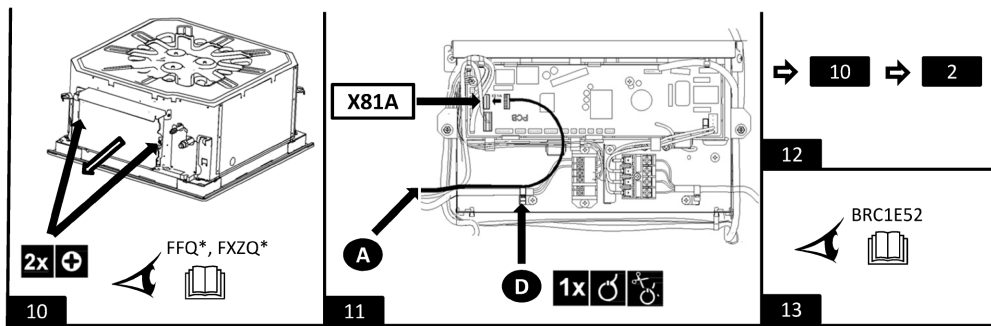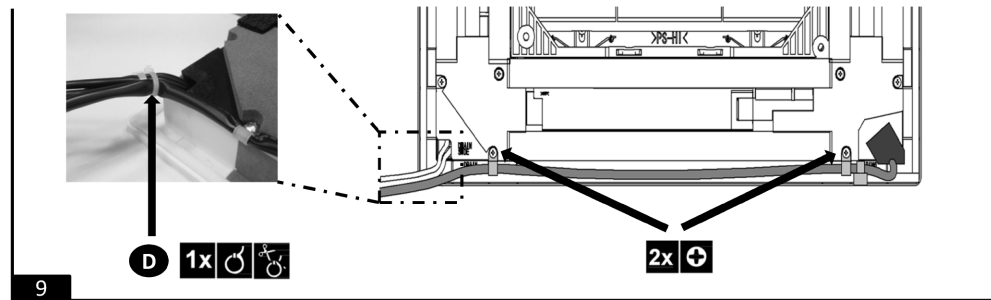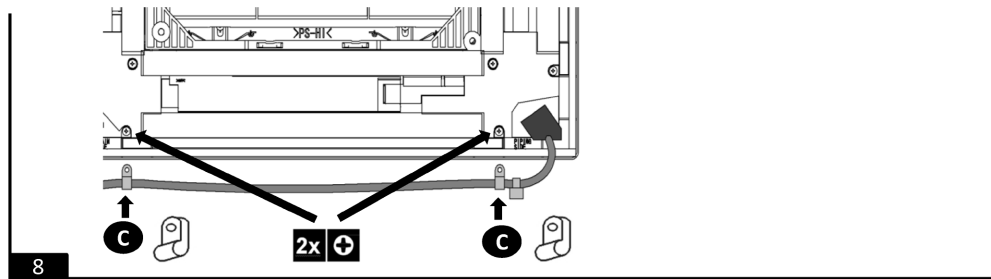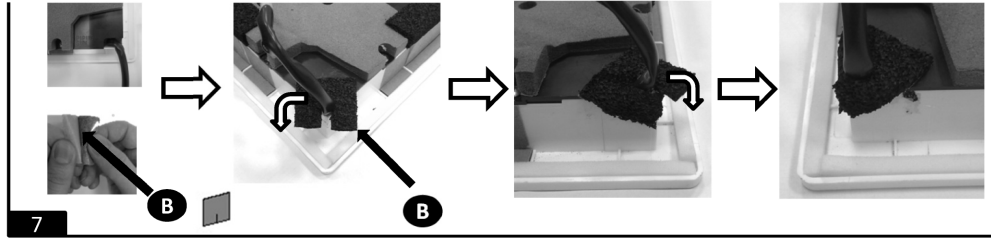


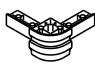


### 13.3 <KDBQ44BA60A> Panel Spacer


 
#### Caution

- When the Panel Spacer is installed, it is not possible to have 2-way air outlet.
- Refer to the installation manual for both indoor unit and the Panel spacer for its installation.

#### Contents of kit

Check if following parts are included with your kit.

Name	Panel spacer frame	Resin corner part	Fixing metal	Screw
Quantity	4 PCS.	4 PCS.	4 PCS.	28 PCS.
Shape · number	① 	② 	③ 	④ 

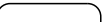
Name	Sealing material	
Quantity	2 PCS.	2 PCS.
Shape · number	⑤ 	⑥ 

#### 1 Preparation of the decoration panel

- Handle the decoration panel with care.

Never place the panel face down, or lean the panel against wall or place on the projective object.  
(It causes the dent or damage of the surface of the panel or damage of swing motor.)



- (1) Remove the suction grill from the decoration panel.  
(Refer to the installation manual of the decoration panel how to remove.)
- (2) Place the panel face down on the corrugated board or the vinyl sheet to protect the surface of the panel.

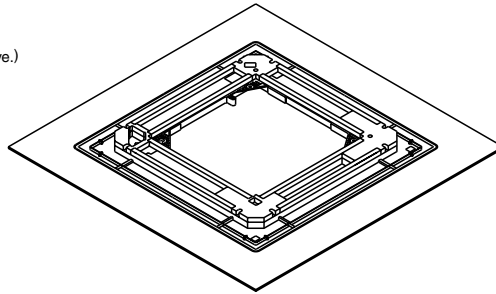


#### 2 Installation of the indoor unit

Adjust the height of the indoor unit.


Be sure the piping will not contact with the ceiling joist etc. after adjusting the height.

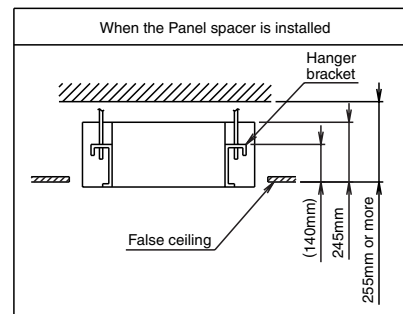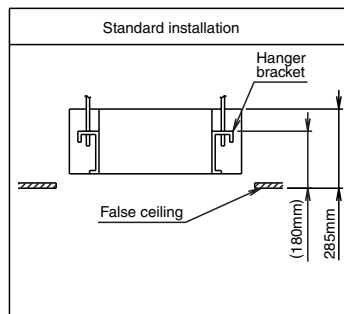


**3** Assembly of panel spacer

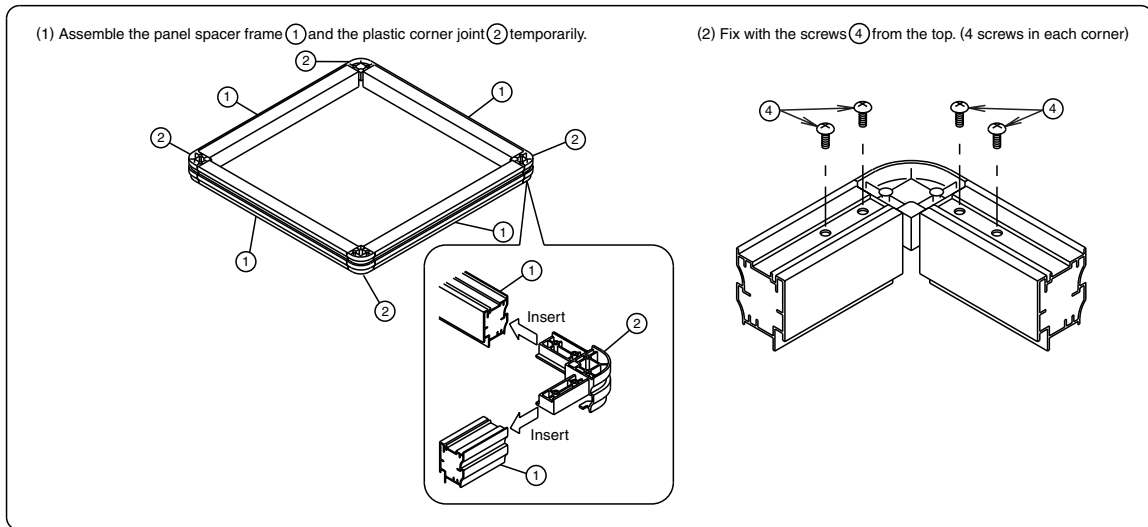

**4** Fixing to the decoration panel

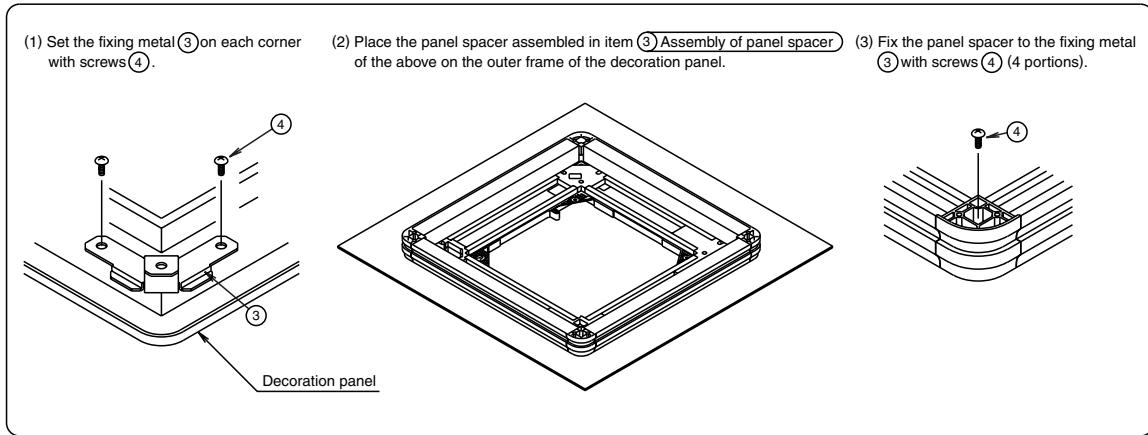

**5** Adhesion of the sealing material

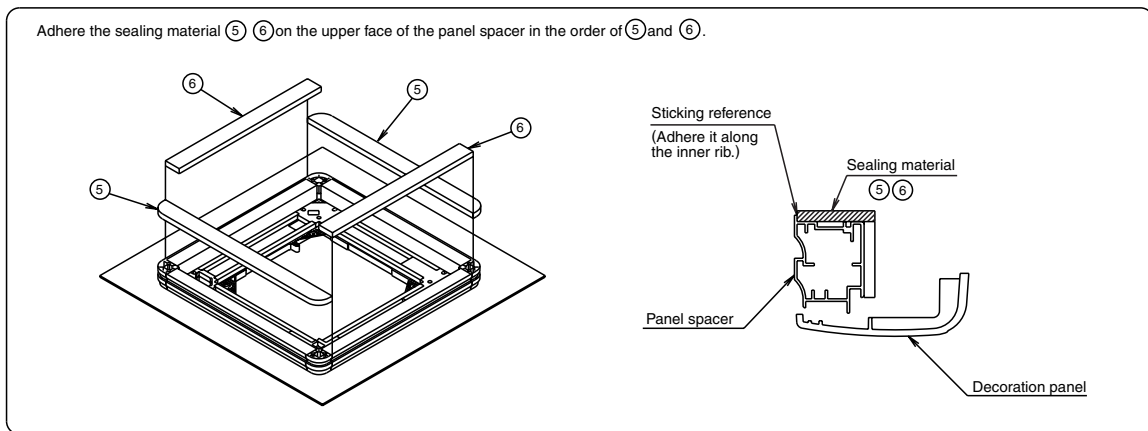

**6** Installation of the decoration panel

Install the decoration panel to the indoor unit according to the installation manual of decoration panel.

The panel spacer is not firmly fixed to the decoration panel, so that never hold the panel spacer directly or lean the decoration panel extremely.

## 13.4 <KDDQ44XA60> Fresh Air Intake Kit






### Remarks :

1. This kit can be installed to the Ceiling mounted cassette type (Multi-flow).
2. When installing this kit, duct (Nominal dia. :  $\phi 100$ ) is required on site.

- In case that metal duct is penetrated through wooden walls, make sure the duct and the wall electrically insulated.
- Install the duct inclined downwardly to outdoor so that the rain may not get into the duct. (Inclination 1/100 to 1/50)
- To avoid birds, small animals or insects getting inside the duct, make sure to install net where it contacts the outside air.

### Contents

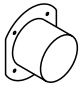Prior to installation, make sure you have the complete kit of parts.

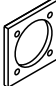
Name	① Duct flange	② Screws	③ Insulation for duct flange	④ Insulation for opening of unit	⑤ Installation manual
Q'ty	1 piece	4 pieces	1 piece	1 piece	1 piece
Shape		 M4×12			

### Necessary tools

Philips head screw driver, nipper, cutter etc.

## 1 Installation procedures of duct flange

1. Cut off the knockout hole on the side plate. (Fig.1)

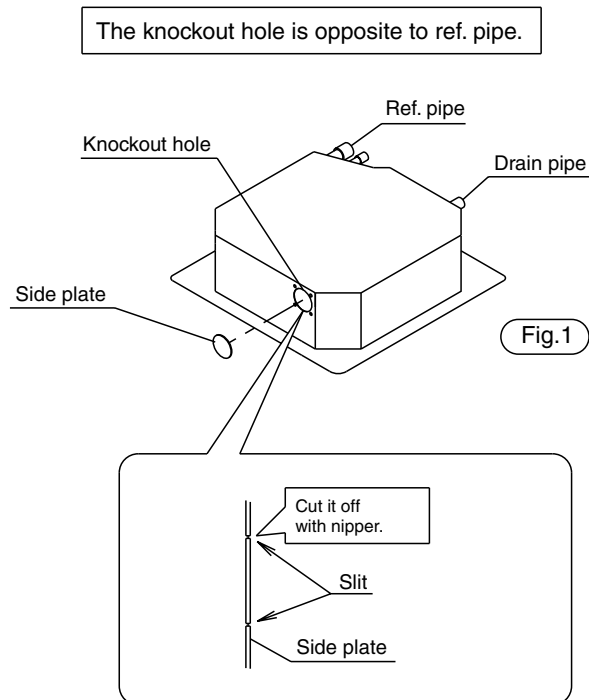

2. Adhere the insulation ④ for opening of unit to the opening. (Fig. 2)

Put the insulation ④ to be suitable for the hole of the insulation ④ and hole of the indoor unit.  
However, put the insulation ④ so as not to conceal the screw hole of the indoor unit.

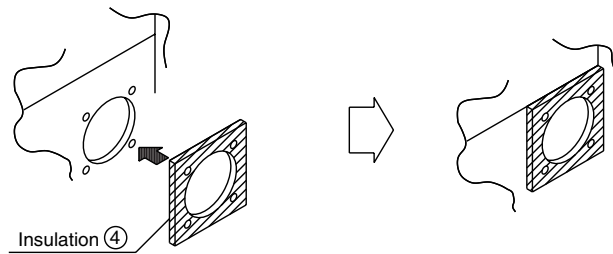


Fig. 2

3. Install the duct flange ① with screws ② (M4×12, 4 screws) to the opening and adhere the insulation ③ (Fig. 3)

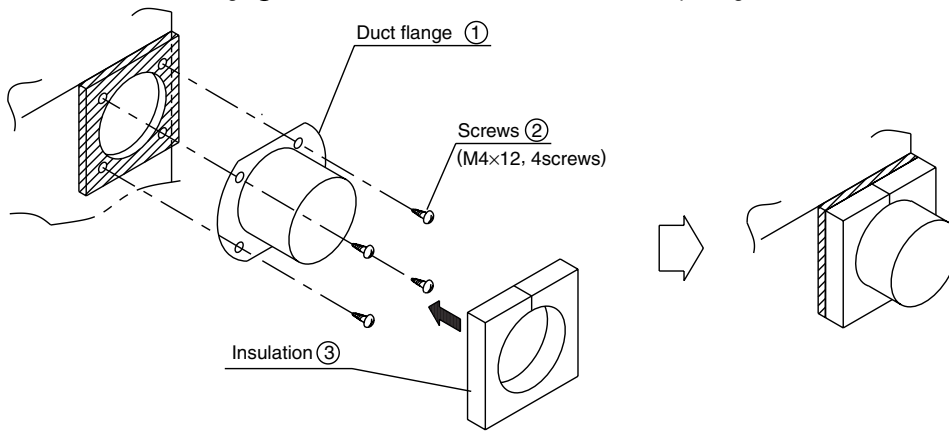


Fig. 3

2 Installation procedures of duct <Nominal diameter of duct : φ100>

1. Connect the duct to the duct flange. (Flange fits inside the duct.) (Fig. 4)  
2. After connection, wrap vinyl tape (field supply) around the duct connection to prevent air leak.



 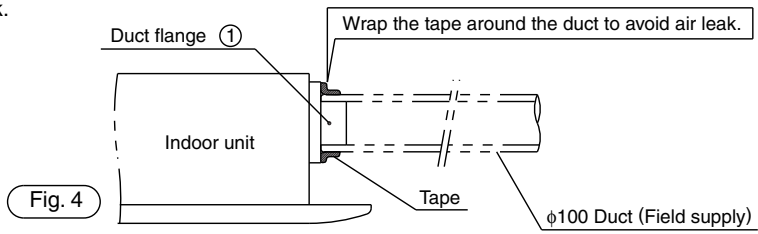


Fig. 4

Precaution

- All ducts must be completely insulated.
- Do not do the followings when installing duct.

 - A) To bend the duct excessively    B) To bend the duct too many times    C) To reduce the duct diameter



## 13.5 <DCS302C71> Central Remote Controller

### 13.5.1 Installation Manual

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained. Also, inform customers that they should store this installation manual along with the operation manual for future reference. This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

- ⚠ WARNING** ..... Indication a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- ⚠ CAUTION** ..... Indication a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
- ⚠ NOTE** ..... Indication situation that may result in equipment or property-damage-only accidents.

#### ⚠ WARNING

**Ask your dealer or qualified personnel to carry out installation work. Do not try to install the machine by yourself.**  
Improper installation may result in water leakage, electric shocks or fire.

**Perform installation work in accordance with this installation manual.**  
Improper installation may result in water leakage, electric shocks or fire.

**Be sure to use only the specified accessories and parts for installation work.**  
Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.

**Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.**  
Improper installation work may result in the equipment falling and causing accidents.

**Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual.**  
An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.

**Make sure that all wiring is secured, the specified wires and used, and no external forces act on the terminal connections or wires.**  
Improper connections or installation may result in fire.

**When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the electric parts box lid can be securely fastened.**  
Improper positioning of the electric parts box lid may result in electric shocks, fire or the terminals overheating.

**Before touching electrical parts, turn off the unit.**

**Ground the air conditioner. Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire.**  
Incomplete grounding may result in electric shocks.

**When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air.**

**Do not reconstruct or change the settings of the protection devices.**  
If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may result.

**Do not touch the switch with wet fingers.**  
Touching a switch with wet fingers can cause electric shock.

**Install an leak circuit breaker, as required.**  
If an leak circuit breaker is not installed, electric shock may result.

**Do not install the air conditioner or the remote controller in the following locations:**

- (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen  
Plastic parts may deteriorate and fall off or result in water leakage.
- (b) where corrosive gas, such as sulfurous acid gas, is produced  
Corroding, copper pipes or soldered parts may result in refrigerant leakage.
- (c) near machinery emitting electromagnetic waves  
Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the equipment.
- (d) where flammable gases may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.  
Operating the unit in such conditions may result in fire.

#### ⚠ CAUTION

**Be very careful about product transportation.**

**Safely dispose of the packing materials.**  
Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.  
Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

**Do not turn off the power immediately after stopping operation.**  
Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

#### ⚠ NOTE

**Install the indoor and outdoor units, power supply wiring and connecting wires at least 3.5ft. away from televisions or radios in order to prevent image interference or noise.**  
(Depending on the radio waves, a distance of 3.5ft. may not be sufficient enough to eliminate the noise.)

**Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps (inverter or rapid start types)**  
Install the indoor unit as far away from fluorescent lamps as possible.

**This unit is a class A product.**  
In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.


**Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

### 1 COMPONENTS

Check the following components are included in this optional accessory before installation.

Installation screw (M4 x 16)	4
Operation manual	1
Installation manual	1
Installation table	1


Body

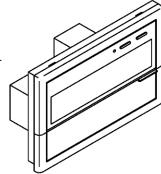

When using this optional accessory an electric parts box of KJB31 1A is required. For installation, a steel electric parts box to be embedded is mandatory.

### 2 SYSTEM CONFIGURATION

With the central remote controller, unified operation/stop is possible with up to a maximum 64 groups of indoor units. When using 2 central remote controllers, unified operation is possible with up to a maximum 128 groups. With this optional accessory, setting of control modes including operation, stop, operation controlled by timer, and ON/OFF control possible/impossible by remote controller can be set individually by zones while it enables to control and display the operation state such as set temperature. It can be connected with the external key system, host computer monitor panel, etc., through forced OFF input (no-voltage normally open contactor). A zone is a one or more groups together. In general, the same settings are used throughout a zone.

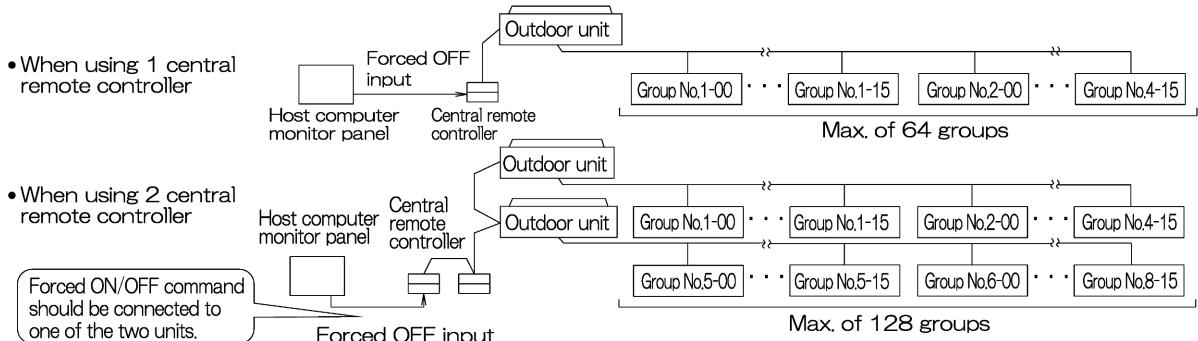


The central remote controller and the separately sold remote control adapter circuit board or group remote control adapter cannot be used together. See the D-BACS design guide for details.

### 3 INSTALLATION

 
(1) Open the upper part of remote controller. Insert a ⊖ screwdriver (2 locations) into the recess between the upper part and the lower part of remote controller and twist the screwdriver lightly.

PC board is attached with both the upper and lower part of remote controller. Do not damage the board with the screwdriver.

(2) Open the upper part of remote controller and install the Electric parts box with the attached installation screws (M4 x 16).



Installation screws (4)

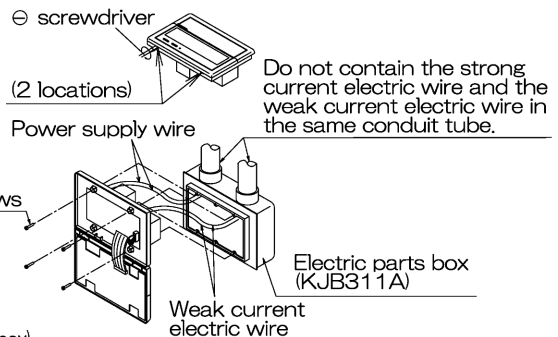

NOTE) Suitable length of the electric wire is about 160mm. (from electric parts box) If it is difficult to contain a long wiring, strip the sheathed part of the wiring.

# 4 INITIAL SETTING

Setting (1) through (3) are initialized when power is turned ON, therefore complete settings BEFORE activating the power. (The positions of connectors and switches used for settings in this section are shown in Fig. 1.)

- (1) Connector for setting master controller (X1A) (Provided with connector at factory set)
  - When using only 1 central remote controller, do not disconnect the connector for setting master controller. (Use the unit with the connector in the state in which it was delivered.)
  - When using multiple central remote controllers, or using the central remote controller in conjunction with the optional controllers for centralized control, makes settings as indicated in the below table.

 
Pattern of connection of optional controllers for centralized control			Connector for setting master controller (X1A) Setting, Removed		
Central remote controller	Unified ON/OFF controller	Schedule timer	Central remote controller	Unified ON/OFF controller	Schedule timer
1 to 4	1 to 16	1 1	Set one to "Used" and all the rest to "Not used"	Set all to "Not used"	"Not used" "Not used"

(Remove all the connectors for the central remote controller, the on/off controller, and the schedule timer when using the unit together with the Ve-UP controller, the master station II, the DMS interface, the payment management unit, or the parallel interface station.)

- (2) Address setting  
Two central remote controllers can be used as shown in **2 SYSTEM CONFIGURATION**, to control anywhere up to a max. 128 groups of indoor units. In this case, group address must be set. This is done with the switch for setting each address (SS3).


SS3 setting	Indoor unit address	SS3 setting	Indoor unit address
SETTING EACH ADDRESS 5-00 ~ 8-15	To control indoor units from group Nos. 1-00 through 4-15	SETTING EACH ADDRESS 5-00 ~ 8-15	To control indoor units from group Nos. 5-00 through 8-15

- (3) MAIN/SUB changeover switch setting  
With two central remote controllers, centralized control (indoor units) is possible from different locations. In this kind of set-up, it is necessary to set the MAIN/SUB changeover switch.




One of the two central remote controllers (1) - (2) is set to "MAIN" while the other is set to "SUB".

- (4) Setting of the sequential operation function  
The central remote controller is equipped with a sequential operation function that sequentially turns indoor units on in 2-second intervals during unified operation. (Sequential operation is factory set to "ON.") To switch sequential operation ON or OFF, set as follows.

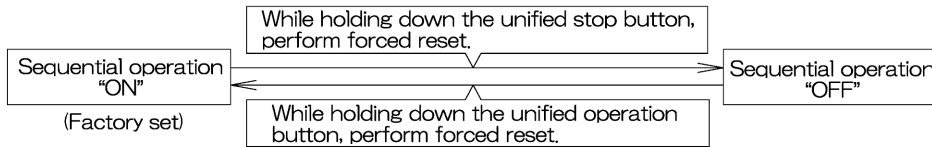

NOTE: The sequential operation function is designed to reduce the load on the power supply equipment, but does not guarantee that compressors will not be started simultaneously. You cannot therefore count on a capacity reduction effect by power supply equipment breaker selection.


- (5) Forced reset switch  
When changing the setting of the connector for setting master controller, etc., you can reset simply by setting it to the reset side once and returning to the normal side, without turning the power OFF. (For normal operation, set the switch to the normal side.)

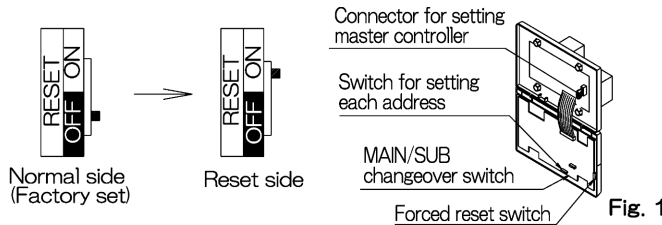




## 5 ELECTRIC WIRING

### WIRING OUTLINE

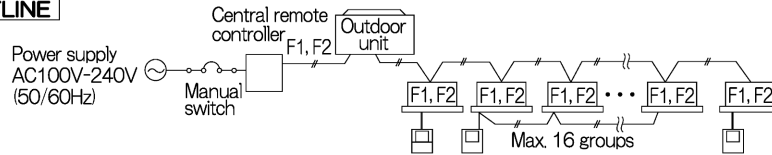

### WIRING TO THE INDOOR UNIT AND OUTDOOR UNIT

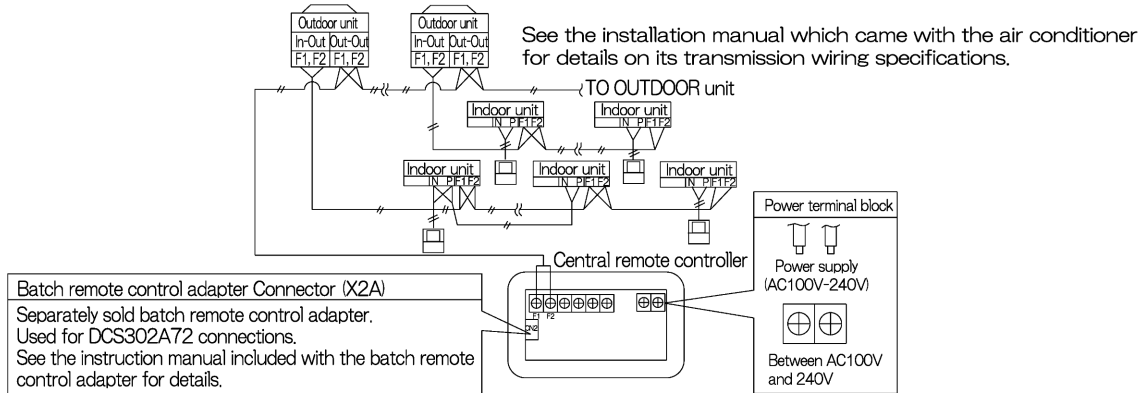

**Batch remote control adapter Connector (X2A)**  
 Separately sold batch remote control adapter. Used for DCS302A72 connections. See the instruction manual included with the batch remote control adapter for details.

#### Wiring specifications

Power supply wiring	2mm <sup>2</sup>
Transmission wiring for control	0.75 – 1.25 mm <sup>2</sup> sheathed vinyl cord or cable (balanced type) – maximum length 1000 m (total overall wiring length 2000 m)
Manual switch	10A or 15A

 
Wire the indoor units to the outdoor units and between all power, indoor units, and remote controllers. See the instruction manual included with the indoor and outdoor units for details.

#### CONTROL TERMINAL STRIP

\*1 For connecting Indoor unit (F1, F2)

\*2 Forced OFF input (T1, T2)

None of the indoor units connected to the forced OFF input contact (non-voltage contact with minimal current) will operate when it is shut off. Use only contactors which guarantee the minimum applicable load DC 16V, 10mA.




NOTE) Use instantaneous contactor of over 200m sec. energizing time, when necessary.

\*3 For schedule timer (D1, D2)

Power can be supplied to the schedule timer (DST301B61) separately sold. For details, refer to the installation manual of the schedule timer.

 Wire \*2 and \*3 only when necessary.



#### (NOTE)

Do not connect the power supply wiring (100 to 240V) to the control terminal strip. If connected by mistake, it may damage or burn electrical parts of optional controllers for centralized control and indoor unit. It may result in serious danger. Be sure to check wirings before turning the power ON.

## 6 SETTING GROUP NO. FOR CENTRALIZED CONTROL

Set the group number of each group of the indoor unit from the remote controller. (In case of no remote controller, also connect the remote controller and set the group No. Then, remove the remote controller.)

(1) Turn ON the power of the indoor unit and central remote controller.

(Unless the power is ON, no setting can be made.)

Check that the installation and electrical wiring are correct before turning the power supply ON.

(When the power supply is turned ON, all LCD appear once and the unit may not accept the operation for about one minute with the display of "88".)

(2) While in the normal mode, hold down the " " button for a minimum of 4 seconds.

The remote controller will enter the FIELD SET MODE.


(3) Select the MODE No. " " with the " " button.

(4) Use the " " button to select the group No. for each group.

(Group numbers increase in the order of 1-00,1-01,...1-15, 2-00,...8-15.)

(5) Press " " to set the selected group No.

(6) Press " " to return to the NORMAL MODE.

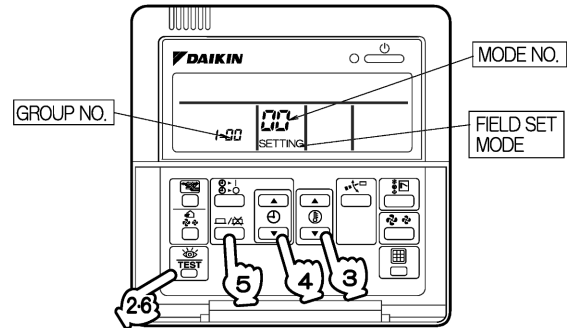

NOTES) ● For simplified remote controller, see the installation table.  
● See the instruction manuals which came with the VentiAir and adapters (i.e., multi-purpose adapters) for details on their Group No. settings.

NOTICE Enter the group No. and installation place of the indoor unit into the installation table in the operation manual. Be sure to keep the operation manual for maintenance.

## 7 TEST OPERATION (Perform a test operation in the individual screen before registering zones.)

Before starting test operation, check that the power is supplied to the indoor and outdoor units, and central remote controller.

(1) Select the display "INDIVIDUALLY"

Press " " button to display "INDIVIDUALLY"

(2) Select the group to be tested.

Select the group No. with " " " " " " " " button.

(3) Press " " button to select the test operation mode.

"TEST" is displayed.

"HOST" is displayed on the remote controller.


(4) Press " " button within 10 seconds after entering into the test operation mode.

Operation the unit for 30 minutes.

When pressing the " " button, the unit stops operating.

If the operation lamp flashes, it indicates a malfunction.

Call the group of flashing display, confirm malfunction code, and check the source of malfunction. (The operation manual lists all error codes, so refer to it.)

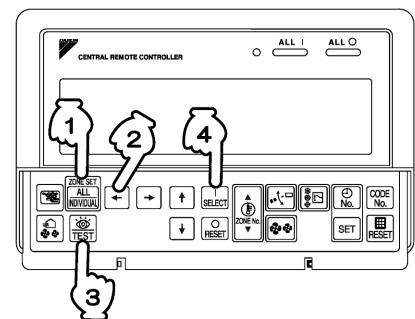

NOTES) ● For test operation, refer to the installation manual of the outdoor unit.  
● After turning the power supply ON, if the unit does not accept operation for two minutes or more with the display of "88", check the following points.  
● Check that setting of the connector for setting master controller is correct.  
● Check that the group No. for centralized control has been set.

1P124687-1A

### 13.5.2 Operation Manual

## BEFORE USE


### ■ GENERAL DESCRIPTION OF SYSTEM

This central remote controller can monitor and control up to 64 indoor unit groups.  
Using two central remote controllers allows monitoring and controlling of up to 128 indoor unit groups.


#### Main Functions

1. Batch starting and stopping of indoor units connected to the central remote controller.
2. Handling of operation settings such as start/stop, timer operation, remote controller prohibition/permission, etc., and operation status settings such as temperature.
3. Operation status monitoring of operation mode, set temperature, etc.
4. Can be connected to an external central monitor panel and key system using the forced stop input (non-voltage a connector).

- When using 1 central remote controller

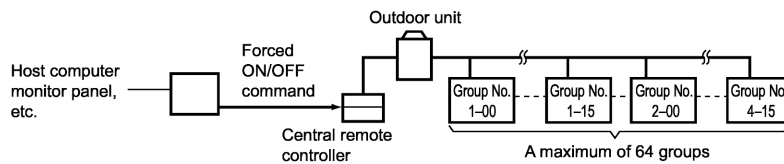

- When using 2 central remote controllers

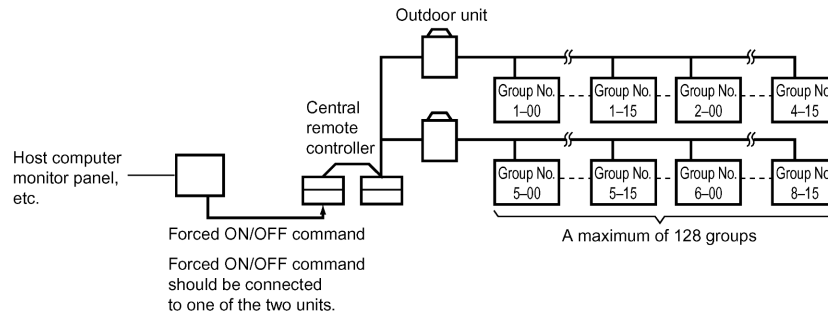


(The central remote controller and the separately sold remote control adapter circuit board or group remote control adapter cannot be used together.)


\* GROUP OF INDOOR UNIT refers to the below.

1. A single indoor unit without remote controller

 
1. A single indoor unit without remote controller



 2. A single indoor unit controlled by one or two remote controllers




3. Maximum of 16 indoor units, group-controlled by one or two remote controllers

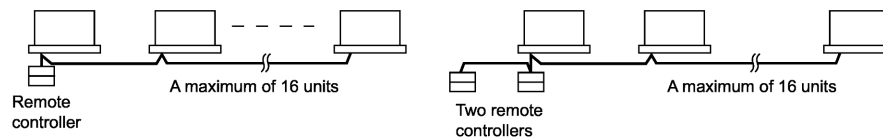

\* Zone control from the central remote controller

Zone control is available from the central remote controller. With it, it is possible to make unified settings for multiple groups, so setting operations are greatly simplified.

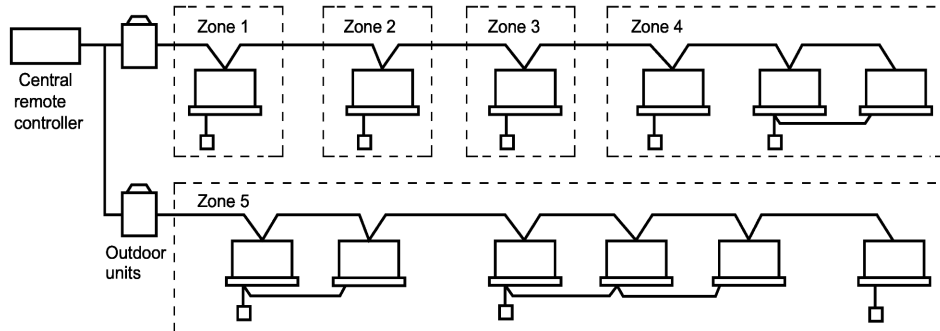

- Any setting you make within a given zone will apply to all groups in the said zone.
- A maximum of 64 zones can be set from a single central remote controller. (Each zone contains a maximum of 64 groups.)
- Zones can be set randomly from the central remote controller.

## SAFETY CONSIDERATIONS

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly.

After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained.

Also, inform customers that they should store this installation manual along with the operation manual for future reference. This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of danger, warning, caution and note symbols.

**! DANGER** ..... Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

**! WARNING** .... Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**! CAUTION** .... Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**! NOTE**..... Indicates situation that may result in equipment or property-damage-only accidents.

**Keep these warning sheets handy so that you can refer to them if needed.**

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

### **! DANGER**

- Any abnormalities in the operation of the air conditioner such as smoke or fire could result in severe injury or death. Turn off the power and contact your dealer immediately for instructions.
- **Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.**
- **Safely dispose of the packing materials.** Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries. Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death due to suffocation.

### **! WARNING**

- **Ask your dealer for installation of the air conditioner.** Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.
- **Ask your dealer for improvement, repair, and maintenance.** Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.
- **Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.**
- **Ask your dealer to move and reinstall the air conditioner or the remote controller.** Incomplete installation may result in a water leakage, electric shock, and fire.
- **Never let the indoor unit or the remote controller get wet.** It may cause an electric shock or a fire.

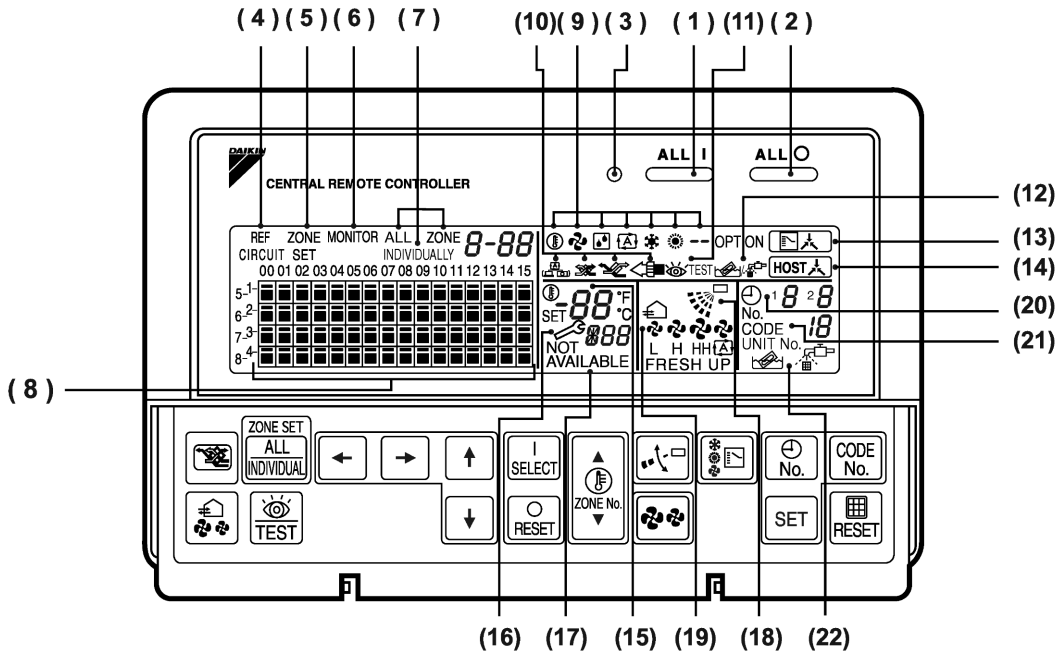


Fig. 1

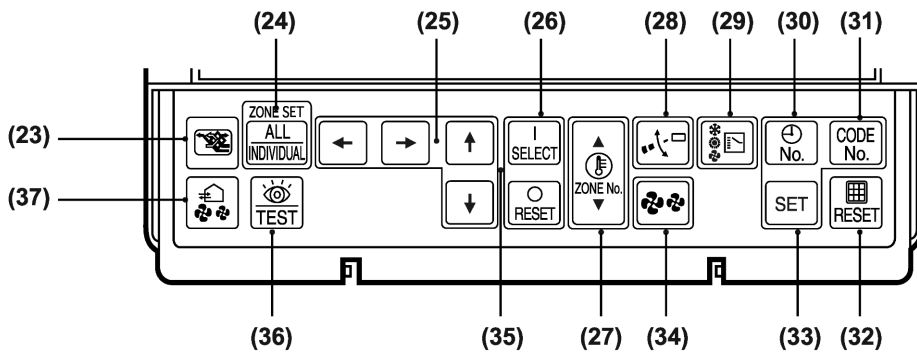


Fig. 2

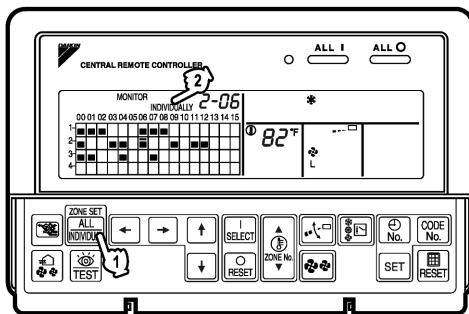


Fig. 3

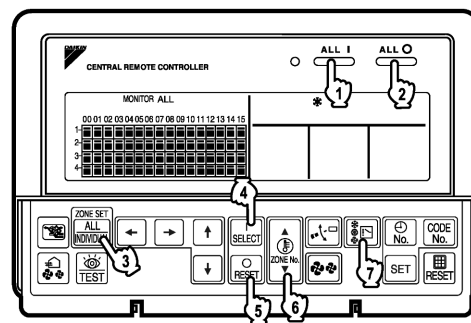


Fig. 4

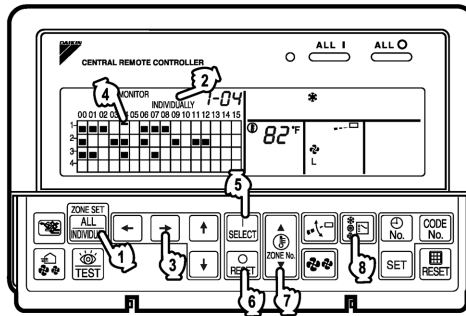


Fig. 5

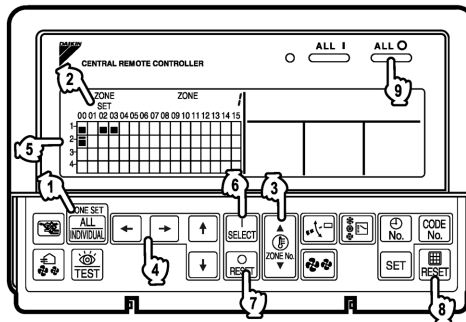


Fig. 6

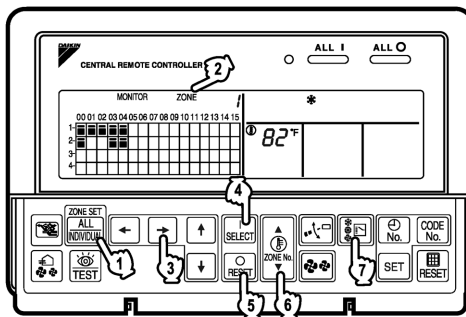


Fig. 7

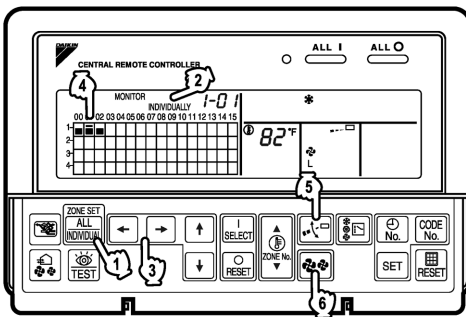


Fig. 8

- **Never use flammable spray such as hair spray, lacquer or paint near the unit.**  
It may cause a fire.
- **Do not allow children to play on or around the unit as they could be injured.**
- **Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.**  
Use of wire or copper wire may cause the unit to break down or cause a fire.
- **Never inspect or service the unit by yourself.**  
Ask a qualified service person to perform this work.
- **Cut off all electric waves before maintenance.**
- **Do not wash the air conditioner or the remote controller with excessive water.**  
Electric shock or fire may result.
- **Do not touch the switch with wet fingers.**  
Touching a switch with wet fingers can cause electric shock.
- **Never touch the internal parts of the controller.**  
Do not remove the front panel because some parts inside are dangerous to touch. In addition, some parts may be damaged by touching. For checking and adjusting internal parts, contact your dealer.
- **Check the unit stand for damage on a continuous basis, especially if it had been in use for a long time.**  
If left in a damaged condition the unit may fall and cause injury.
- **Placing a flower vase or other containers with water or other liquids on the unit could result in a shock hazard or fire if a spill occurs.**

**CAUTION**

- **Avoid placing the controller in a spot splashed with water.**  
Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.

- **Do not operate the air conditioner when using a room fumigation - type insecticide.**  
Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.
- **Do not turn off the power immediately after stopping operation.**  
Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.
- **The appliance is not intended for use by young children or infirm persons without supervision.**
- **The remote controller should be installed in such a way that children cannot play with it.**

**NOTE**

- **Never press the button of the remote controller with a hard, pointed object.**  
The remote controller may be damaged.
- **Never pull or twist the electric wire of the remote controller.**  
It may cause the unit to malfunction.
- **Do not place the controller exposed to direct sunlight.**  
The LCD display may get discolored, failing to display the data.
- **Do not wipe the controller operation panel with benzine, thinner, chemical dustcloth, etc.**  
The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.
- **Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

**CONTENTS**

<b>BEFORE USE</b> .....	1	<b>OPERATION MODE</b> .....	13
GENERAL DESCRIPTION OF SYSTEM .....	1	Setting operation mode .....	16
<b>SAFETY CONSIDERATIONS</b> .....	2	Group monitoring .....	16
<b>FEATURES AND FUNCTIONS</b> .....	6	Error diagnosing function .....	17
<b>NAMES AND FUNCTIONS OF THE</b>		Setting master remote controller .....	20
<b>OPERATING SECTION</b> .....	7	Display of time to clean .....	21
<b>OPERATION</b> .....	8	<b>INSTALLATION TABLE</b> .....	22
Individual screen, all screen, zone screen .....	8	<b>OPTIONAL ACCESSORIES</b> .....	23
Batch operation and stop method .....	9	<b>DOUBLE CENTRAL REMOTE</b>	
Group operation and stop method .....	9	<b>CONTROLLERS</b> .....	23
Registering zones .....	9	<b>SPECIFICATIONS</b> .....	24
Zone operation and stop method .....	10	Specifications .....	24
Changing the fan direction and fan strength .....	11	Outline drawings .....	24
Changing the ventilation mode and		Fig. 1, 2, 3, 4 .....	3
ventilation strength .....	11	Fig. 5, 6, 7, 8 .....	4
Timer Number Setting .....	11	Fig. 9, 10, 11, 12 .....	25
Setting the Operation Code .....	12	Fig. 13, 14, 15, 16 .....	26

## FEATURES AND FUNCTIONS

### ■ Operation menu

This central remote controller can operate and stop machines by either group or zone.  
Batch operation and batch stop functions are also available. When used in combination with the schedule timer (optional accessory), timer operation and stop functions are available.



See page  
8—12.

### ■ Various operation modes.

You can operate the system from both this unit and the remote controller, so to enable various operation control patterns. Twenty different operation modes are available including five operation patterns:

1. Start/stop: remote controller prohibition, remote controller stop-only permission, central priority, after-press priority, remote controller permission timer
2. Operation modes: remote controller prohibition, remote controller permission
3. Set temperature: remote controller prohibition, remote controller permission



See page  
13—15.

### ■ Zone control for simpler setting procedures

You can control a maximum of 64 groups of indoor units by using this central remote controller. You don't have to repeat the same setting operations by group because you can make each of the following settings by zone.

A functions is available for setting all groups in one batch.

- Operation mode
- Control mode
- Setting temperature
- Programming time No. (Used in conjunction with the schedule timer)



See page  
8—16.

### ■ Monitoring all indoor unit information

The following information can be displayed by group.

- Operation information such as operation mode, set temperature, etc., for indoor units
- Maintenance information such as cleaning signs for filters or elements
- Error codes and other malfunction diagnosis information



See page  
16—21.

### ■ Function of refrigerant system display

This display helps you understand, at a glance, the indoor units sharing the same outdoor unit and the particular indoor unit among them that is set as the master remote controller.


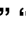

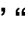
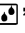
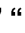

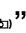







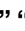
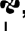
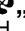





See page 20.

- Room air conditioners and multi-purpose air conditioners may also be connected by using separately-sold adapter boards.  
This may limit functionality, so consult the manuals that come with each adapter board.



**NAMES AND FUNCTIONS OF THE OPERATING SECTION (Fig. 1, 2)**

1	<b>UNIFIED OPERATION BUTTON</b>	Press to operate all indoor units.
	<b>UNIFIED STOP BUTTON</b>	Press to stop all indoor units.
3	<b>OPERATION LAMP (RED)</b>	Lit white any of the indoor units under control is in operation.
	<b>“<sup>REF</sup>CIRCUIT” DISPLAY (REFRIGERANT SYSTEM DISPLAY)</b>	This indication in the square is lit while the refrigerant system is being displayed.
5	<b>“<sup>ZONE</sup>SET” DISPLAY (ZONE SETTING)</b>	The lamp is lit while setting zones.
	<b>“MONITOR” DISPLAY (OPERATION MONITOR)</b>	The lamp is lit while operation is being monitored.
7	<b>“ALL” “ZONE” “INDIVIDUALLY” DISPLAY</b>	The status displays indicates either batch functions or which zone or individual unit (or group) are being used.
	<b>OPERATION MONITOR</b>	Each square displays the state corresponding to each group.
9	<b>“” “” “” “” “” “” “--”</b> <b>DISPLAY (OPERATION MODE)</b>	Displays operating state.
	<b>“” “” “” “” <b>DISPLAY (VENTILATION CLEANING DISPLAY)</b></b>	This is displayed when a Ventiair total enthalpy heat exchanger unit or other such unit is connected.
11	<b>“TEST” DISPLAY (INSPECTION/TEST)</b>	Pressing the maintenance/test run button (for service) displays this. This button should not normally be used.
	<b>“/” <b>DISPLAY (TIME TO CLEAN)</b></b>	It lights up when any individual unit (group) has reached the time for the filter or element to be cleaned.
13	<b>“” DISPLAY (COOLING/HEATING SELECTION PRIVILEGE NOT SHOWN)</b>	For zones or individual units (groups) for which this is displayed, cooling and heating cannot be selected.
	<b>“HOST” DISPLAY (UNDER HOST COMPUTER INTEGRATED CONTROL)</b>	While this display is lit up, no settings can be made. It lights up when the upper central machines are present on the same air conditioning network.
15	<b>“<sup>SET</sup>88°F” DISPLAY (PRESET TEMPERATURE)</b>	Displays the preset temperature.
	<b>“ U4” DISPLAY (MALFUNCTION CODE)</b>	This displays (flashes) the content of errors when an error failure has occurred. In maintenance mode, it displays the latest error content.
17	<b>“NOT AVAILABLE” DISPLAY (NO FUNCTION DISPLAY)</b>	If a function is not available in the indoor unit even if the button is pressed, “NOT AVAILABLE” is may be displayed for a few seconds.
	<b>“” DISPLAY (FAN DIRECTION SWING DISPLAY)</b>	This displays whether the fan direction is fixed or set to swing.
19	<b>“” “” “” “” “” “FRESH UP” <b>DISPLAY (VENTILATION STRENGTH/SET FAN STRENGTH DISPLAY)</b></b>	This displays the set fan strength.
	<b>“ No.” DISPLAY (TIME NO.)</b>	Displays the operation timer No. when used in conjunction with the schedule timer.

21	“CODE UNIT No. <b>18</b> ” DISPLAY (OPERATION CODE AND UNIT NUMBER DISPLAY)
	The method of operation (remote controller prohibited, central operation priority after-press operation priority, etc.) is displayed by the corresponding code. This displays the numbers of any indoor units which have stopped due to an error.
22	“  ” “  ” DISPLAY (TIME TO CLEAN AIR CLEANER ELEMENT/ TIME TO CLEAN AIR FILTER)
	Displayed to notify the user it is time to clean the air filter or air cleaner element of the group displayed.
23	VENTILATION MODE BUTTON
	This is pressed to switch the ventilation mode of the total enthalpy heat exchanger.
24	ALL/INDIVIDUAL BUTTON
	Pressing this button scrolls through the “all screen”, “zone screen”, and “individual screen”.
25	ARROW KEY BUTTON
	This button is pressed when calling an individual indoor unit or a zone.
26	ON/OFF BUTTON
	Starts and stops ALL, ZONE, and INDIVIDUAL units.
27	TEMPERATURE ADJUSTMENT BUTTON (ZONE NUMBER BUTTON)
	This button is pressed when setting the temperature. Select the zone number if any zones have been registered.
28	FAN DIRECTION ADJUSTMENT BUTTON
	This button is pressed when setting the fan direction to “fixed” or “swing”.
29	OPERATION MODE SELECTOR BUTTON
	This sets the operation mode. The dry setting cannot be done.
30	TIME NO. BUTTON
	Selects time No. (Use in conjunction with the schedule timer only).
31	CONTROL MODE BUTTON
	Selects control mode.
32	FILTER SIGN RESET BUTTON
	This button is pressed to erase the “clean filter” display after cleaning or replacement.

33	SET BUTTON
	Sets control mode and time No.
34	FAN STRENGTH ADJUSTMENT BUTTON
	Pressing this button scrolls through “weak”, “strong”, and “fast”.
35	ZONE SETTING BUTTON
	Zone registration mode can be turned on and off by pressing the start and stop buttons simultaneously for at least four seconds.
36	INSPECTION/TEST RUN BUTTON (FOR SERVICE)
	Pressing this button scrolls through “inspection”, “test run”, and “system display”. This button is not normally used.
37	VENTILATION STRENGTH ADJUSTMENT BUTTON
	This button is pressed to switch the ventilation strength (“fresh up”) of the total enthalpy heat exchanger.
(Notes)	
1. Please note that all the displays in the figure appear for explanation purposes or when the cover is open.	
2. If the unit is used in conjunction with other optional central controllers, the OPERATION LAMP of the unit that is not under operation control may light up and go out a few minutes behind schedule. This shows that the signal is being exchanged, and does not indicate any failure.	


## OPERATION

### ■ Individual screen, all screen, zone screen (Fig. 3)

This controller can perform operations in the individual screen, all screen, or zone screen.

- Individual screen The individual screen is used when performing group operations.
- All screen The all screen is used when performing operations for all units at once.
- Zone screen The zone screen is used when performing zone operations.

#### 1. Select the screen by pressing the “ALL/INDIVIDUAL” button.

 Every time the “ALL/INDIVIDUAL” button is pressed, the selection scrolls through INDIVIDUAL → ALL → ZONE.

If nothing is done in the all or zone screens for one minute, it automatically goes to the individual screen.

- If the zone number in the zone screen is displayed as “--,” this indicates that no units are registered in a zone.  
Please perform zone registration before proceeding in the zone screen. (See page 9)

### ■ Batch operation and stop method (Fig. 4)

This is for operating or stopping all connected units at once.

#### A. What to do when operating or stopping all connected units at once.


##### 1. Press either “ALL I” or

 “ALL O”.


- Operation can be performed from the individual screen, the all screen, or the zone screen.
- The “TEMPERATURE ADJUSTMENT” and “OPERATION MODE SELECTOR” buttons cannot be used.  
To set the temperature and operation mode, use B. batch operation.

#### B. Batch Operation


##### 1. Press the “ALL/INDIVIDUAL button” to enter the all screen.

The “” display lights up on all registered units.



##### 2. Press the “SELECT” button.

The “” display lights up on all connected units.

 Press the “RESET” button.

The “” display goes off on all connected units. Operation and stop in the batch screen are done the same as with the batch operation and batch stop buttons.

##### 3. Press the “TEMPERATURE ADJUSTMENT” button.

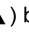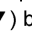The temperature rises 1° every time the () button is pressed.  
The temperature drops 1° every time the () button is pressed.

Set to “--” when you do not wish to use batch setting for the temperature setting.  
Setting to 1° above or below the temperature setting range displays “--”.

##### 4. Call up the desired mode by pressing the “OPERATION MODE SELECTOR” button.

Set to “--” when you do not wish to use batch setting for the operation setting.

### ■ Group operation and stop method (Fig. 5)

This is for operating or stopping connected units in groups.

#### [Group operation]

##### 1. Press the “ALL/INDIVIDUAL button” to enter the individual screen.


The unit will enter the individual screen automatically if nothing is done for one minute.

##### 2. Using the arrow keys, move the “” to select the units to operate or stop.


Keeping the button pressed down will move it rapidly.

The “” in this screen has selected unit 1-04.


##### 3. Press the “SELECT” button.


The “” display lights up in the group.

 Press the “RESET” button.

The “” display goes off in the group.

##### 4. Press the “TEMPERATURE ADJUSTMENT” button.

The temperature rises 1° every time the () button is pressed.

The temperature drops 1° every time the () button is pressed.

Temperature adjustment cannot be done if the selected group’s air conditioners are in fan mode.

##### 5. Call up the desired mode by pressing the “OPERATION MODE SELECTOR” button.


### ■ Registering zones (Fig. 6)

It is possible to set multiple groups as one zone and control each zone separately.  
No zones are registered when the unit is shipped from the factory.

Zone registration can be done in the individual screen, all screen, or zone screen.

#### [Registration]

##### 1. Pressing the “ALL/INDIVIDUAL” button for four seconds. Displays ZONE SET.

Zone Number 1 will be displayed, and if there are any groups already registered in the displayed zone, a “” will light up on the operation monitor.

2. Select the Zone Number to be registered using the “ZONE NUMBER” button. Keeping the button pressed down will move it rapidly.
3. “ ” to the group you wish to register using the arrow keys. Keeping the button pressed down will move it rapidly.
4. Press the “SELECT” button to register that group to the zone.

The “ ” display lights up on all the selected units.

Pressing the “RESET” button removes the group from that zone, and “ ” goes off.

Repeat steps 3 and 4 until all the units you wish to register to the zone have been added.

	ZONE SET			ZONE												
	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
1-	■		■	■												
2-	■															
3-																
4-																

In this example, a screen is shown with units 1-00, 1-02, 1-03, and 2-00 registered to Zone Number 1.

5. Repeat steps 2 to 4 to register to the next zone.
6. Once zone registration is complete, press the “ALL/INDIVIDUAL” button to turn off “ZONE SET” display and return to the individual screen.

The display returns to the normal screen if nothing is done for one minute when in zone registration mode.

(NOTE)

- It is impossible to register one group to several different zones. If this is done, the last zone registered to will be valid.

#### [Batch deletion of zone registration]

1. Pressing the “ ALL ○ ” for at least four seconds while pressing the “FILTER SIGN RESET” button when “ZONE SET” is displayed will delete all zone registrations. The zone registrations for all units will be lost.

#### ■ Zone operation and stop method (Fig. 7)

This is for operating or stopping connected units in zones.

#### [Zone operation]

1. Press the “ALL/INDIVIDUAL button” to enter the zone screen.

2. Using the arrow keys, select the zone number to operate or stop.

Pressing and reduces the zone number

while and raise the number.

Keeping the button pressed down will move it rapidly.

- If the zone number is displayed as “--,” this indicates that no units are registered in a zone. Please perform zone registration before using a zone. (See page 9)

3. Press the “SELECT” button.

The “ ” display lights up in the group.

Press the “RESET” button.

The “ ” display goes off in the group.

4. Press the “TEMPERATURE ADJUSTMENT” button.

The temperature rises 1° every time the (▲) button is pressed.

The temperature drops 1° every time the (▼) button is pressed.

Set to “--” when you do not wish to use zone setting for the temperature setting.

Setting to 1° above or below the temperature setting range displays “--”.

5. Call up the desired mode by pressing the “OPERATION MODE SELECTOR” button.



Set to “--” when you do not wish to use zone setting for the operation mode.

### ■ Changing the fan direction and fan strength (Fig. 8)




This changes the fan direction and strength settings in the air conditioner.

Changing the fan direction and strength is done in the individual screen.

#### [Registration]

1.  Press the “ALL/INDIVIDUAL button” to enter the  individual screen.

The unit will enter the individual screen automatically if nothing is done for one minute.

 


2.  Using the arrow keys,  move the “” to select the units to fan direction adjustment or fan strength adjustment.



Keeping the button pressed down will move it rapidly.

3.  Press the “FAN DIRECTION ADJUSTMENT” button.

This sets “fixed” or “swing” for the fan direction.

4.  Press the “FAN STRENGTH ADJUSTMENT” button.

  Pressing this button scrolls through “”, “”, and “.

Depending on the indoor unit, only “” and “” may be available.

The functions included in the indoor units may vary. Pressing a button for a function which is not available will cause “NOT AVAILABLE” to be displayed.




### ■ Changing the ventilation mode and ventilation strength (Fig. 9)

This changes the ventilation mode and strength settings in the total enthalpy heat exchanger. Changing the ventilation mode and strength is done in the individual screen.

#### [Registration]





1.  Press the “ALL/INDIVIDUAL button” to enter the  individual screen.

The unit will enter the individual screen automatically if nothing is done for one minute.

 


2.  Using the arrow keys,  move the “” to select the units to ventilation mode or ventilation strength adjustment.

Keeping the button pressed down will move it rapidly.

3.  Press the “VENTILATION MODE” button.

It will scroll through “” → “” → “” → “.

4.  Press the “VENTILATION STRENGTH ADJUSTMENT” button.

It will scroll through “” → “” → “” →

“” → “.

The fresh up function may not be available depending on the connected unit model.

The functions included in the indoor units may vary. Pressing a button for a function which is not available will cause “NOT AVAILABLE” to be displayed.

#### • Ventilation Mode and Amount

If these are changed using the remote controller depending on the unit model, they cannot be displayed on the central remote controller.


To monitor the ventilation mode and amount, check the values on the remote controller.

### ■ Timer Number Setting (Fig. 10)


(Only when used with the schedule timer)

 
Using this together with the schedule timer makes it possible to set on and off times four times a day.


#### [Registration]


1.  Pressing the “TIMER NO.” button causes the number set for timer number 1 to blink.

If no timer setting has been made “-” will be displayed.

Select the desired timer number by pressing the  “TIMER NO.” button.




2.  Once the desired timer number is displayed, press the “SET” button.


Press the  “SET” button within 10 seconds after the timer number is displayed.

The display will return to how it was after 10 seconds.

 
The display for timer number 1 will stop blinking and then timer number 2 will start blinking.




### 3. Select the desired timer number by pressing the “TIMER NO.” button.

Once the desired timer number is displayed,  press the “SET” button.

The display for timer number 2 will stop blinking.

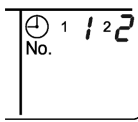

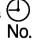The “ No.” display will disappear after 3 seconds.

Select “-” in the timer number when you do not wish to set a timer number.

It is possible to set only one timer number.

(The times for turning the unit(s) on and off twice a day can be set with a single timer number.)

#### • Timer Number Setting

Group control: select the unit in the individual screen and set the timer number.

Batch control: set the timer numbers for all connected units.

Zone control: set the timer numbers for all zone-registered units.  
Call up the zones which you wish to set in the zone screen and set the timer numbers.

#### • Since the timer number will be set to after-press priority, the timer number in the last screen set will be valid for the connected units.

##### Example 1

Setting timer number 1 for unit 1-00 to “1” and timer number 2 to “2” in the individual screen and then setting timer number 1 to “3” and timer number 2 to “4” in the batch screen causes the timer numbers for all units to be set, so timer number 1 for unit 1-00 will be “3” and timer number 2 will be “4”.

##### Example 2

To prevent leaving units on, timer number 1 is set to “5” in the batch screen.

Setting timer number 1 in zone number 1 to “-” in the zone screen after that will change the timer number for zone number 1, so the setting to prevent leaving the units on will be lost for zone number 1 only.

If a timer number is set incorrectly by accident, redo the setting in the desired screen.

#### • What happens when the timer number on time and off time are set to the same time

When the on time and off time are set to the same time for the same timer number, operation does not change.


When the on time and off time are set to the same time for different timer numbers, the off time is given priority.

When using timer operation, make sure the times do not overlap when setting the program of the schedule timer.

### ■ Setting the Operation Code (Fig. 11)

#### [Registration]

#### 1. Pressing the “CONTROL MODE” button causes the currently set operation code to blink.

Call up the desired code number by pressing the  “CONTROL MODE” button.

Scroll through the code numbers.

#### 2. Once the code number is displayed, press the “SET” button.

The display will stop blinking.

The operation code display will disappear after 3 seconds.

#### [The Operation Code Setting]

Group control: select the unit in the individual screen and set the operation code.

Batch control: set the operation code for all connected units.

Zone control: set the operation code for all zone-registered units.

Call up the zones which you wish to set in the zone screen and set the operation code.

Since the operation code will be set for after-press priority, setting the operation code in the zone and individual screens after setting the operation code in the batch screen, will cause the operation codes set afterwards to be valid.

## OPERATION MODE


The following five operation control modes can be selected along with the temperature setting and operation mode by remote controller, for a total of twenty different modes. These twenty modes are set and displayed with control modes of 0 to 19. (For further details, see **EXAMPLE OF OPERATION SCHEDULE** on the next page.)

- ON/OFF control impossible by remote controller..... Use this mode when operating and stopping from the central remote controller only. (ON/OFF control by the remote controller is disabled.)
- Only OFF control possible by remote controller ..... Use this mode when executing the operation only by the central remote controller, and executing only the stop by remote controller.
- Centralized ..... Use this mode when executing the operation only by the central remote controller, and executing start/stop freely by remote controller during the preset hours.
- Individual ..... Use this mode when executing start/stop both by central remote controller and remote controller.
- Timer operation possible by remote controller..... Use this mode when executing start/stop by remote controller during the preset hours, and not starting operation by the central remote controller at the programmed time of system start.

### [HOW TO SELECT THE CONTROL MODE]


- Select whether to accept or to reject the operation from the remote controller regarding the operation, stop, temperature setting and operation mode setting, respectively, and determine the particular control mode from the rightmost column of the table below.

Example

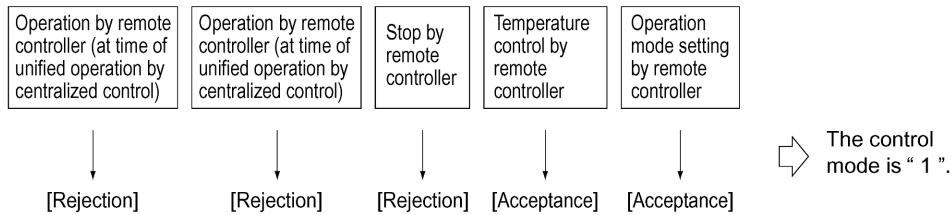

Operation mode	Control by remote controller					Control mode
	Operation		Stop	Temperature control	Operation mode setting	
	Unified operation, individual operation by central remote controller, or operation controlled by timer	Unified stop, individual stop by central remote controller, or timer stop				
ON/OFF control impossible by remote controller	Rejection (Example)	Rejection (Example)	Rejection (Example)	Rejection	Acceptance	0
Only OFF control possible by remote controller				Acceptance (Example)	Rejection	10
Centralized	Acceptance	Acceptance	Acceptance	Rejection	Acceptance	1 (Example)
Individual				Rejection	Rejection	11
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Rejection (During timer at OFF position)	Acceptance	Rejection	Acceptance	2
				Acceptance	Rejection	12
				Acceptance	Acceptance	3
				Rejection	Rejection	13
				Acceptance	Acceptance	4
				Rejection	Rejection	14
				Acceptance	Acceptance	5
				Rejection	Rejection	15
				Acceptance	Acceptance	6
				Rejection	Rejection	16
				Acceptance	Acceptance	7
				Rejection	Rejection	17
				Acceptance	Acceptance	8
				Rejection	Rejection	18
				Acceptance	Acceptance	9
				Rejection	Rejection	19

Note) Do not select the timer operation possible without the remote controller. In this case, timer operation is disabled.

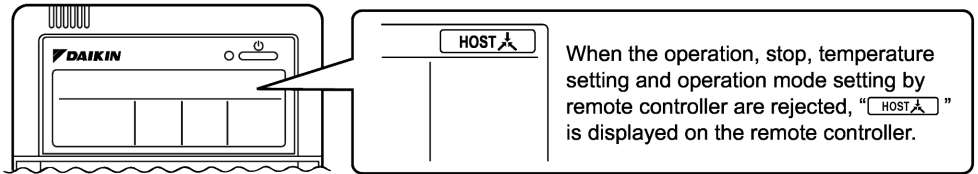


**EXAMPLE OF OPERATION SCHEDULE**

Operation schedule is possible only in conjunction with the schedule timer (optional accessory).


**Liquid crystal display of schedule timer**

**ON/OFF control impossible by remote controller**

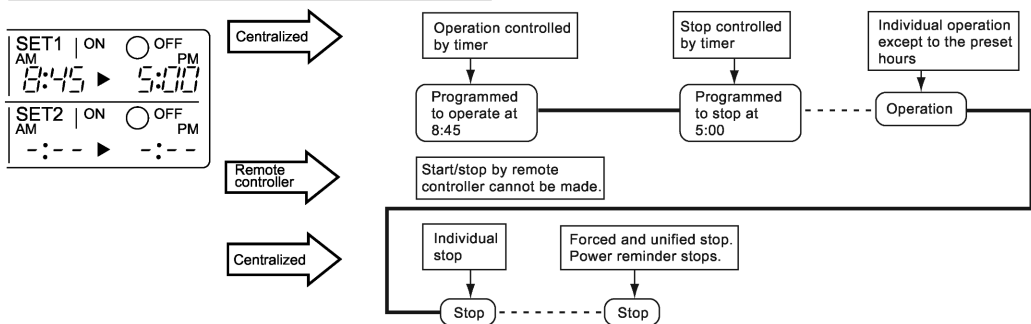





Only OFF control possible by remote controller

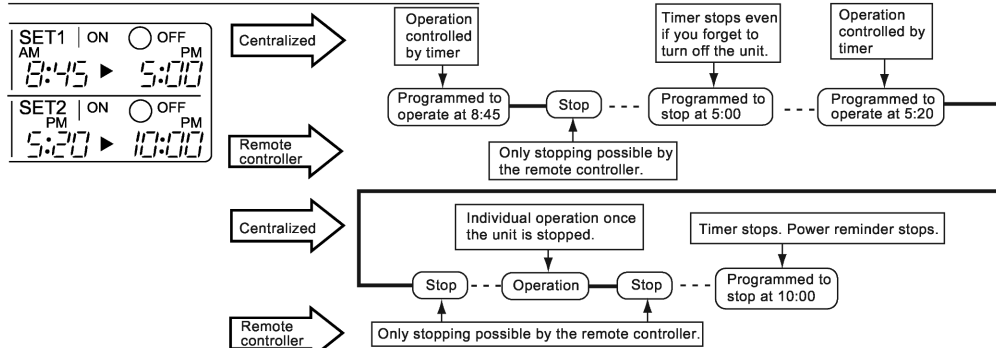


Centralized

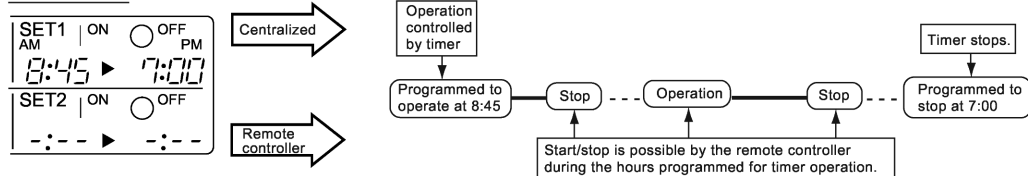

Individual

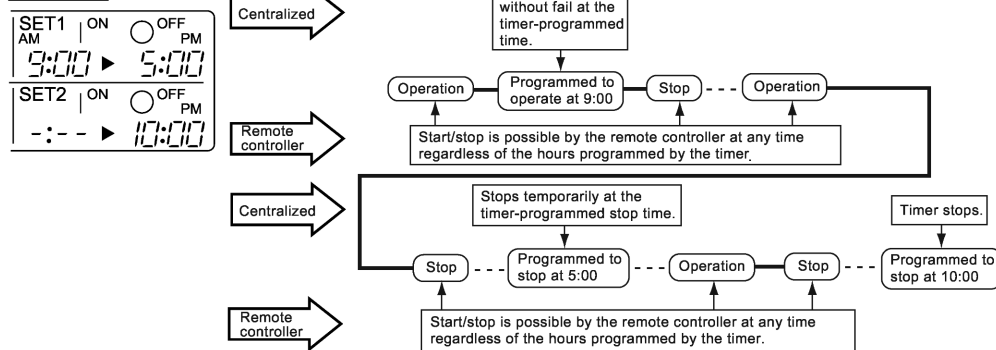


Timer operation possible by remote controller

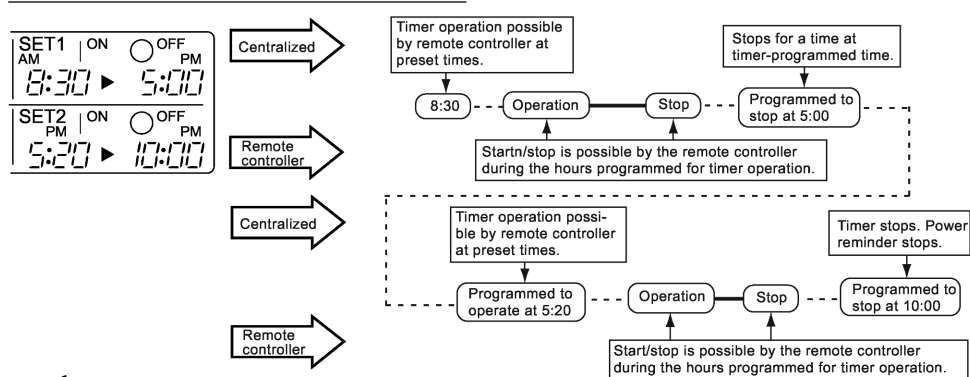

- Air conditioner now operating.
- Air conditioner now stopping.
- Command by central remote controller
- Command by remote controller







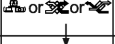


## ■ Setting operation mode (Fig. 12)




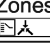





### [Registration]




1.  Press the OPERATION MODE SELECTOR BUTTON. Each time you press this button, the display rotates as shown on the below list.

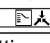- List of operations which can be set

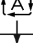In the below list, “○” refers to the acceptable setting, while “×” refers to the not acceptable setting.

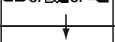Display	A: Zones and groups with no “  ” display.	
	Setting	Contents of setting
	×	
	○	Can be set in individual zones or groups
	○ * 1	Can be set in individual zones or groups
	○	Can be set in individual zones or groups
	○	Can be set in individual zones or groups
	○ * 1	Can be set in individual zones or groups * 3
	○ * 1	Can be set in individual zones or groups
	○	Select this display if you don't wish to set by zone.

Display	B: Zones and groups with a “  ” display.	
	Setting	Contents of setting
	○	To be set by zone * 2
	○	Can be set in individual zones or groups
	×	
	×	The displays are shown by group * 4
	×	The displays are shown by group * 4
	○ * 1	Can be set in individual zones or groups * 3
	○ * 1	Can be set in individual zones or groups
	○	Select this display if you don't wish to set by zone.

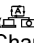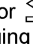- \*1: Setting may not be acceptable depending on the type of indoor unit with which this unit is connected.
- \*2: In zone control, the units run in temperature adjustment mode (heating or cooling) for the outdoor system for the groups registered to those zones. Heating or cooling selection is not available.
- \*3:  or  or   
Changing the ventilation mode cannot be done in the zone screen. Changing the ventilation mode should be done in the individual screen.
- \*4: In group control, the units run in temperature adjustment mode (heating or cooling) for the group outdoor system. Heating or cooling selection is not available.

- The Zone consists of the following two cases.

#### A. Zone without display “”

The group with master remote controller setting exists in this zone.  
Setting the master remote controller enables cool/heat selection.  
Operations other than cool/heat operations can also be set for some operations. For further details, see the list on the left.

#### B. Zone with display “”

No group with master remote controller setting exists in this zone.  
The cool/heat selection is not available because the master remote controller has not been set.  
Some operations other than cool/heat operations can be set. For further details, see the list in the left.

See page 20 if the display “” is flashing.

- Fan operation can be performed for each zone using the central remote controller even if there is no cooling/heating selection right during cooling or heating. Also, if a Venti-air is connected in the zone, ventilation and ventilation cleaning operation is possible. See the included operating manuals for details.
- When the indoor unit is in heat operation, change the setting to FAN operation through the central remote controller; then, you can switch the fan speed to the extremely low fan speed. Warm air may blow if any other indoor unit belonging to the same system is in heat operation.
- The indoor fan stops during defrost/hot start.
- DRY cannot be set from the central remote controller.

## ■ Group monitoring (Fig. 13)

Utilize the group monitor function in each of the following cases:

1. Check the malfunction code.  
(See the next page.)
2. Check the group that requires cleaning of the air filter and air cleaner element. (See page 21.)
3. Change the setting of the master remote controller. (See page 20.)
4. Check the group(s) sharing the same outdoor unit. Or, check the particular group(s) with the master remote controller setting. (See page 20.)
5. Check the conditions of other individual groups.

### When in zone screen

The zone screen will revert to the individual screen automatically if nothing is done in it for one minute.

### [Registration]

1. Press the “ALL/INDIVIDUAL” button to switch to the “INDIVIDUAL” screen.

2. Using the arrow key, move the “” to select the unit to be monitored.

 
Keeping the button pressed down will move it rapidly.

The “” lights up and the status of that unit is displayed in the LCD. The cursor in the screen Fig. 13 has selected unit 2-06.

### ■ Error diagnosing function (Fig. 14)

This central remote controller is provided with a diagnosing function, for when an indoor unit stops due to malfunction. In case of actuation of a safety device, disconnection in transmission wiring for control or failure of some parts, the operation lamp, inspection display and unit No. start to flash; then, the malfunction

code is displayed. Check the contents of the display, and contact your DAIKIN dealer because the above signs can give you the idea on the trouble area.




The display “” flashes under the group No. where the indoor unit that has stopped due to malfunction.

### [Registration]

1. Press the ARROW KEY BUTTON to call up the group that has stopped due to malfunction.

The unit No. the malfunction code is flashing because of an error failure.

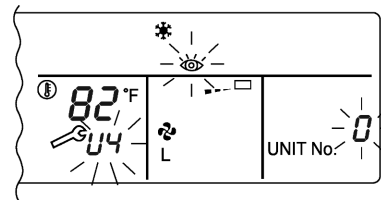

Operation lamp	Maintenance display	Unit No.	Malfunction code	Error content
	●		64	Indoor air thermistor error
	●		65	Outdoor air thermistor error
	●		68	HVU error (Ventiair dust-collecting unit)
	●		6A	Dumper system error
			6A	Dumper system error + Thermistor error
	●		6F	Simple remote controller error
	●		6H	Door switch (Ventiair dust-collecting unit), relay harness fault (Ventiair dust-collecting/humidifier unit)
			94	Ventiair internal transmission error (between total enthalpy – fan unit)
			A0	Indoor unit · external safety device error
			A1	Indoor unit · BEV unit (Sky-Air connection unit) PC board assembly fault
	●		A1	Indoor unit · PC board assembly fault
			A3	Indoor unit · Drain level error (33H)
			A6	Indoor unit · Fan motor (51F) lock, overload
	●		A7	Indoor unit · Fan direction adjustment motor (MA) error
			A9	Indoor unit · BEV unit, electric expansion valve motor (20E) error
	●		AF	Indoor unit · Malfunctioning drain
	●		AH	Indoor unit · Dust-collector error
			AJ	Indoor unit · Insufficient capacity setting, address setting fault

☼	☼	☼	C4	Indoor unit · Liquid piping thermistor (Th2) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	C5	Indoor unit · BEV unit, gas piping thermistor (Th3) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	C9	Indoor unit · Intake air thermistor (Th1) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	CA	Indoor unit · Outlet air thermistor (Th4) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	<b>CJ</b>	Indoor unit · remote controller sensor error
☼	☼	☼	E0	Outdoor unit · Safety device operation
☼	☼	☼	E1	Outdoor unit · PC board assembly fault
☼	●	☼	<b>E1</b>	Outdoor unit · PC board assembly fault
☼	☼	☼	E3	Outdoor unit · High-pressure switch fault
☼	☼	☼	E4	Outdoor unit · Low-pressure switch fault
☼	☼	☼	E9	Outdoor unit · Electric expansion valve motor (20E) error
☼	●	☼	<b>EC</b>	Heat source unit · Intake water temperature inter-lock operation (fan operation)
☼	☼	☼	EF	Outdoor unit · Ice thermal storage unit error
☼	☼	☼	F3	Outdoor unit · Discharge piping temperature error
☼	●	☼	<b>H3</b>	Outdoor unit · High-pressure switch operation
☼	☼	☼	H4	Outdoor unit · Low-pressure switch operation
☼	☼	☼	H9	Outdoor unit · Outdoor air thermistor (Th1) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	<b>H9</b>	Outdoor unit · Outdoor air thermistor (Th1) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	<b>HC</b>	Outdoor unit · Water temperature sensor system error
☼	●	☼	<b>HF</b>	Ice thermal storage unit error, ice thermal storage controller error, error in outdoor unit during ice thermal storage operation
☼	☼	☼	HJ	Outdoor unit · water system fault
☼	☼	☼	J1	Outdoor unit · pressure sensor error
☼	☼	☼	J3	Outdoor unit · Discharge piping thermistor (Th3) Error (faulty connection, cut wire, short circuit, fault)
☼	●	☼	<b>J3</b>	Outdoor unit · Discharge piping thermistor (Th3) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	J5	Outdoor unit · Intake piping thermistor (Th4) Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	J6	Outdoor unit · Heat exchange thermistor (Th2) error
☼	●	☼	<b>J6</b>	Outdoor unit · Heat exchange thermistor (Th2) error Error (faulty connection, cut wire, short circuit, fault)
☼	☼	☼	J7	Outdoor unit · Header thermistor (Th6) error
☼	☼	☼	JA	Outdoor unit · Discharge piping pressure sensor error
☼	☼	☼	JC	Outdoor unit · Intake piping pressure sensor error
☼	☼	☼	JF	Outdoor unit · Oil temperature sensor (Th5) system error
☼	●	☼	<b>JH</b>	Outdoor unit · Oil temperature sensor (Th5) system error
☼	☼	☼	L0	Outdoor unit · Inverter system fault
☼	☼	☼	L4	Outdoor unit · Inverter cooler fault
☼	☼	☼	L5	Outdoor unit · Ground circuit for compressor motor, short circuit, or power unit short circuit

☼	☼	☼	L6	Outdoor unit · Ground circuit for compressor motor, short circuit
☼	☼	☼	L8	Outdoor unit · Compressor overload, compressor motor wire disconnection
☼	☼	☼	L9	Outdoor unit · Compressor lock
☼	☼	☼	LA	Outdoor unit · Power unit error
☼	☼	☼	LC	Outdoor unit · Transmission error between inverter and outdoor control unit
☼ or ●	☼	☼	M1	Central controller: PC board fault
☼ or ●	☼	☼	M8	Transmission error between central controllers
☼ or ●	☼	☼	MA	Central controller: Incorrect combination
☼ or ●	☼	☼	MC	Central controller: Address setting fault
☼	●	☼	<b>P0</b>	Insufficient gas (thermal storage)
☼	☼	☼	P1	Outdoor unit · Power voltage imbalance, phase loss
☼	☼	☼	P4	Outdoor unit · Power unit temperature sensor error
☼	●	☼	<b>U0</b>	Pressure drop due to insufficient refrigerant, electric expansion valve fault, etc.
☼	☼	☼	U1	Reversed or lost phase
☼	☼	☼	U2	Power voltage error, momentary electrical stoppage
☼	☼	☼	U4	Transmission error between indoor unit/BEV unit and outdoor/BS unit, Transmission error between outdoor unit and BS unit
☼	☼	☼	U5	Transmission error between remote controller and indoor control unit
●	☼	●	U5	Remote controller board fault or remote controller setting fault
☼	☼	☼	U6	Transmission error between indoor units
☼	☼	☼	U7	Transmission error between outdoor units Transmission error between outdoor unit and ice thermal storage unit
☼	●	☼	<b>U7</b>	Transmission error between outdoor units (cooling/heating batch, low-noise operation)
☼	☼	●	U8	Transmission error between master remote controller and slave remote controller (slave remote controller error) Incorrect combination of indoor unit and remote controller within a single system (model)
☼	☼	☼	U9	Transmission error between indoor unit/BEV unit and outdoor unit within a single system Transmission error between BS unit and indoor unit/BEV unit and outdoor unit within a single system
☼	☼	☼	UA	Incorrect combination of indoor, BS, and outdoor units within a single system (model, number of units, etc.) Incorrect combination of indoor unit and remote controller (remote controller in question) BS unit connection position fault
☼	●	☼	<b>UC</b>	Central control group numbers overlap
☼	☼	☼	UE	Transmission error between indoor unit and central controller
☼	☼	☼	UF	Unset system, incorrect settings between BEV unit and indoor unit
☼	☼	☼	UH	System fault

■ error codes (in outline font) do not display “maintenance” and the system will run, but please check the content of the display and contact your dealer.


## ■ Setting master remote controller (Fig. 15)

You must set the master remote controller of the operation mode for one of the indoor units, if two or more such indoor units with the remote controller are connected with the outdoor unit where the operation modes such as cool/heat operation and FAN operation can be set by remote controller and central remote controller.


### 1. Preparations


#### When you want to fix settings


- Check the particular group with the master remote controller setting for the refrigerant system you wish to reset. (See the below.)
- Call up the group without the display

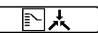“” (See page 16.)



☞ Hold the OPERATION MODE SELECTOR BUTTON down for about four seconds while the above group is being called up.

The display “” flashes on the liquid crystal display of the remote controller for all the groups sharing the same outdoor unit or BS unit.

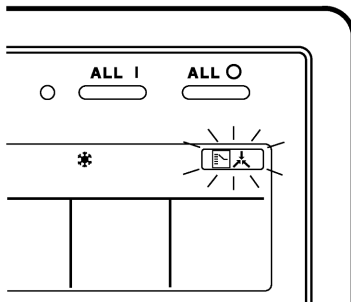When you turn on the power switch for the first time, the display “” flashes.



### 2. Setting selection right

Call up the desired group to set the master remote controller, and ☞ press the OPERATION MODE SELECTOR BUTTON. The master remote controller is set for this group, and the display “” goes out. The display “” appears for the other groups. Setting is finished now.





### When switching operation

#### ● In case of operation switch

 

Call up the zone including the group with the setting of master remote controller.

(Zone without the display “”)

☞ Press the OPERATION MODE SELECTOR BUTTON several times, and switch to the desired operation mode.

Each time you press it, the display is switched to “” “” “” and “” in sequence.

#### NOTE

- However, the displays “” “” and “VENTILATION MODE” may appear in some zones, depending on the type on indoor unit with which they are connected.

(VENTILATION MODE)


 or  or 


#### [System Display]



 





1. Test run mode is necessary to display the system display.
2. In order to turn on test run mode, select the appropriate air conditioner on the individual screen with the cursor and then set its operation mode to either cooling or heating. (It makes no difference if the air conditioner is running or not running while this operator is being performed.)
3. Press the “inspection/test run” button twice to put it into test run mode.
4. Pressing the “inspection/test run” button for four or more seconds in test run mode will display ☞ the “REF CIRCUIT.”

REF CIRCUIT	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
1-																
2-																
3-																
4-																

Call the unit whose system you wish to look up using the arrow keys.

The “” on all groups in the same system as the displayed group will light up.

 Of those, the “” display in all groups which have cooling/heating selection privilege will blink.

	00	01	02	03	04	05	06	07	0
1-									
2-									
3-									

**In this example, individual units 1-00, 1-03, 1-05, 1-06, 1-07, 2-02, and 2-03 are in the same system, and 1-05 has the cooling/heating selection privilege.**


To look up other systems, call up all the units you wish to look up using the arrow keys.

Pressing the inspection/test run button one more time gets rid of the system display and ends it.

The unit will enter the individual screen automatically if nothing is done for one minute in the system display screen.




This function may not be available for all connected outdoor units, in which case “REF CIRCUIT” will blink. It will also not be correctly displayed if DIII-NET extension ADP is used.

#### ■ Display of time to clean (Fig. 16)



This central remote controller displays the time to clean the air filter or air cleaner element for each group or any given group by utilizing two types of signs. The display “” tells the time to clean the air filter or the air cleaner element of some group.

#### If a cleaning sign is displayed

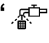A filter or element in some group is ready to be cleaned.



1.  Press the ARROW KEY BUTTON, and search the groups displaying “” or “” (The group may be plural.)

**Clean or change the air filter or air cleaner element.**

For further details, see the operation manual attached to each indoor unit. (Clean or change the air filter or air cleaner element of all the groups displaying “” or “”.)

2.  Press the FILTER SIGN RESET BUTTON, and the display “” disappears. (Including all the groups where the air filter has been cleaned.)

#### NOTE

Be sure to check the display  “” has disappeared at this point. The appearance of the above display is a sign that the air filter or air cleaner element of some group still needs cleaning.

## INSTALLATION TABLE

When installing the equipment, mark the zone No. of each group and installation location in the below table.

### Setting group No.



(Setting is not possible unless power is activated to both the central remote controller and indoor unit.)

### Operated by remote controller

1. Activate power to both the central remote controller and indoor unit.
2. While in the normal mode, hold down the " " button for a minimum of 4 seconds. The unified ON/OFF controller will enter the FIELD SET MODE.
3. Select the MODE No. " " with the " " button.
4. Use the " " button to select the group No. for each group. (Group No. increases in the order of 1-00, 1-01 ... 1-15, 2-00, ... 8-15.)
5. Press " " to set the selected group No.
6. Press " " to return to the NORMAL MODE.

### Operated by simplified remote controller

1. Activate power to both the central remote controller and indoor unit.
2. Remove the upper part of the remote controller.
3. Press the [BS6] BUTTON (field set) on the PC board. The controller will enter the FIELD SET MODE.
4. Select the MODE No. " " with the [BS2] BUTTON and [BS3] BUTTON (temperature setting).
5. Use the [BS9] BUTTON (set A) and [BS10] BUTTON (set B) to select the group No. for each group. (Group No. increases in the order of 1-00, 1-01 ... 1-15, 2-00, ... 8-15.)
6. Press [BS7] BUTTON (set/cancel) to set the selected group No.
7. Press [BS6] BUTTON (field set) to return to the NORMAL MODE.

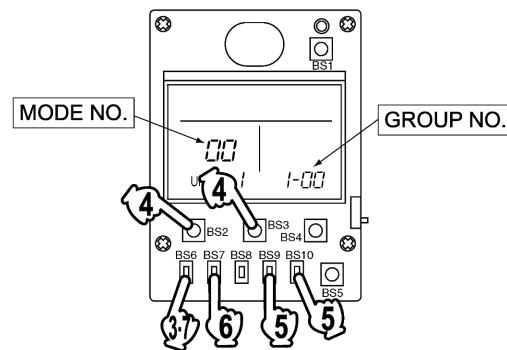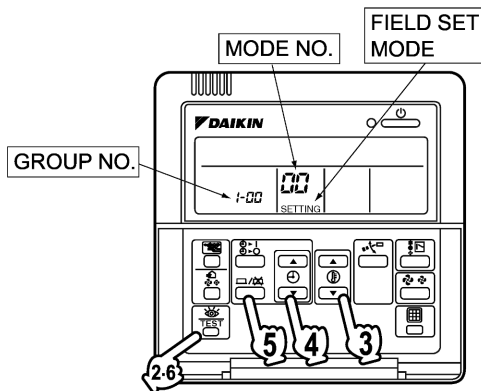


Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																
Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																



Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																
Zone No.																
Group No.	-00	-01	-02	-03	-04	-05	-06	-07	-08	-09	-10	-11	-12	-13	-14	-15
Indoor unit Quantity of units Controlled by																
Location																


**OPTIONAL ACCESSORIES**

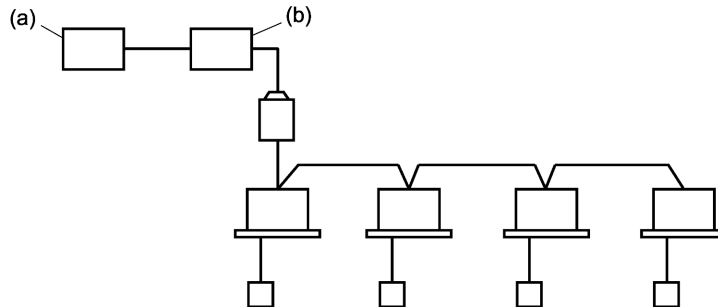

You can perform the normal operation, take off the malfunction contact point and unified start/stop by contact point, all by connecting this unit with the unification adaptor for computerized control. For further details, ask your DAIKIN dealer.

(a) Unification adaptor for computerized control    (b) Central remote controller

**DOUBLE CENTRAL REMOTE CONTROLLERS**

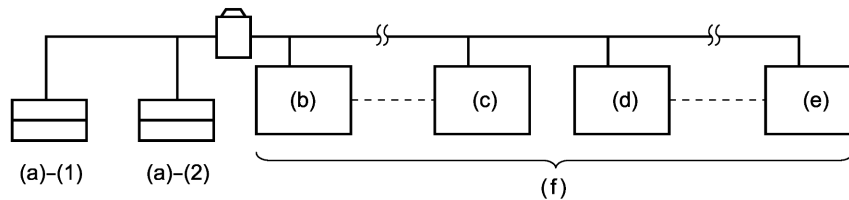

With two central remote controllers, centralized control (indoor units) is possible from different locations.

(a) Central remote controller    (b) Group No. 1 - 00    (c) Group No. 1 - 15    (d) Group No. 2 - 00  
 (e) Group No. 4 - 15    (f) A maximum of 64 groups

Note)


- For control alignment and settings for double central remote controllers, contact your dealer.

## SPECIFICATIONS

### ■ Specifications

Power supply	1 ~ 50/60Hz, 100V - 240V
Power consumption	Max. 8W
Forced ON/OFF input	Continuous "a" contact Contact current: approximately 10mA
Size	180 (W) × 120 (H) × 64.5 (D)
Weight	420g

### ■ Outline drawings

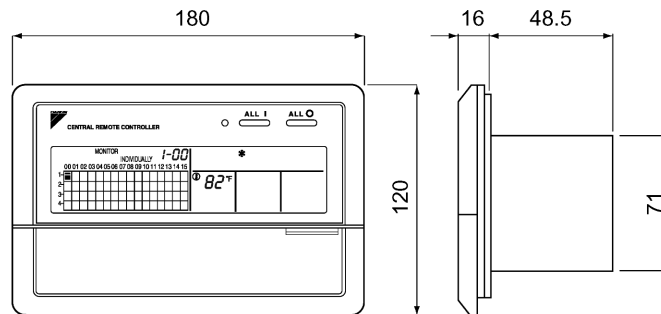

When using this unit an electric parts box of KJB311A is required.  
For installation, a steel electric parts box to be embedded is mandatory.

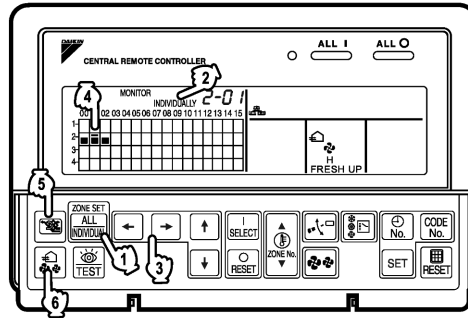


Fig. 9

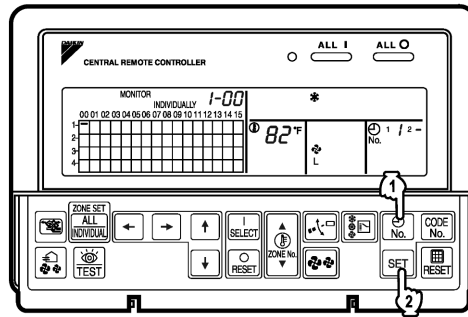


Fig. 10

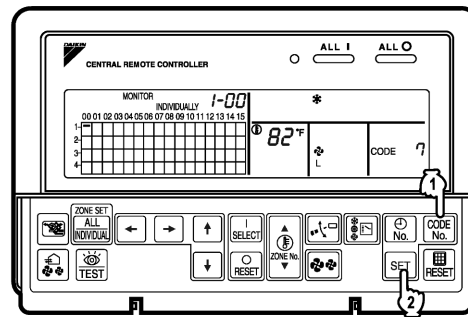


Fig. 11

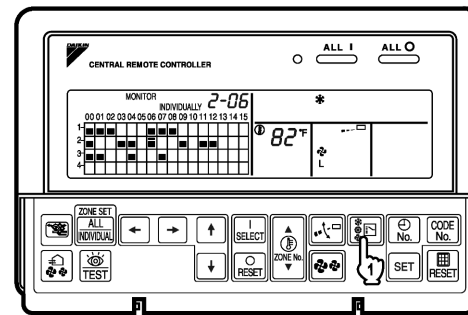


Fig. 12

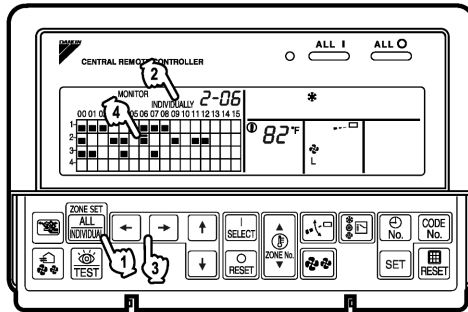


Fig. 13

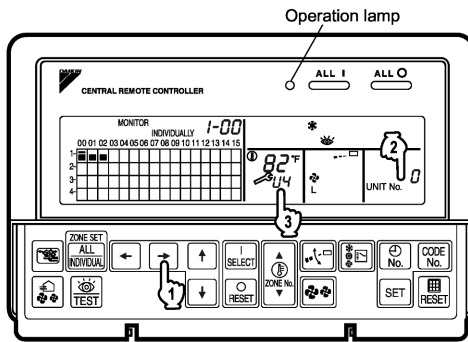


Fig. 14

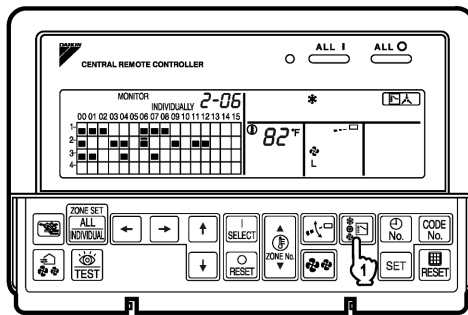


Fig. 15

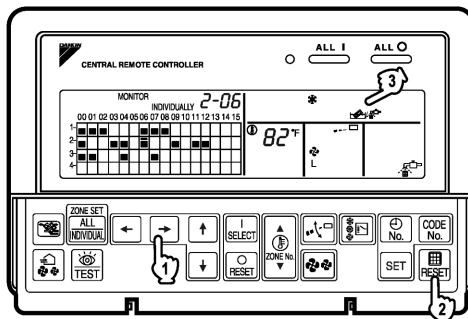


Fig. 16

## 13.6 <DCS301C71> Unified ON/OFF Controller

### 13.6.1 Installation Manual

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation.  
Please instruct the customer on how to operate the unit and keep it maintained.  
Also, inform customers that they should store this installation manual along with the operation manual for future reference.  
This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

**⚠ WARNING**..... Indication a potentially hazardous situation which, if not avoided, could result in death or serious injury.  
**⚠ CAUTION**..... Indication a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.  
**⚠ NOTE**..... Indication situation that may result in equipment or property-damage-only accidents.

**⚠ WARNING**

**Ask your dealer or qualified personnel to carry out installation work. Do not try to install the machine by yourself.**  
Improper installation may result in water leakage, electric shocks or fire.

**Perform installation work in accordance with this installation manual.**  
Improper installation may result in water leakage, electric shocks or fire.

**Be sure to use only the specified accessories and parts for installation work.**  
Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.

**Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.**  
Improper installation work may result in the equipment falling and causing accidents.

**Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual.**  
An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.

**Make sure that all wiring is secured, the specified wires and used, and no external forces act on the terminal connections or wires.**  
Improper connections or installation may result in fire.

**When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the electric parts box lid can be securely fastened.**  
Improper positioning of the electric parts box lid may result in electric shocks, fire or the terminals overheating.

**Before touching electrical parts, turn off the unit.**

**Ground the air conditioner. Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire.**  
Incomplete grounding may result in electric shocks.

**When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air.**

**Do not reconstruct or change the settings of the protection devices.**  
If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may result.

**Do not touch the switch with wet fingers.**  
Touching a switch with wet fingers can cause electric shock.

**Install a leak circuit breaker, as required.**  
If a leak circuit breaker is not installed, electric shock may result.

**Do not install the air conditioner or the remote controller in the following locations:**

- (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen  
Plastic parts may deteriorate and fall off or result in water leakage.
- (b) where corrosive gas, such as sulfuric acid gas, is produced  
Corroding copper pipes or soldered parts may result in refrigerant leakage.
- (c) near machinery emitting electromagnetic waves  
Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the equipment.
- (d) where flammable gases may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.  
Operating the unit in such conditions may result in fire.

**⚠ CAUTION**

**Be very careful about product transportation.**

**Safely dispose of the packing materials.**  
Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.  
Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

**Do not turn off the power immediately after stopping operation.**  
Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

**⚠ NOTE**

**Install the indoor and outdoor units, power supply wiring and connecting wires at least 3.5ft. away from televisions or radios in order to prevent image interference or noise.**  
(Depending on the radio waves, a distance of 3.5ft. may not be sufficient enough to eliminate the noise.)

**Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps. (inverter or rapid start types)**  
Install the indoor unit as far away from fluorescent lamps as possible.

**This unit is a class A product.**  
In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.


**Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

### 1 COMPONENTS

Check the following components are included in this optional accessory before installation.

Installation screw (M4 x 16)	2
Operation manual	1
Installation manual	4
Installation table	4
Switch display sticker	1

Body

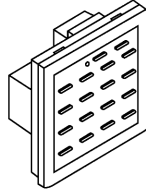


When using this optional accessory an electric parts box of KJB212A is required. For installation, a steel electric parts box to be embedded is mandatory.

### 2 SYSTEM CONFIGURATION


This unified ON/OFF controller enables individual and unified operation/stop for a maximum of 16 groups of indoor units. With 2 to 8 unified ON/OFF controllers, individual and unified control is possible with up to a maximum 128 groups of indoor units.

- When using 1 unified ON/OFF controller

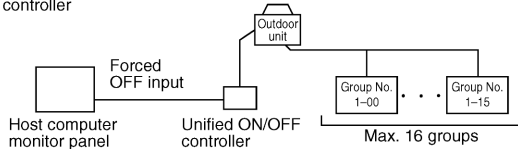

(This optional accessory can not be used in conjunction with wiring adapter for electrical appendices (optional accessory).)

- When using 2 to 8 unified ON/OFF controllers

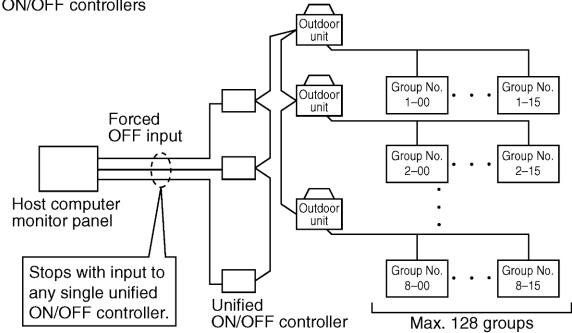

The groups of indoor units are as follows:

- One indoor unit without remote controller
- One indoor unit controlled by one or two remote controllers
- A maximum of 16 indoor units controlled in groups by one or two remote controllers


### 3 INSTALLATION

- 1 Open the upper part of remote controller. Insert a ⊖ screwdriver (2 locations) into the recess between the upper part and the lower part of remote controller and twist the screwdriver lightly.

PC board is attached with both the upper and lower part of remote controller. Do not damage the board with the screwdriver.

- 2 Open the upper part of remote controller and install the electric parts box (part to be procured in the field) with the attached installation screws (M4 x 16).

NOTE) Suitable length of the electric wire is about 160mm from the inlet of the electric parts box. If it is difficult to contain a long wiring, strip the sheathed part of the wiring.

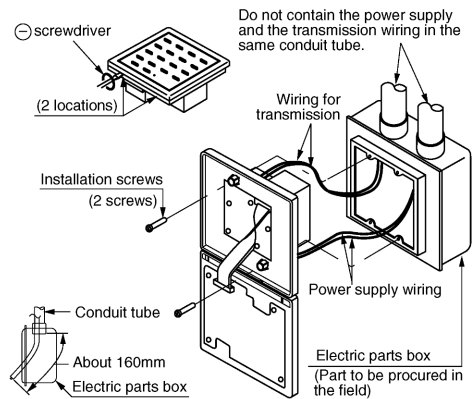

# 4 INITIAL SETTING

 
Setting ① through ③ are initialized when power is turned ON, therefore complete settings BEFORE activating the power.

- Connector for setting master controller (X1A) (Provided with connector at factory set)
  - When using 1 unified ON/OFF controller, do not disconnect the connector for setting master controller. (Use the unit with the connector in the state in which it was delivered.)
  - When using multiple unified ON/OFF controllers, or using the unified ON/OFF controller in conjunction with other optional controllers for centralized control, makes settings as indicated in the right table.



Pattern of connection of optional controllers for centralized control			Connector for setting master controller (X1A) Settings		
Unified ON/OFF controller	Central remote controller	Schedule timer	Unified ON/OFF controller	Central remote controller	Schedule timer
1 to 16	1 to 4	1	Set one to "Used" and all the rest to "Not used".	(Note)	"Not used"
			Set all to "Not used".		
	1 to 4	1	Set one to "Used" and all the rest to "Not used".	(Note)	"Not used"
			Set all to "Not used".		

(Note) For instructions on how to set the connector for setting master controller on the central remote controller, see the installation manual provided with the central remote controller.


- Switch for setting each address (DS1)  
 These switches are used to set group control address.  
 Groups Nos. 1-00 through 1-15 are grouped in the same control group when the unit is shipped from the factory.



 
NOTE) ■ indicates the position of switches.

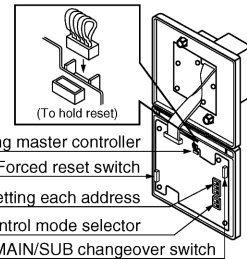

- MAIN/SUB changeover switch setting  
 With two unified ON/OFF controllers, centralized control (indoor units) is possible from different locations. In this kind of set-up, it is necessary to set the MAIN/SUB changeover switch. One of the two unified ON/OFF controllers (1)-(2) is set to "MAIN" while the other is set to "SUB".

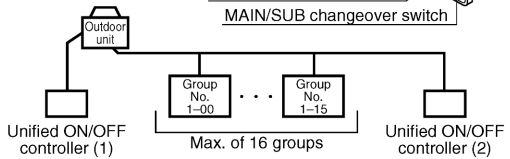

 - Setting of the sequential operation function  
 The unified ON/OFF controller is equipped with a sequential operation function that sequentially turns indoor units on in 2-second intervals during unified operation. (Sequential operation is factory set to "ON.") To switch sequential operation ON or OFF, set as follows.




NOTE: The sequential operation function is designed to reduce the load on the power supply equipment, but does not guarantee that compressors will not be started simultaneously. You cannot therefore count on a capacity reduction effect by power supply equipment breaker selection.

- Control mode selector (DS2)  
 The following four patterns of control mode can be set.

Control mode	Individual	Centralized	Timer operation possible by remote controller	ON/OFF control impossible by remote controller
Content	Operation/stop is controlled by both unified ON/OFF controller and remote controller.	After operated by unified ON/OFF controller, operation/stop is freely controlled by remote controller until stopped by unified ON/OFF controller.	When used in conjunction with schedule timer, operation/stop is controlled freely by remote controller during the set time but operation is not available when schedule timer is ON.	Operation/stop is controlled by unified ON/OFF controller only. (This unit can not be operated/stopped by remote controller.)
DS2 setting	(Factory set)			

- NOTES) ■ indicates the position of switches.  
 • Set control mode before turning power supply ON.  
 • When used in conjunction with central remote controller, the control modes of the central remote controller has the priority.

- Forced reset switch (SS1)  
 When changing the setting of the connector for setting master controller, etc., you can reset simply by setting it to the reset side once and returning to the normal side, without turning the power OFF. (For normal operation, set the switch to the normal side.)

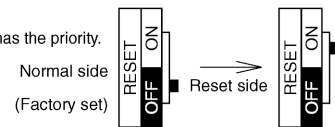


## 5 ELECTRIC WIRING

### GENERAL INSTRUCTIONS

- All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
- Use copper conductors only.
- All field wiring and components must be provided by licensed electrician.
- Unit shall be grounded in compliance with the applicable local and national codes.
- Fit the power supply wiring with a fuse and a switch.
- After wiring work, check power to the equipment shuts OFF when switch is shut OFF.

### WIRING OUTLINE

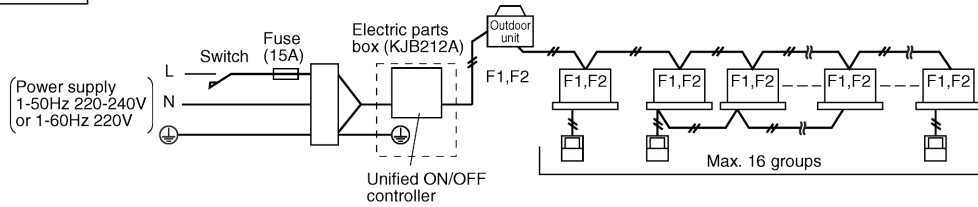


### Wiring specification

	Type	Size
Power supply wiring	H05VV-U3G	(NOTE 1)
Transmission wiring	Sheathed wire (2 wire) (NOTE 2)	0.75 - 1.25mm <sup>2</sup>

- NOTES
1. The size of power supply wiring must comply with the applicable national and local codes.
  2. Allowable length of transmission wiring is as follows.  
Max. 1000m (Total wiring length: 2000m)

Connect the wiring between indoor and outdoor units, indoor/outdoor units and power supply, and indoor units and remote controllers. For details, refer to the installation manuals of indoor and outdoor units.

### WIRING TO THE INDOOR UNIT AND OUTDOOR UNIT

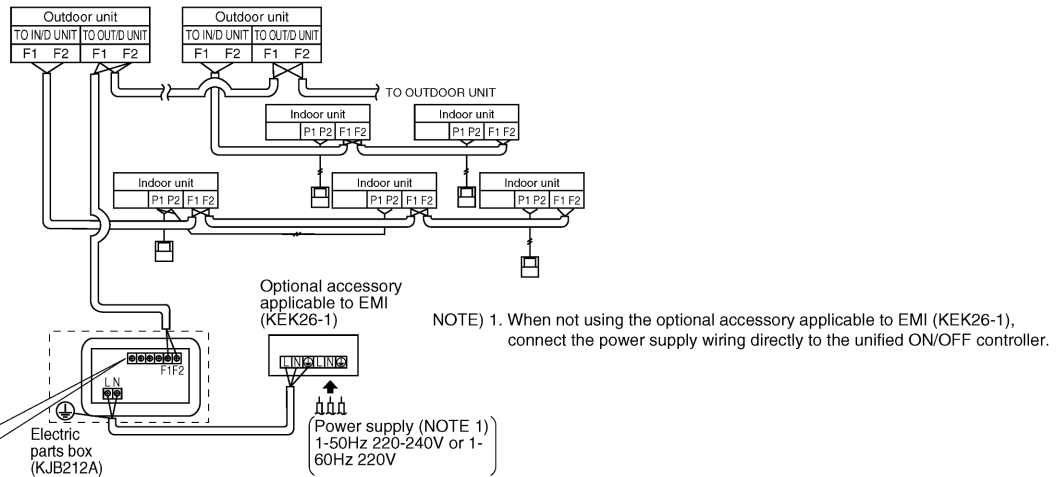


### CONTROL TERMINAL STRIP


\*1 For connecting indoor unit (F1, F2)

\*2 Forced OFF input (T1, T2)

 While the forced OFF input (no voltage contactor, for micro current) is ON (energized), all the connected indoor units are stopped and can not be operated.  
Use only contactors which guarantee the minimum applicable load ≧ 16V, 10mA.



 NOTE) Use instantaneous contactor of over 200msec. energizing time, when necessary.



\*3 For schedule timer (D1, D2)

Power can be supplied to the schedule timer (DST301B51\*61 optional accessory). For details, refer to the installation manual of the schedule timer.  
Wire \*2 and \*3 only when necessary.

(NOTE)


Do not connect the power supply wiring (220 to 240V) to the control terminal strip. If connected by mistake, it may damage or burn electrical parts of optional controllers for centralized control and indoor unit. It may result in serious danger. Be sure to check wirings before turning the power ON.



## 6 SETTING GROUP NO. FOR CENTRALIZED CONTROL

Set the group number of each group of the indoor unit from the remote controller. (In case of no remote controller, also connect the remote controller and set the group No. Then, remove the remote controller.)

- 1 Turn ON the power of the indoor unit and unified ON/OFF controller. (Unless the power is ON, no setting can be made.)  
Check that the installation and electrical wiring are correct before turning the power supply ON.  
When the power supply is turned ON, all LCD appear once and the unit may not accept the operation for about one minute with the display of " " flashing (an interval of ON, ON, and OFF).
- 2 While in the normal mode, hold down the " " button for a minimum of 4 seconds.  
The remote controller will enter the FIELD SET MODE.
- 3 Select the MODE No. " " with the " " button.
- 4 Use the " " button to select the group No. for each group.  
(Group numbers increase in the order of 1-00, 1-01, ... 1-15, 2-00, ... 8-15.)
- 5 Press " " to set the selected group No.
- 6 Press " " to return to the NORMAL MODE.

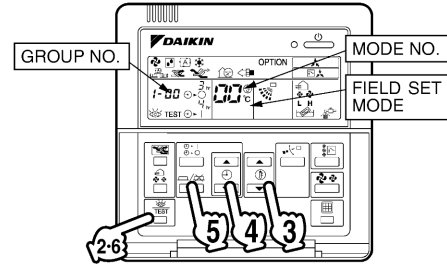

- NOTES)
- For simplified remote controller, see the installation table.
  - For setting group No. of HRV and wiring adaptor for other air conditioners, etc., refer to the instruction manual attached.

**NOTICE** Enter the group No. and installation place of the indoor unit into the attached installation table.  
Be sure to keep the installation table with the operation manual for maintenance.

## 7 CONFIRMING OPERATION

Before starting test operation, supply power to the indoor units, outdoor units, and unified ON/OFF controller and press the ON/OFF BUTTON.  
If the operation lamp flashes, it indicates a malfunction in the indoor unit of the applicable group.

If the display of " " flashes, it indicates a malfunction in the optional controllers for centralized control. Check for such malfunctions.




- NOTES**
- For test operation of indoor and outdoor units, refer to the installation manual attached with the outdoor unit.
  - After turning the power supply ON, if the unit does not accept operation for two minutes or more with the display of " " flashing, check the following points.
    - Check that setting of the connector for setting master controller is correct.
    - Check that the group No. for centralized control has been set.

1P126474-1B

## 13.6.2 Operation Manual

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation.  
Please instruct the customer on how to operate the unit and keep it maintained.  
Also, inform customers that they should store this installation manual along with the operation manual for future reference.  
This air conditioner comes under the term "appliances not accessible to the general public"

Meaning of warning, caution and note symbols.

-  **WARNING** ..... Indication a potentially hazardous situation which, if not avoided, could result in death or serious injury.  
 **CAUTION** ..... Indication a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.  
 **NOTE** ..... Indication situation that may result in equipment or property-damage-only accidents.

**Keep these warning sheets handy so that you can refer to them if needed.**

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

### **WARNING**

**In order to avoid electric shock, fire or injury, or if you detect any abnormality such as smell of fire, turn off power and call your dealer for instructions.**

**Ask your dealer for installation of the air conditioner.**

Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.

**Ask your dealer for improvement, repair, and maintenance.**

Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.

**Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment.**

**Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.**

**Ask your dealer to move and reinstall the air conditioner or the remote controller.**

Incomplete installation may result in a water leakage, electric shock, and fire.

**Never let the indoor unit or the remote controller get wet.**

It may cause an electric shock or a fire.

**Never use flammable spray such as hair spray, lacquer or paint near the unit.**

It may cause a fire.

**Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.**

Use of wire or copper wire may cause the unit to break down or cause a fire.

**Never inspect or service the unit by yourself.**

Ask a qualified service person to perform this work.

**Cut off all electric waves before maintenance.**

**Do not wash the air conditioner or the remote controller with excessive water.**

Electric shock or fire may result.

**Do not install the air conditioner or the remote controller at any place where flammable gas may leak out.**

If the gas leaks out and stays around the air conditioner, a fire may break out.

**Do not touch the switch with wet fingers.**

Touching a switch with wet fingers can cause electric shock.

### **CAUTION**

**After a long use, check the unit stand and fitting for damage.**

If they are left in a damaged condition, the unit may fall and result in injury.

**Do not allow a child to mount on the unit or avoid placing any object on it.**

Falling or tumbling may result in injury.

**Do not let children play on and around the unit.**

If they touch the unit carelessly, it may result in injury.

**Do not place a flower vase and anything containing water.**

Water may enter the unit, causing an electric shock or fire.

**Never touch the internal parts of the controller.**

Do not remove the front panel. Some parts inside are dangerous to touch, and a machine trouble may happen.

For checking and adjusting the internal parts, contact your dealer.

**Avoid placing the controller in a spot splashed with water.**

Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.

**Do not operate the air conditioner when using a room fumigation - type insecticide.**

Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.

**Safely dispose of the packing materials.**

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

**Do not turn off the power immediately after stopping operation.**

Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

**The appliance is not intended for use by young children or infirm persons without supervision.**

The remote controller should be installed in such way that children cannot play with it.

### **NOTE**

**Never press the button of the remote controller with a hard, pointed object.**

The remote controller may be damaged.

**Never pull or twist the electric wire of the remote controller.**

It may cause the unit to malfunction.

**Do not place the controller exposed to direct sunlight.**

The LCD display may get discolored, failing to display the data.

**Do not wipe the controller operation panel with benzene, thinner, chemical dustcloth, etc.**


The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.

**Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**



## 13.7 <DST301BA61> Schedule Timer Controller

Enables you to connect and control weekly schedule for up to 128 indoor units all together.

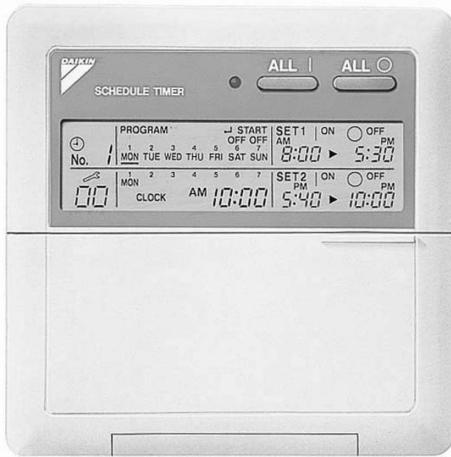

- Simultaneous control of up to 128 indoor units is managed by a week schedule.
- The start and stop time for twice a day can be set for the week in increments of 1 minute.
- By combining with a central remote controller and schedule timer, you can construct a system that matches the size and use of the building.
- If used together with a central remote controller, you can set up to 8 schedule patterns which can be distributed among zones as desired using the central remote controller.
- Is equipped with a compensation function for power failure up to 48 hours.
- Features thin design of a mere 16 mm in thickness. (Uses JIS recessed box for 2.)
- Wiring can be up to 1 km in length. Applicable wiring methods include bus and star in addition to crossover type.
- Can be used in combination with other D-BACS equipment.


### 13.7.1 Specifications / Dimensions

#### SPECIFICATIONS

##### ■ Specifications

Display of time	12-hour digital display
Clock cycle type	Quartz clock type
Clock accuracy	Within $\pm 30$ sec./month (environmental temperature from 15°C to 35°C)
Timer programming	Two pairs of programmed time for both system start and system off can be set in units of minute for each day of the week
Power failure compensation time	Approximately 48 hours for a single occurrence of power failure (clock with No. of programmed time)
Size	120 (W) $\times$ 120 (H) $\times$ 53 (D) mm (Width/Height/Depth)
Weight	Approximately 210g

##### ■ Outline drawings

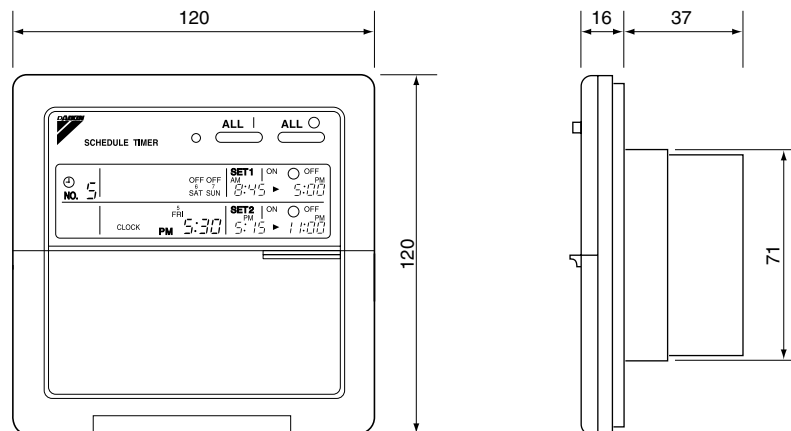

Specifications and appearance subject to change without notice.

## 13.7.2 Installation Manual

Please read these "SAFETY CONSIDERATIONS" carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation. Please instruct the customer on how to operate the unit and keep it maintained. Also, inform customers that they should store this installation manual along with the operation manual for future reference. This air conditioner comes under the term "appliances not accessible to the general public".

Meaning of warning, caution and note symbols.

- ⚠ **WARNING** .....Indication a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- ⚠ **CAUTION** .....Indication a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
- ⚠ **NOTE** .....Indication situation that may result in equipment or property-damage-only accidents.

### ⚠ **WARNING**

**Ask your dealer or qualified personnel to carry out installation work. Do not try to install the machine by yourself.**  
Improper installation may result in water leakage, electric shocks or fire.

**Perform installation work in accordance with this installation manual.**  
Improper installation may result in water leakage, electric shocks or fire.

**Be sure to use only the specified accessories and parts for installation work.**  
Failure to use the specified parts may result in water leakage, electric shocks, fire or the unit falling.

**Carry out the specified installation work after taking into account strong winds, typhoons or earthquakes.**  
Improper installation work may result in the equipment falling and causing accidents.

**Make sure that a separate power supply circuit is provided for this unit and that all electrical work is carried out by qualified personnel according to local laws and regulations and this installation manual.**  
An insufficient power supply capacity or improper electrical construction may lead to electric shocks or fire.

**Make sure that all wiring is secured, the specified wires are used, and no external forces act on the terminal connections or wires.**  
Improper connections or installation may result in fire.

**When wiring the power supply and connecting the remote controller wiring and transmission wiring, position the wires so that the electric parts box lid can be securely fastened.**  
Improper positioning of the electric parts box lid may result in electric shocks, fire or the terminals overheating.

**Before touching electrical parts, turn off the unit.**

**Ground the air conditioner. Do not connect the ground wire to gas or water pipes, lightning rod or a telephone ground wire.**  
Incomplete grounding may result in electric shocks.

**When installing or relocating the system, be sure to keep the refrigerant circuit free from substances other than the specified refrigerant (R410A), such as air.**

**Do not reconstruct or change the settings of the protection devices.**  
If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Daikin are used, fire or explosion may result.

**Do not touch the switch with wet fingers.**  
Touching a switch with wet fingers can cause electric shock.

**Install an earth leak circuit breaker, as required.**  
If an earth leak circuit breaker is not installed, electric shock may result.

**Do not install the air conditioner or the remote controller in the following locations:**

- (a) where a mineral oil mist or an oil spray or vapor is produced, for example in a kitchen  
Plastic parts may deteriorate and fall off or result in water leakage.
- (b) where corrosive gas, such as sulfurous acid gas, is produced  
Corroding copper pipes or soldered parts may result in refrigerant leakage.
- (c) near machinery emitting electromagnetic waves  
Electromagnetic waves may disturb the operation of the control system and result in a malfunction of the equipment.
- (d) where flammable gases may leak, where there are carbon fiber or ignitable dust suspensions in the air, or where volatile flammables such as thinner or gasoline are handled.  
Operating the unit in such conditions may result in fire.

**CISPR 22 Class A Warning.**

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

 **CAUTION**

**Be very careful about product transportation.**

**Safely dispose of the packing materials.**

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries. Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

**Do not turn off the power immediately after stopping operation.**

Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

 **NOTE**

**Install the indoor and outdoor units, power supply wiring and connecting wires at least 3.5ft. away from televisions or radios in order to prevent image interference or noise.**

(Depending on the radio waves, a distance of 3.5ft. may not be sufficient enough to eliminate the noise.)

**Remote controller (wireless kit) transmitting distance can result shorter than expected in rooms with electronic fluorescent lamps. (inverter or rapid start types)**

Install the indoor unit as far away from fluorescent lamps as possible.

**This unit is a class A product.**

In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

# 1 ACCESSORIES

Check the following accessories are included in the kit before installation.

Body	1	Installation screws (M4 × 16)	2
Operation manual	1	Attached electric wire (for individual use)	1
Installation manual*	4	Crimp style terminal (for individual use)	2

For Installation, a electrical box to be embedded is necessary (part to be procured in the field/with covers).



\* DST301BA61 includes only one installation manual.

# 2 INSTALLATION AND INITIAL SETTING

## 1. Remove the upper part of the remote controller.

- Insert a (-) screwdriver (2 locations) into the recess between the upper part and the lower part of the remote controller and twist the screwdriver lightly.

(The PC board is attached with the upper part of the remote controller. Do not damage electric parts with a screwdriver, etc.)

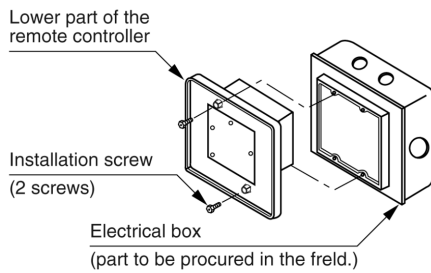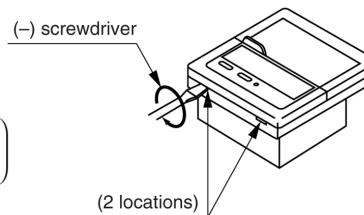

- Attach the lower part to the electrical box (part to be procured in the field) with the provided installation screws.

(Select a flat face as a installation place. Do not tighten the installation screws excessively not to damage the lower part of the remote controller.)

For part to be procured in the field electrical box, use KJB212AA (optional accessory).

## 2. Initial setting

- Setting connector for individual use (X1A) (Factory set : OFF) (Set for individual use only)

- For individual use of schedule timer  
Insert the connector attached with the body case on the PC board.
- For combined use with other optional controllers for centralized control  
Do not change the factory setting.

- Control mode selector (SS2) (Set for individual use only)

By changing the switch, setting mode of individual and centralized operation is available.

Note) When used with other optional controllers, control mode of central remote controller and unified ON/OFF controller have the priority.

 


- Setting of the sequential operation function

The schedule timer is equipped with a sequential operation function that sequentially turns indoor units on in 2-second intervals during unified operation.

(Sequential operation is factory set to "ON.")


To switch sequential operation ON or OFF, set as follows.



Note) The sequential operation function is designed to reduce the load on the power supply equipment, but does not guarantee that compressors will not be started simultaneously. You cannot therefore count on a capacity reduction effect by power supply equipment breaker selection.


④ Forced reset switch (SS1)

When changing the setting of the connector for individual use, etc., the switch can be reset simply by setting it to the reset side once and returning to the normal side. This procedure enables to reset without turning off the power. (Set the normal side at normal operation.)

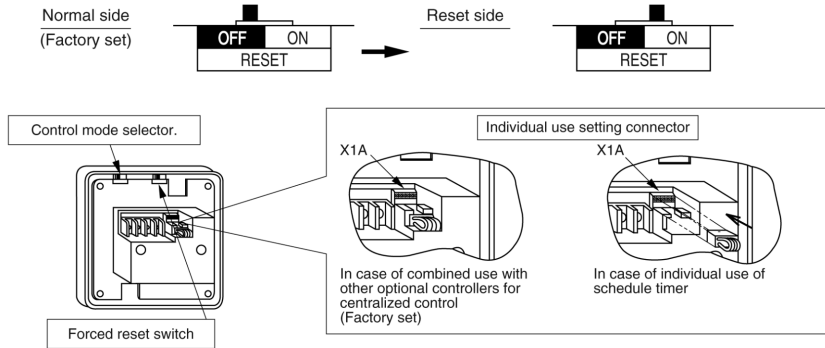



⑤ Setting for special function

When you want to have a programmed operation of a part of indoor units by using only schedule timer, cut off JP1 and supply the power again. You can have a programmed operation of the indoor units set the address for central control by local remote controller.

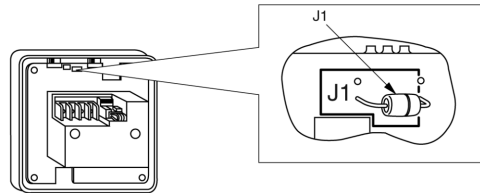


3. Transmission wiring

- In case of individual use of schedule timer**  
Connect terminals of the schedule timer (F1, F2) with terminals of the indoor unit (F1, F2). Connect terminals of the schedule timer (D1, D2) and the connector on the indoor unit PC board, using the attached electric wire and crimp style terminals. Prevent the connection part of crimp style terminal from getting out of the electric parts box of indoor unit.
- In case of combined use with other optional controllers for centralized control**  
Connect terminals of the schedule timer (F1, F2, D1, D2) and the terminals of the central remote controller (or unified ON/OFF controller).

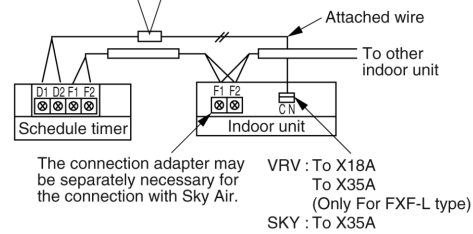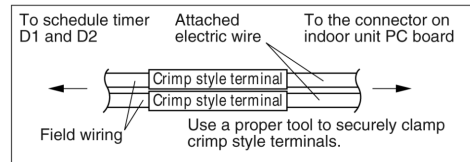

Wiring specifications


	F1, F2	D1, D2
Wiring	Sheathed wire (2-wire)	Sheathed wire (2-wire)
Gauge	0.75 ~ 1.25mm <sup>2</sup>	0.75 ~ 1.25mm <sup>2</sup>
Length	Max. 1000m	Max. 150m

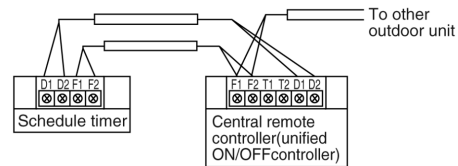

NOTES:

- Electrical box and transmission wiring are not attached.
- Do not touch the PC board with your hand.
- Keep transmission wiring at least 50 mm away from power supply wiring to avoid malfunctions.

4. Install the upper part of the remote controller as before.

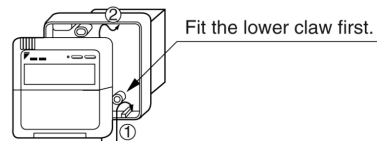




### 3 SETTING GROUP NO. FOR CENTRALIZED CONTROL

Set the group number of each group of the indoor unit from the remote controller. (In case of no remote controller, also connect the remote controller and set the group No. Then, remove the remote controller.)

- (1) Turn ON the power of the indoor unit and SCHEDULE TIMER.  
(Unless the power is ON, no setting can be made.)  
Check that the installation and electrical wiring are correct before turning the power supply ON.  
(When the power supply is turned ON, all LCD appear once and the unit may not accept the operation for about one minute with the display of "88".)
- (2) While in the normal mode, hold down the "TEST" button for a minimum of 4 seconds.  
The remote controller will enter the FIELD SET MODE.
- (3) Select the MODE No. "00" with the "MODE" button.
- (4) Use the "GROUP" button to select the group No. for each group.  
(Group numbers increase in the order of 1-00, 1-01, ... 1-15, 2-00, ... 8-15.)
- (5) Press "OK" to set the selected group No.
- (6) Press "TEST" to return to the NORMAL MODE.

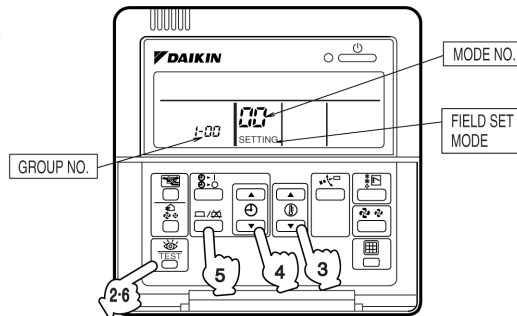

- NOTES
- In case of individual use of schedule timer  
Group number setting is not necessary. It is automatically set when turning power supply ON.
  - See the instruction manuals which came with the VentiAir and adapters (i.e., multi-purpose adapters) for details on their Group No. settings.

**NOTICE** Be sure to keep the operation manual for maintenance.


### 4 TEST OPERATION

Refer to the installation manual attached to the outdoor unit.


In case the schedule timer is used individually and the wiring is changed after the system has been operated, reset the power after energizing for more than five minutes.  
It may not be possible to control the unit from the schedule timer.

3P162015-1A

## 13.7.3 Operation Manual

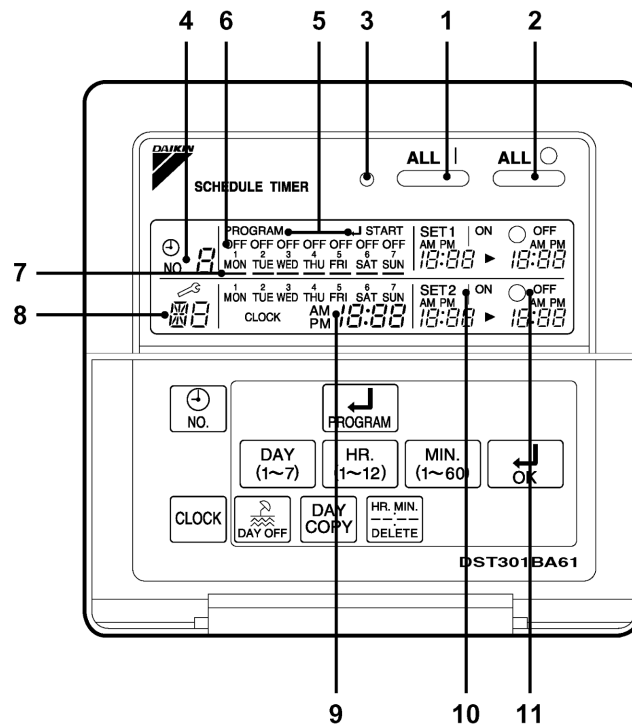


1

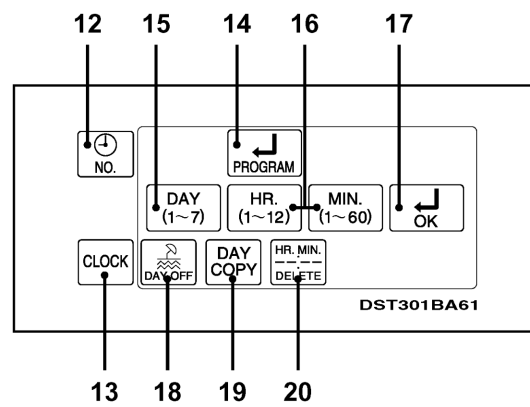


2


[1]

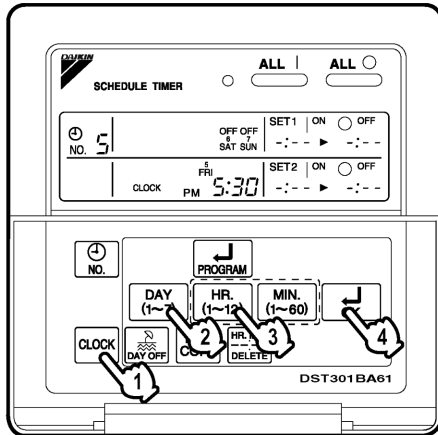


3

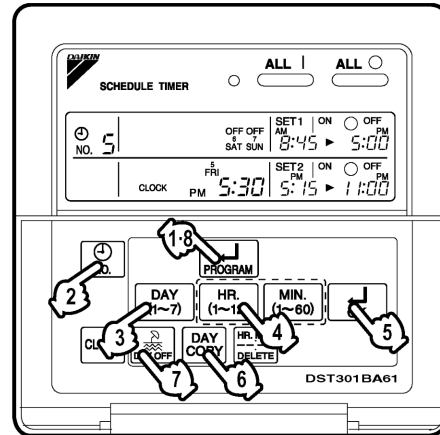


4

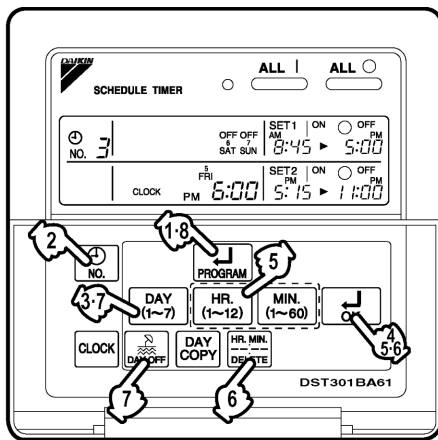

5

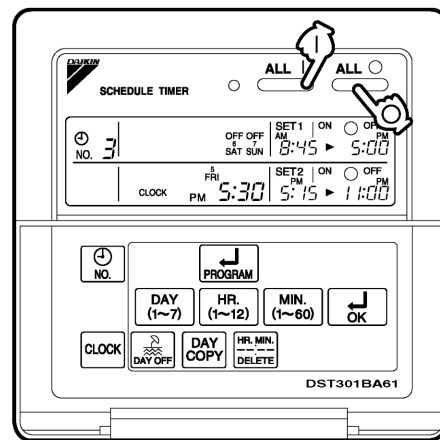

6

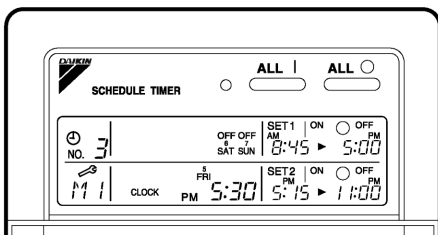

7

[2]

## SAFETY CONSIDERATIONS


Please read these " SAFETY CONSIDERATIONS " carefully before installing air conditioning equipment and be sure to install it correctly. After completing the installation, make sure that the unit operates properly during the start-up operation.


Please instruct the customer on how to operate the unit and keep it maintained.


Also, inform customers that they should store this installation manual along with the operation manual for future reference.

This air conditioner comes under the term " appliances not accessible to the general public ".

Meaning of warning, caution and note symbols.


 **WARNING** ..... Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** ..... Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **NOTE** ..... Indicates situation that may result in equipment or property-damage-only accidents.

**Keep these warning sheets handy so that you can refer to them if needed.**

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

—  **WARNING** —

**In order to avoid electric shock, fire or injury, or if you detect any abnormality such as smell of fire, turn off power and call your dealer for instructions.**

**Ask your dealer for installation of the air conditioner.**

Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.

**Ask your dealer for improvement, repair, and maintenance.**

Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.

**Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.**

**Ask your dealer to move and reinstall the air conditioner or the remote controller.** Incomplete installation may result in a water leakage, electric shock, and fire.

**Never let the indoor unit or the remote controller get wet.**

It may cause an electric shock or a fire.

**Never use flammable spray such as hair spray, lacquer or paint near the unit.** It may cause a fire.

**Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.**

Use of wire or copper wire may cause the unit to break down or cause a fire.

**Never inspect or service the unit by yourself.**

Ask a qualified service person to perform this work.

**Cut off all electric waves before maintenance.**

**Do not wash the air conditioner or the remote controller with excessive water.** Electric shock or fire may result.

**Do not install the air conditioner or the remote controller at any place where flammable gas may leak out.**

If the gas leaks out and stays around the air conditioner, a fire may break out.

**Do not touch the switch with wet fingers.** Touching a switch with wet fingers can cause electric shock.

**CISPR 22 Class A Warning:**

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

---

**⚠ CAUTION**


---

**After a long use, check the unit stand and fitting for damage.**

If they are left in a damaged condition, the unit may fall and result in injury.

**Do not allow a child to mount on the unit or avoid placing any object on it.**

Falling or tumbling may result in injury.

**Do not let children play on and around the unit.**

If they touch the unit carelessly, it may result in injury.

**Do not place a flower vase and anything containing water.**

Water may enter the unit, causing an electric shock or fire.

**Never touch the internal parts of the controller.**

Do not remove the front panel. Some parts inside are dangerous to touch, and a machine trouble may happen.

For checking and adjusting the internal parts, contact your dealer.

**Avoid placing the controller in a spot splashed with water.**

Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.

**Do not operate the air conditioner when using a room fumigation - type insecticide.**

Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.

**Safely dispose of the packing materials.**

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

Tear apart and throw away plastic packaging bags so that children will not play with them. If children play with a plastic bag which was not torn apart, they face the risk of suffocation.

**Do not turn off the power immediately after stopping operation.**

Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.

**The appliance is not intended for use by young children or infirm persons without supervision.**

**The remote controller should be installed in such away that children cannot play with it.**

---



---

**⚠ NOTE**


---

**Never press the button of the remote controller with a hard, pointed object.**

The remote controller may be damaged.

**Never pull or twist the electric wire of the remote controller.**

It may cause the unit to malfunction.

**Do not place the controller exposed to direct sunlight.**

The LCD display may get discolored, failing to display the data.

**Do not wipe the controller operation panel with benzine, thinner, chemical dustcloth, etc.**

The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.

**Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**

---

## CONTENTS

SAFETY CONSIDERATIONS.....	1	Change and cancellation of no. of programmed time.....	7
FEATURES AND FUNCTIONS.....	3	Manual operation.....	9
NAMES AND FUNCTIONS OF OPERATING SECTION.....	4	Operation control code.....	9
OPERATION.....	5	Error diagnosing function.....	9
Setting present time.....	5	QUESTION AND ANSWER.....	10
Setting no. of programmed time.....	6	SPECIFICATIONS.....	12
		Specifications.....	12
		Outline drawings.....	12

## FEATURES AND FUNCTIONS

### ■ Operation controlled by programmed time

Operating time and stopping time can be set to the minute by each day of the week. The operating and stopping patterns can also be set in schedule according to the time slot given twice a day in tune with the uses.



See page  
5—9.

### ■ Unified Operation/Stop

By using this schedule timer, the unified operation/stop of the indoor unit can be executed manually regardless of the No. of programmed time in operation.







See page  
9.

### • When used in conjunction with central remote controller (Optional Accessory)

The operation controlled by programmed time can be set for up to eight different patterns (timer No. 1 – 8). Each schedule pattern can be also selected.

## NAMES AND FUNCTIONS OF OPERATING SECTION (Fig. 1, 2)

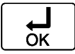
1	<b>UNIFIED OPERATION BUTTON</b> “ ALL   ” 	Press this button to perform the unified operation regardless of the No. of programmed time.
	<b>UNIFIED STOP BUTTON</b> “ ALL ○ ” 	
2	<b>OPERATION LAMP (RED)</b>	The light turns on during the operation of the indoor unit.
	<b>DISPLAY</b> “  ” (TIME NO.)	
3	<b>DISPLAY</b> “  ” (TIME NO.)	Displays the time No. only when used in conjunction with the central remote controller.
	<b>DISPLAY</b> “  ” (TIME NO.)	
4	<b>DISPLAY</b> “PROGRAM  START.” (PROGRAMMING START)	The light turns on when the timer is programmed.
	<b>DISPLAY</b> “ OFF ” (HOLIDAY SETTING)	
5	<b>DISPLAY</b> “ OFF ” (HOLIDAY SETTING)	Lights above the day of the week set as holiday. The operation controlled by timer is not available on that day.
	<b>DISPLAY</b> “ — ” (SETTING OF DAYS OF A WEEK)	
6	<b>DISPLAY</b> “ — ” (SETTING OF DAYS OF A WEEK)	Flashes below the day of the week programmed.
	<b>DISPLAY</b> “  ” (MALFUNCTION CODE)	
7	<b>DISPLAY</b> “  ” (MALFUNCTION CODE)	Displays the contents of malfunction during the stop due to malfunction.
	<b>DISPLAY</b> “  ” (PRESENT TIME)	
8	<b>DISPLAY</b> “  ” (PRESENT TIME)	Displays the present day of the week and time.
	<b>DISPLAY</b> “  ” (PROGRAMMED TIME OF SYSTEM START)	
9	<b>DISPLAY</b> “  ” (PROGRAMMED TIME OF SYSTEM START)	Displays the time programmed to start.
	<b>DISPLAY</b> “  ” (PROGRAMMED TIME OF SYSTEM OFF)	
10	<b>DISPLAY</b> “  ” (PROGRAMMED TIME OF SYSTEM OFF)	Displays the time programmed to stop.
	<b>TIME NO. BUTTON</b> “  ”	
11	<b>TIME NO. BUTTON</b> “  ”	See page 5-9.
	<b>CLOCK ADJUSTING</b>	
12	<b>BUTTON</b> “  ”	Press this button to set the present time.
	<b>PROGRAMMING START</b>	
13	<b>PROGRAMMING START</b>	Press this button to set or check the No. of programmed time. Press it again after you are through with the program.
	<b>BUTTON</b> “  ”	
14	<b>BUTTON FOR SELECTING</b>	Press this button to select the day of the week.
	<b>DAYS OF A WEEK</b> “  ”	
15	<b>BUTTON FOR SELECTING</b>	Press this button to select the day of the week.
	<b>DAYS OF A WEEK</b> “  ”	
16	<b>HOUR/MINUTE BUTTON</b>	Press this button to adjust the present time and the programmed time.
	“  ”	

17	TIMER ON BUTTON “  ”
	Press this button to set the present time and the programmed time.
18	HOLIDAY SETTING BUTTON “  ”
	Press this button to set holidays.
19	DAY “  ”
	Use this button to set the No. of programmed time same as that of the previous day.
20	PROGRAM CANCELING BUTTON “  ”
	Use this button to set the programmed time to cancel. The display shows “ - ; - - ”.
(Note) 1. Please note that all the displays in the figure appear for explanation purpose or when the cover is open.	

## OPERATION

 
### ■ Setting present time (Fig. 3)

(Example) In case of setting Friday, 5:30 p.m.

1.  Press the **CLOCK ADJUSTING BUTTON**. The present time display flashes.

(NOTE)


- The present time needs adjusting in case of turning power supply on for the first time or the occurrence of power failure over the period of 48 hours or more.




2.  Press the **BUTTON FOR SELECTING DAYS OF A WEEK**. Each time the button is pressed, the day display shifts to the right.

(NOTE)

 - The display “ MON ” follows the display “ SUN. ”




Set the day to Friday.


3.  Set the time with the **HOUR/MINUTE BUTTON**. Each time the HOUR/MINUTE BUTTON is pressed, the display is put forward minute by minute and hour by hour. When the button is kept pressed, the display is put forward continuously.


(NOTES)

 - After becoming “ AM 11:00 ”, when the button is pressed, the display becomes “ PM 0:00 ”.
- After becoming “ 59 ” (minute), when the button is pressed, the display becomes “ 00 ” (minute).



Set the time to 5:30 p.m.

 4.  Press the **TIMER ON BUTTON** the moment the time signal of TV, radio, telephone, etc. is heard. The mark “ : ” flashes, and the clock starts.



Press the **TIMER ON BUTTON**

in tune with the time signal at 5:30 p.m.

(NOTES)

- The clock used is of 12-hour type.
- When you turn power supply on, the system may display “ 88 ” for about one minute and not start to operate after all the liquid crystal displays appear at a time.
- If the **CLOCK ADJUSTING BUTTON** is pressed by mistake, press it again to return to the original state. As the clock does not stop, the time indicated by the clock is kept correct. In case of power failure within 48 hours, the clock keeps operating by utilizing the built-in battery.




**■ Setting no. of programmed time (Fig. 4)**

 (Example) Time No. 5 (to be programmed only when used in conjunction with the central remote controller)

**Monday to Friday:**  
 Operating from 8:45 a.m. till 5:00 p.m.  
 Operating from 5:15 p.m. till 11:00 p.m.

**Saturday and Sunday:**  
 Setting the whole day stop operation (application for holidays) controlled by programmed time.


1. Press the PROGRAMMING START BUTTON. Programming is available. The display "PROGRAM ↓ START" appears, and the display of days of a week flashes.



2. Press the TIME No. BUTTON, and select the desired number.

(NOTE)  
 • Unless used in conjunction with the central remote controller, The TIME No. is not displayed and can not be selected.

Select the TIME No. 5.

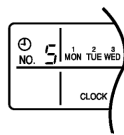

3. Press the BUTTON FOR SELECTING DAYS OF A WEEK, and set the proper day of the week. Each time you press it, the flashing display of days of a week shifts to the right.



Set to Monday.

**(1) Setting programmed time**

 
 
4. Set the programmed time of system start 1 by using the HOUR/MINUTE BUTTON. Each time the HOUR/MINUTE BUTTON is pressed, the display is put forward minute by minute and hour by hour. When the button is kept pressed, the display is put forward continuously.




Set the "PROGRAMMED TIME OF SYSTEM START 1" at 8:45 a.m.

5. Press the TIMER ON BUTTON, and set the programmed time of system start 1. Each time you press it, the next area to be set flashes.

(NOTE)  
 • Set the other programmed time in the same procedure.




- (2) **Set the next day of the week.**  
Set the day of the week to Tuesday, and copy the program of the previous day (Monday). In the same procedure, set the day of the week to Wednesday through Friday in sequence.

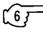
6.  **Press the BUTTON FOR SELECTING DAYS OF A WEEK and set the following day. Press the BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY. The same program as that of the immediately preceding day of the week is set.**

(NOTE)

- Repeat each procedure 3 – 5 in the above when not copying the contents of the previous day.

- (3) **Holiday setting**

 7.  **Press the BUTTON FOR SELECTING DAYS OF A WEEK and set one or more days of the week as holiday. Press the HOLIDAY SETTING BUTTON, and the display “ OFF ” is displayed at the top of the day of the week. If you press it again, the display returns to the original state.**



Set Saturday and Sunday as holidays.

8.  **Press the PROGRAMMING START BUTTON, and finish the program setting.**

(NOTES)

- Unless the button is pressed within 20 minutes, the display will automatically revert back to the original state. In this case, setting contents up to the point where the TIMER ON BUTTON (or HOLIDAY SETTING BUTTON or BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY) is pressed will only take effect.
- The display “ PROGRAM ↵ START ” and the display of days of a week “ — ” disappears.


- The flashing display goes off, and the No. of programmed time of the present day is displayed. Then the operation controlled by timer starts.
- The operation controlled by timer is executed even while the program is being set.





This is the end of the setting example.

### ■ Change and cancellation of no. of programmed time (Fig. 5)

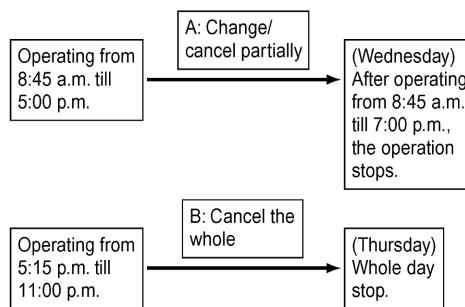
(Example) **Time No. 3 (to be set only when used in conjunction with the central remote controller)**




-  **Press the PROGRAMMING START BUTTON. The program setting is ready. The display “ PROGRAM ↵ START ” appears, and the display of days of a week flashes.**
-  **Press the TIME No. BUTTON, and select the desired No.**




Select the time No. 3.

 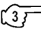3.  Press the **BUTTON FOR SELECTING DAYS OF A WEEK**, and set the day of the week to be changed. The set No. of programmed time of the day of the week is displayed.




Set the day to Wednesday.

**A. Change/cancel partially**

4.  Press the **TIMER ON BUTTON** and change, and the display of programmed time flashes. Each time you press it, the next area to be set flashes.




Shift to the display "PROGRAMMED TIME OF SYSTEM OFF 1".

5.  Press the **HOUR/MINUTE BUTTON** and change the programmed time. Press the **TIMER ON BUTTON**, and finalize the setting of change.

 


Change the "PROGRAMMED TIME OF SYSTEM OFF 1" to 7:00 p.m.

6.  Press the **PROGRAM CANCELING BUTTON**, and cancel the programmed time. If you press it again, display returns to the original state. Press the **TIMER ON BUTTON** to finalize the cancellation.




Shift to the "PROGRAMMED TIME OF SYSTEM START 2".



Set the "PROGRAMMED TIME OF SYSTEM START 2" to program cancellation.

In the same procedure, cancel the programmed time of system off 2.

**B. Cancel the whole**

7.  Press the **BUTTON FOR SELECTING DAYS OF A WEEK**, and shift to the day of the week to be canceled. Then, press the **HOLIDAY SETTING BUTTON**, the display "OFF" appears at the top of the particular day of the week. The programmed time is canceled. If you press the button again, the display returns to the original state.



Shift the day of the week to Thursday to set as a holiday.



8.  Press the **PROGRAMMING START BUTTON**. The program setting is now finished.

(NOTES)

- Unless the button is pressed within 20 minutes, the display will automatically revert back to the original state. In this case, setting contents to the point where the **TIMER ON BUTTON** (or **HOLIDAY SETTING BUTTON** or **BUTTON FOR COPYING PROGRAM OF PREVIOUS DAY**) is pressed will only take effect.
- To continue the change/cancellation, do not press the **PROGRAMMING START BUTTON** until all change/cancellation are completed.
- The operation controlled by timer is executed even while the program is being set.

■ **Manual operation (Fig. 6)**

This schedule timer enables the operation/stop by pressing the **UNIFIED OPERATION/STOP BUTTON** in addition to the operation controlled by timer (operation/stop according to the programmed time) at any time.

1.  Press the **UNIFIED OPERATION BUTTON**, and the **OPERATION LAMP** turns on.
2.  Press the **UNIFIED STOP BUTTON**, and the **OPERATION LAMP** is turned off.

(NOTES)

- The operation automatically stops according to the programmed time of system off even during the manual operation. In the meantime, the operation starts automatically according to the programmed time of system start even during the stop of operation.
- If the unit is used in conjunction with other optional controllers for centralized control, the **OPERATION LAMP** of the unit that is not under operation control may be turned on or off a few minutes behind schedule. This shows that the signal is being exchanged, and does not indicate any failure.

Operation lamp

- Turn on: The light turns on when any of the indoor units is in operation whether the operation is controlled by timer or by hand.
- Turn off: The light turns off when all the indoor units stop.

■ **Operation control code**

Two different types of operation control codes can be selected when this kit is used independently (when not used in conjunction with the central remote controller, unified ON/OFF controller, etc.).

**Individual**

In case where the operation/stop is controlled by both schedule timer and remote controller.

**Centralized**

The operation is controlled by the schedule timer alone, and the operation/stop is controlled freely with the remote controller during the programmed time.

(NOTES)

- For current settings, contact your DAIKIN dealer.
- To change settings, contact your DAIKIN dealer.  
Do not change settings yourself.

■ **Error diagnosing function (Fig. 7)**



This schedule timer is provided with the malfunction diagnosing function. The malfunction code flashes if there occurs any malfunction in communication, etc. between and among the optional controllers for centralized control. In addition, the operation lamp also flashes if there occurs any malfunction in communication with the indoor unit. Check the contents of the display and contact your DAIKIN dealer because the signals give you the idea of the trouble area.

Operation lamp	Malfunction code	Contents of malfunction
Turn off	M1	Failure of PC board of schedule timer. <b>Fixes</b> The following causes are possible. Check each one. 1. PC board problems
Turn on or off	M8	Malfunction of transmission between each optional controllers for centralized control. <b>Fixes</b> Check all central devices which are connected (e.g., power supply, transmission wiring, etc.).
Turn on or off	MA	Improper combination of optional controllers for centralized control. <b>Fixes</b> The following causes are possible. Check each one. 1. Are all central devices combined correctly? 2. Is the master central connector attached to two or more central devices? 3. Are there 128 or more indoor units connected?

Turn on or off	MC	Address failure of schedule timer. <b>Fixes</b> The following causes are possible. Check each one. 1. Do the control range addresses in the central remote controller overlap? 2. Do the control range addresses in the on/off controller overlap? 3. Are there 2 or more schedule timers connected?
Flash	UE	Malfunction of transmission between indoor unit and optional controllers for centralized control. <b>Fixes</b> Inspect all indoor units which are displaying an error (e.g., power supply, transmission wiring, etc.).
Flash	—	Malfunction in indoor unit (Refer to the malfunction codes of the indoor remote controller, while also read the "CAUTION FOR SERVICING" attached to the indoor unit.)

### QUESTION AND ANSWER

Question	Answer
It is possible to make settings twice a day, but is it possible to make only the "off" setting? (To avoid forgetting to turn the unit off.)	Yes. Press the PROGRAM CANCELING BUTTON in the "AM/PM   ON " 12:88 section in order to set it to "OFF".
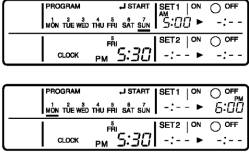
<p>Is it possible to set times which straddle days?</p>	<p>Yes, it is possible. Example: Start operation at 5:00 a.m. on Sunday Stop operation at 6:00 p.m. on Monday</p> 	<p>The TIME NO. is not displayed.</p>	<p>The following causes are possible. 1. The TIME NO. is not displayed when using the schedule timer alone. (It can be set if using the central remote controller at the same time.)</p>
<p>The unit does not turn on even though the set "on" time has come. (When using the schedule timer alone)</p>	<p>The following causes are possible. 1. Are the "on" time and the "off" time set to the same time?</p>	<p>The display remains</p>  <p>even though I push the HOUR/MINUTE BUTTON in the timer program settings.</p>	<p>The following causes are possible. 1. Is the day set to a holiday?</p>
<p>The unit does not turn on even though the set "on" time has come. (When using the unit with a central remote controller)</p>	<p>The following causes are possible. Check each one. 1. Was the timer number set with the central remote controller? Was an incorrect timer number set? 2. Is another timer no. set with the central remote controller set for "off" at the same time? 3. Is the operation code set to "remote control permission timer" using the central remote controller or the on/off controller?</p>	<p>I cannot set "central management priority" or "after-push priority" with the schedule timer.</p>	<p>The following causes are possible. 1. Is a central remote controller or on/off controller also installed? <b>* The priority order of the operation codes depends on the central devices which are installed.</b> The below operation codes are set. • Schedule timer Central remote controller is used as well Operation code of the central remote controller • Schedule timer On/off controller is used as well Operation code of the on/off controller • Schedule timer Central remote controller On/off controller is used as well Operation code of the central remote controller</p>
<p>The unit operates even though that day is set as a holiday. (When using the unit with a central remote controller)</p>	<p>The following causes are possible. 1. Is another timer number set with the central remote controller set for "on" at the same time? (If two timer numbers are set, make sure that the settings for holidays and working days do not overlap between the different timer numbers.)</p>		

### 13.8 <KRP1C75> Adaptor for Wiring

#### Accessories


Check if the following accessories are included in the kit.

Name	Adaptor for wiring	Harness	PCB support	Clamp	Installation manual
Shape					
Quantity	x1	x1	x4	x3	x1

#### <Caution>

- All wiring must be performed by an authorized electrician.
- For electric wiring work, refer to also "Wiring diagram" attached to the control box lid and this manual.
- All wiring must be worked after shutting down power supply.
- All field supplied parts and materials and electric works must conform to local codes.
- A circuit breaker capable of shutting down power supply to the entire system must be installed.

#### 1 Names of parts

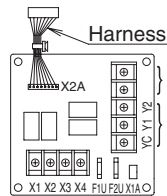



Terminals for operation status

This function can not be used.

Terminals for controlling external heater, humidifier, and other equipment.

#### 2 Electric wiring


 
- Refer to the wiring diagram attached to the indoor unit before attempting to wire.
- [Make sure wires to units do not pass over the PCB when wiring.]**
- Wire the adaptor to the indoor unit as shown below.

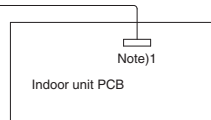

Note)1 Connector No. X33A



##### ① Thermo-ON and Fan ON status

- Thermo-ON status  
Contact terminals X1 and X2 close while the indoor unit is Thermo-ON (call for cooling or heating)
- Fan ON status  
Contact terminals X3 and X4 close when indoor unit fan is ON

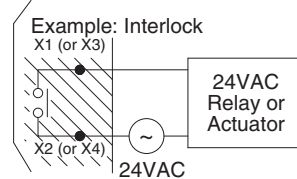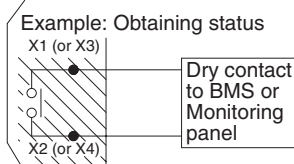


##### ② Interlocking Heater and Humidifier

- Heater output
  - Auxiliary heater output with heat pump heating
  - Primary heater output when heat pump lockout enabled
- Humidifier output
  - Energized while heating Thermo-ON (call for heating)

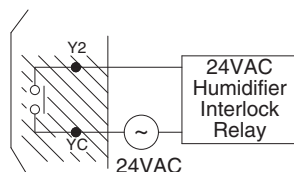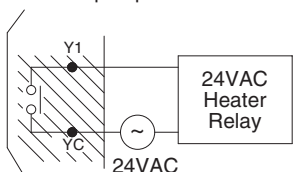



#### 3 Installation

- Installation differs according to models as shown below.
- Do not bundle low and high voltage wires together.
- Bundle any excess wires with the attached clamps so as to keep loose wires off the indoor unit PCB.

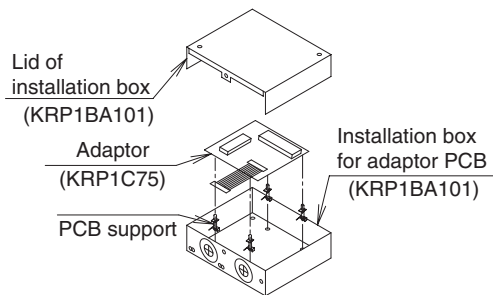

### 13.9 <KRP4A74> Wiring Adaptor for Electrical Appendices

**Accessories** Check if the following accessories are included in the kit.

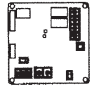Adaptor	Relay harness	PCB support	×4
×1	(1) ×1 each	Clamp	×3
	(2) 	Installation manual	×1

#### 1 System outline


This kit enables remote control (ON/OFF control, temperature setting, operation display, error display) and can be used with the following systems though it cannot be used in conjunction with other optional controllers for centralized control.

1. Individual control (Each indoor unit is controlled individually.)

This system requires the following parts.

- Adaptor.....KRP4A74
- Remote controller (For operation control).....BRC1E73


(Ex.)When individually controlling 8 units  
KRP4A74 ×8 kits  
BRC1E73 ×8 kits

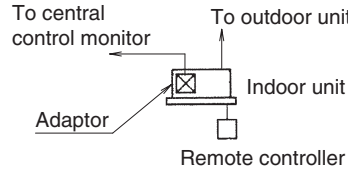

2. Group control (Multiple indoor units are controlled as a group.)

This system requires the following parts.

- Adaptor.....KRP4A74
- Remote controller (For operation control).....BRC1E73

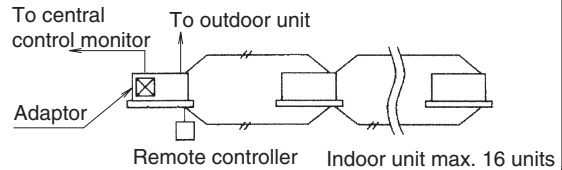

#### 2 Names of parts and function

**Service monitor (H1P: Green)**  
This lamp flashes while the CPU is operating normally.

**Service monitor (H10P: Red)**  
This lamp lights up when trouble occurs in electrical wiring or setting switches. Remote control is disabled. (This LED is out in constant operation.)

**Terminal board for display signal (X3M)**  
Connects operation and error output to a remote point (Central control monitor, etc.). (Normal operation: W1, W2; Error: W3, W4)

**Power supply connector**  
To connector on indoor unit PCB.  
Note) Connector No. X35A

**Temperature setting ON/OFF switch (SS2)**  
(Factory set: Possible)

Impossible  
 Possible  
SS2

Do not change to "Impossible". Otherwise, temperature setting by the remote control cannot be made.

**Transmission wiring (P1,P2)**  
To P1 and P2 on indoor unit terminal board.

**Changeover switch (SS1) (Factory set: Volt)**  
Set to "Non volt" to input a no-voltage normally open contactor on the remote control input terminal board (TeS1).

**Control mode selector switch (RS1)**  
(Factory set: 0)

0  
 1


For selecting the type of system operation permitted via remote.

**Remote control input terminal board (X1M)**  
Connects control input from the remote control (Central control monitor, timer, etc.).

**Temperature setting input terminal (X2M)**  
This function cannot be used for this kit. Never apply voltage to this for any reason whatsoever.

For details, see the electric wiring.

#### 3 Installation

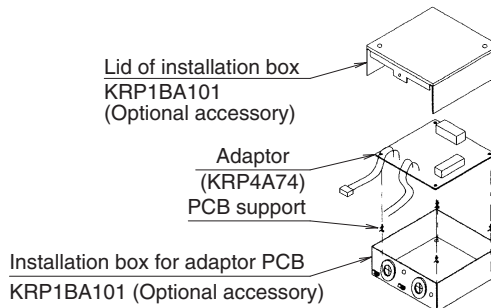


Note: Installation box for adaptor PCB is required to install the adaptor.



**4 Electric wiring**

- ① First, wire between the indoor and outdoor units, and then to the separate power sources, and finally between the indoor units and the remote controllers. Then, check if they operate properly.  
(If wiring for group control by remote controller, check crosswires.)  
For details, see the installation manual of the indoor and outdoor units.
- ② Next, wire between outside units such as the central control monitor, etc. and make the necessary settings.  
For details, see [Wiring to outside units \(Central control monitor\)](#).

**Wiring to indoor units**

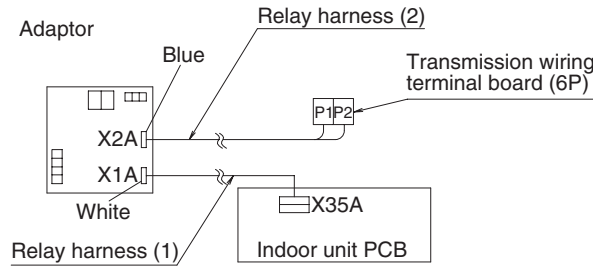


Make connections as shown above, using the attached relay harnesses (1) and (2).

- Connect relay harness (1) to the connector on the indoor unit PCB.
- Relay harness (2) has no polarity. Connect it to terminals P1 and P2 on the transmission wiring terminal board inside the indoor unit electric parts box.


**Wiring to outside units (Central control monitor)**

1. Remote control input (Operation control)  
Wire as described below. Wiring differs depending on whether using a voltage or no-voltage input.

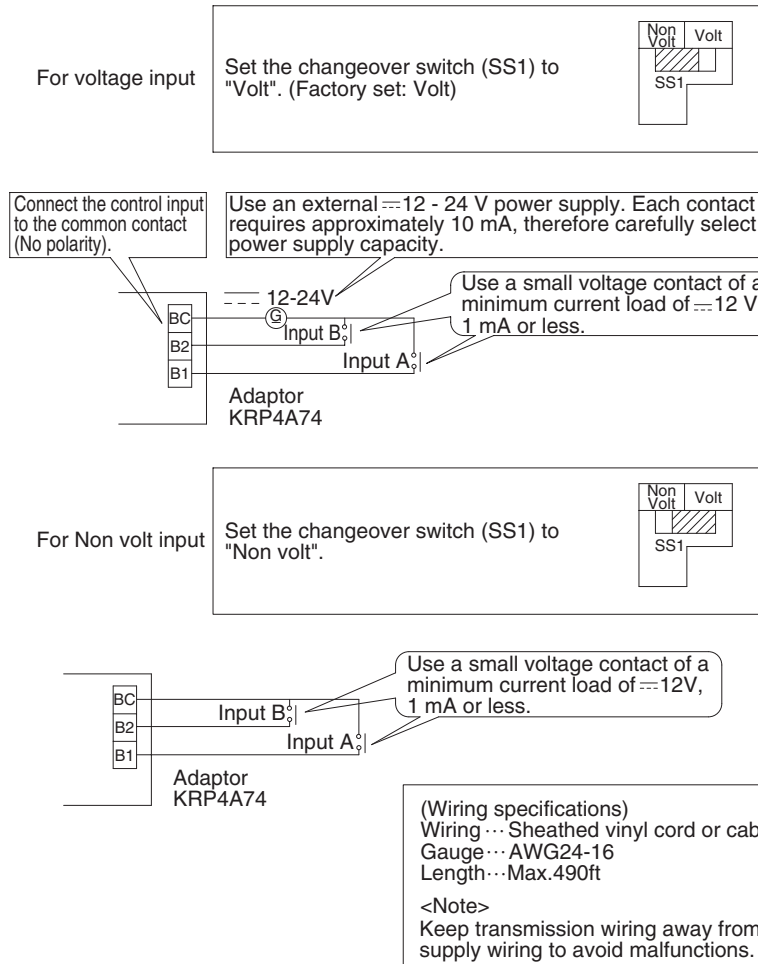

## 2. Setting the control mode selector switch (RS1)

 Using the control mode selector switch (RS1), select the control mode as described below.



## ① For specifying individual display

Position	Function
0	Individual display (Input ignored)

## ② When operating the unit with constant input at input A

Position	Function	When input A is ON	When input A is OFF
1	ON/OFF control impossible by remote controller	Operation (Normally ON/OFF control impossible by remote controller)	OFF + ON/OFF control impossible by remote controller
2	Centralized	Operation + ON/OFF control possible by remote controller	
3	OFF control possible by remote controller	Operation + OFF control possible by remote controller (ON control impossible by remote controller)	
4	ON/OFF control possible by remote controller	ON/OFF control possible by remote controller (Operation impossible by optional controller)	

<Note>

- Input B is for forced ON/OFF input. When input B is ON, OFF control is possible but ON/OFF control by the remote controller is impossible, and input A is ignored. When it is OFF, input A is ignored even if selected. It is necessary to reselect input A.

③ When operating the unit using instantaneous input at input A  
(Use an instantaneous input of 200 msec or longer ON time).

Position	Function	Input A	Input B capacity
5	ON/OFF control impossible by remote controller	Turns OFF system with ON input Turns ON system with ON input	Input B is for forced OFF input (when ON, OFF control is possible but ON/OFF control by remote controller is impossible, and input A is ignored)
6	Individual	Turns OFF system with ON input Turns ON system with ON input (Normally ON/OFF control possible by remote controller)	

## ★ For thermostat control using input B

Position	When input A is ON	When input B is ON
C	ON/OFF control impossible by remote controller (Same as position 5)	Forced thermostat OFF command
D		Energy saving command (*)
E	Individual (Same as position 6)	Forced thermostat OFF command
F		Energy saving command (*)

- Forced thermostat OFF command indoor unit fan only operates.
- Energy saving command (\*)  
The indoor unit operates at 4°F higher (cooling)/lower (heating) the set temperature.

<Note>

- In such case, even if input A is ON, thermostat control is turned OFF, and all units in the same group will stop.

④ When operating the unit using instantaneous input at input A and B  
(Use an instantaneous input of 200 msec or longer ON time).

Position	Function	When input A is ON	When input A is OFF
7	ON/OFF control impossible by remote controller	Operation (Normally ON/OFF control impossible by remote controller)	OFF + ON/OFF control impossible by remote controller
8	Centralized	Operation + ON/OFF control possible by remote controller	
9	OFF control possible by remote controller	Operation + OFF control possible by remote controller (ON control impossible by remote controller)	
A	ON/OFF control possible by remote controller	ON/OFF control possible by remote controller (Operation impossible by optional controller)	
B	Individual	Operation (Normally ON/OFF control possible by remote controller)	OFF (Normally ON/OFF control possible by remote controller)

<Note>

- When set to position 7-A, and using the constant mode for input B, forced stop capacity is enabled (Input A is ignored).
- At position B, the constant mode for input B is not used.


3. Cancelling display signals

Operation output terminals (W1 and W2) and error output terminals (W3 and W4) are no-voltage normally constant contacts.

(Allowed electric current per contact is between 10 mA and 3 A.)

Normal operation output (Ry1)  
ON when the indoor unit is  
operating normally.

Error output (Ry2)  
ON when the indoor unit stops  
because of malfunction or when  
a transmission error occurs  
between the adaptor and the  
indoor unit.

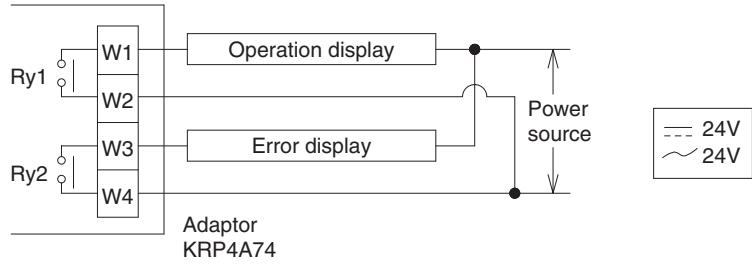








Display output is as described below.

Output	Both Ry1 and Ry2 OFF	Only Ry1 ON	Only Ry2 ON
Display	OFF	Normal operation	System stopped due to malfunction or transmission error generated between adaptor and indoor unit

## 13.10 <KRP1BA101> Installation Box for Adaptor PCB

### Accessories

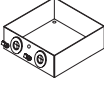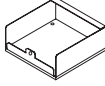Check the following accessories are included in this kit.

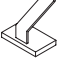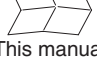
Name	Installation box	Lid of installation box	Clamp	Screw	Cord sticker	Installation manual	Screw
Quantity	x1	x1	x3	x3	x3	KRP1B101 English KRP1BA101 Englishx1, Japanese x1	x2
Shape	① 	② 	③ 	④ 	⑤ 	⑥  (This manual)	⑦ 

### 1 Method of attaching the adaptor


#### Attach the adaptor

Attach the adaptor in the installation box ① by the PCB supports.  
(PCB supports are accessories of adaptor.)

- Detach the aluminum tapes of the installation box ① to insert the PCB

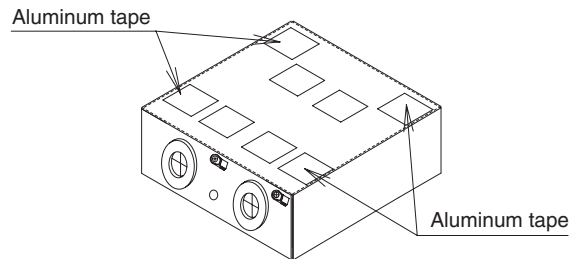


- Connect wires with the adaptor before attaching to the installation box ①.
- Low voltage wires and high voltage wires should be kept space at least 50 mm from each other.

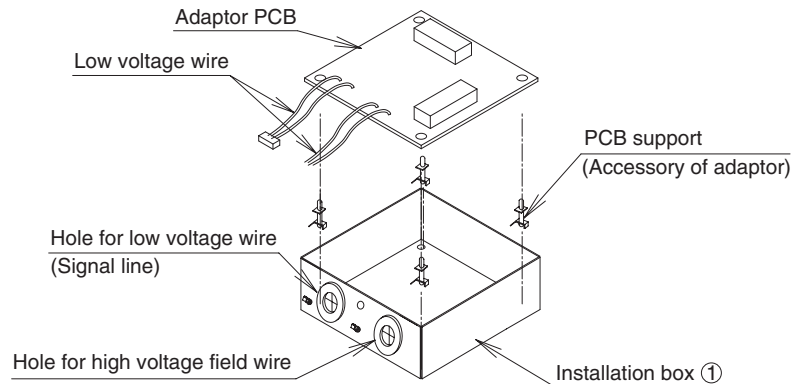


**Attach the lid of installation box**

Attach the lid of installation box ② to indoor unit with two screws. If two adaptors are installed, the second adaptor is attached to side of first one.

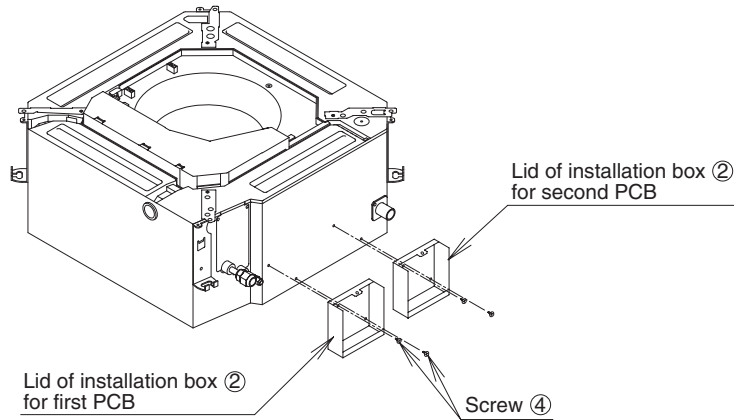


**Attach the installation box**

Attach the installation box ① into the lid of installation box ② with the screw.

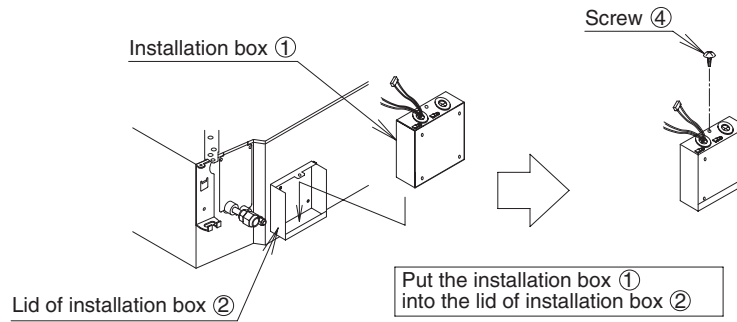

**2 Method of wiring processing**

- Connect wires with the control box. (Refer to the installation manual attached to the adaptor.)
- After connecting wires with the control box, clamp wires by using the cord stickers ⑤ and the clamp ③ as shown in the below drawing.

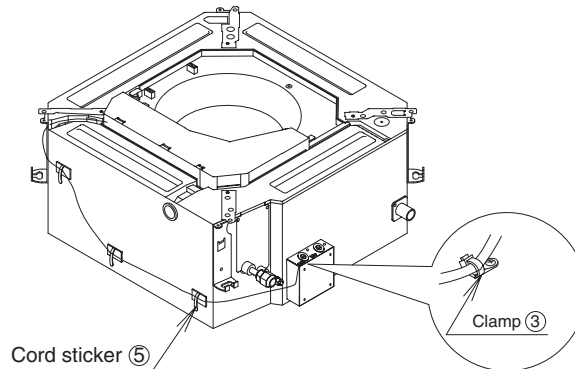






## 13.11 <KRCS01-4B> Remote Sensor

### Notes

- Please check applicable kit model name by catalog etc.
- When installed on SkyAir Round-flow type models, the dehumidification by detection of humidity does not operate.

### Accessories

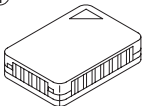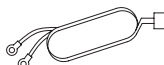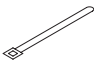Check the following accessories.

Name	Remote sensor (sensor box)	Extension cable (2-core, 12m)	Clamp	Installation manual (this drawing)	Mounting screw (M4x16)
Shape	① 	② 	③ 	④ 	⑤ 
Quantity	x 1	x 1	x 2	x 1	x 2

### ① Mounting


#### 1) Selection of mounting location.

The thermistor for temperature detection is incorporated into the remote sensor. Select the mounting location taking the following cautions into account.

- ① Where the average temperature of an air conditioned room can be detected.
- ② Where it is not exposed to the direct sunlight.
- ③ Where it is not influenced by other heat sources.
- ④ Where it is not exposed to the direct discharge air from the air conditioner.
- ⑤ Where it is not exposed to the outdoor air infiltrated into the room by opening the door.

#### 2) Mounting

- Remove the cover of the sensor box.

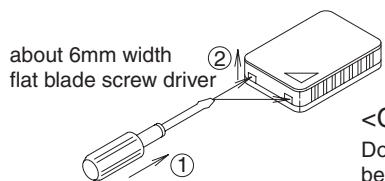


- ① Insert a flat blade screw driver into the sensor box concave part (2 locations).
- ② Remove the cover pushing up the nail to the cover of the sensor box.


#### <Cautions>

Do not push the nail powerfully with a narrow flat blade screw driver, because you may break off the nail.

(a) When mounting on the wall

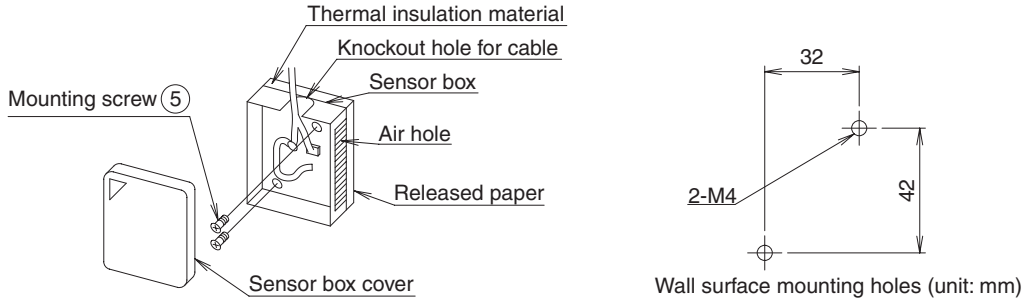


- Break open the knockout hole in the sensor box with a nipper or a similar tool. Pass the extension wires through the hole and fasten the wires to the terminals with screws.
- To avoid tensile force on the terminals, pass the attached clamp through the holes shown in the below right figure and tighten the extension cable with the attached clamp at the sheathed part. (The knot must come to the box inside.)

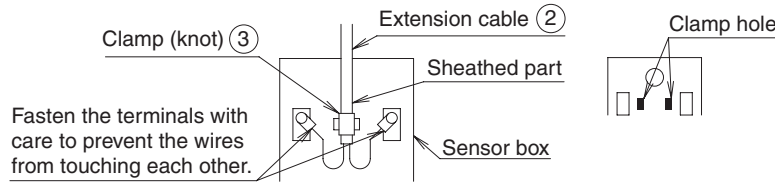


- Screw the sensor box securely to the wall surface with screws M4x16 (2 places).  
If the sensor box cannot be screwed to wall surface, tear off the released paper and mount it on the wall surface.

(b) For embedded wiring

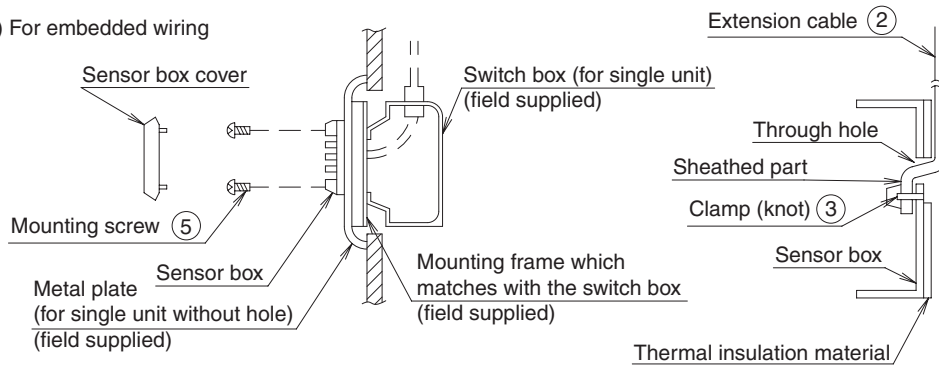

- Pass the extension cable through the switch box cable hole and carry out the wiring.
- Pass the attached clamp through the clamp holes and tighten the extension cable at the sheathed part as shown in the upper right figure.
- Tap M4 screw holes in the metal plate (field supplied) as shown in the right drawing and mount the switch box on the metal plate.

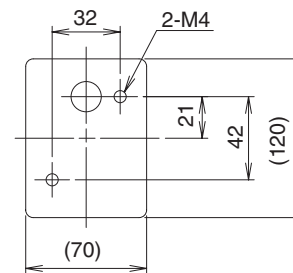

Holes to be tapped in the metal plate on site (unit: mm)

<Cautions>

- When wiring the extension cable, the air holes will not be blocked.
- When the extension cable is longer than necessary, cut it to the appropriate length, peel the insulation, attach the round crimp terminal for M3 (field supplied) and carry out the wiring. The length of insulation to be peeled off is as shown. (Work carefully so that the connector side may not be cut.)



## 2 Wiring method

Connect the extension cable connector side to the indoor unit PCB (printed circuit board)  
For connection to the indoor unit, follow the procedure shown below.


### ⚠ Caution

- 1) Make sure to turn off the power supply before starting the wiring work and do not turn on until all the work is completed.  
Read also the installation manual and the wiring diagram of the indoor unit when carrying out the work.
- 2) When wiring the extension cable, do not pass where the extension cable may be affected by the power line or noise.
- 3) Make sure to securely connect the connectors.  
Defective connection may result in incorrect detection of room temperature or malfunction.
- 4) Do not splice wires.
- 5) Since the connector marking of the thermistor for detection of inlet air temperature differ depending on the indoor unit type, make sure to check the indoor unit wiring diagram and follow it correctly.
- 6) Lay and clamp the extension cable inside the indoor unit switch box just like the low voltage line (cord for remote controller).  
And do not pass where the extension cable inside the indoor unit switch box may be affected by the power line (cord for the indoor unit and the other electric line).

### <Procedure>

- 1) When wiring to the indoor unit PCB, remove the existing thermistor (for detection of inlet air temperature) and then connect the extension cable.  
When doing this work, make sure to check the symbol of connecting address on the PCB whether it is correct or not referring to the wiring diagram.

<For SkyAir and VRV>

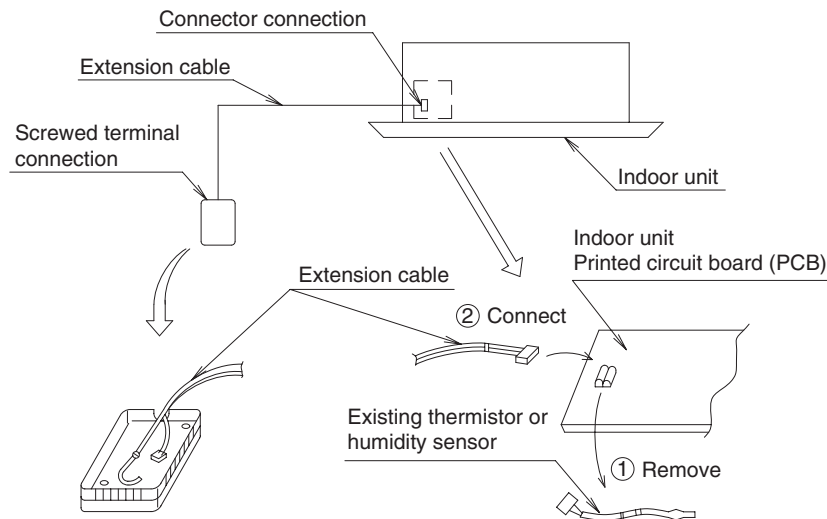

- 2) Lay and clamp the extension cable inside the indoor unit switch box just like the existing thermistor.  
When doing this work, keep a certain distance between the high voltage wiring and the low voltage wiring to avoid error of sensor.  
Provide protection of the existing cable for thermistor without affecting other components.
- 3) Fit the sensor box cover into the sensor box.




## 3 Operation test after mounting the sensor

Conduct cooling and heating operation test after the sensor is mounted and the wiring is completed.



## 13.12 <KPW937E4> Air Direction Adjustment Grille

**Component parts** Be sure to check that the following parts are included before installation.

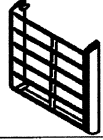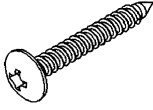Name	① Air direction adjustment grille	② Screw	③ Installation manual
Shape			
Q'ty	1 pc.	4 pcs.	1 sheet (this sheet)

### Selection of installation site

- Use the air direction adjustment grille for installation at a location that fits the following conditions.
  1. When installing the outdoor unit near the neighbouring house.
  2. When changing the airflow direction to prevent exhaust blowing directly onto passersby or garden plants.

### Cautions for usage


- Be sure to perform the following as installation precautions to ensure correct and safe use of the air direction adjustment grille.
  1. Be sure to stop the operation before installation.
  2. Avoid short-circuits during installation.
  3. When using the unit in areas with snow, install the grille to create a left-right or downward airflow. Do not install the grille to create an upward airflow to prevent snow accumulating in the air outlet of the outdoor unit as this may damage the unit.
  4. Be careful of foreign substances such as dead leaves, which may accumulate on the air outlet after installing the grille to create an upward airflow.
  5. Do not use screws other than those provided. Tighten the screws securely without any looseness.

### Installation of air direction adjustment grille

- Pitch of the installation screws for the air direction adjustment grille (①) is 434mm in the vertical and horizontal directions.
- Installation can be performed in 4 directions: top, bottom, left and right.
- Temporarily secure the air direction adjustment grille (①) using 4 screws (②), check the installation angle, and then tighten the screws.


### <Steel wire outlet grille>

- 1 Remove the 4 outlet grille fixing screws.

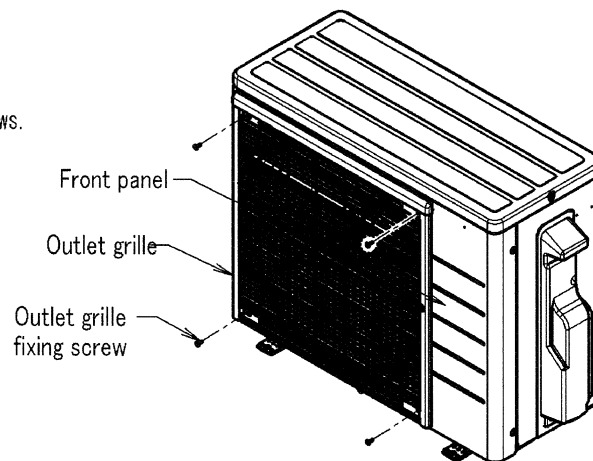


2 Install the air direction adjustment grille(①) attached on the front panel using 4 screws(②).

※ Attach the air direction adjustment grille on top of the outlet grille using the same screws.

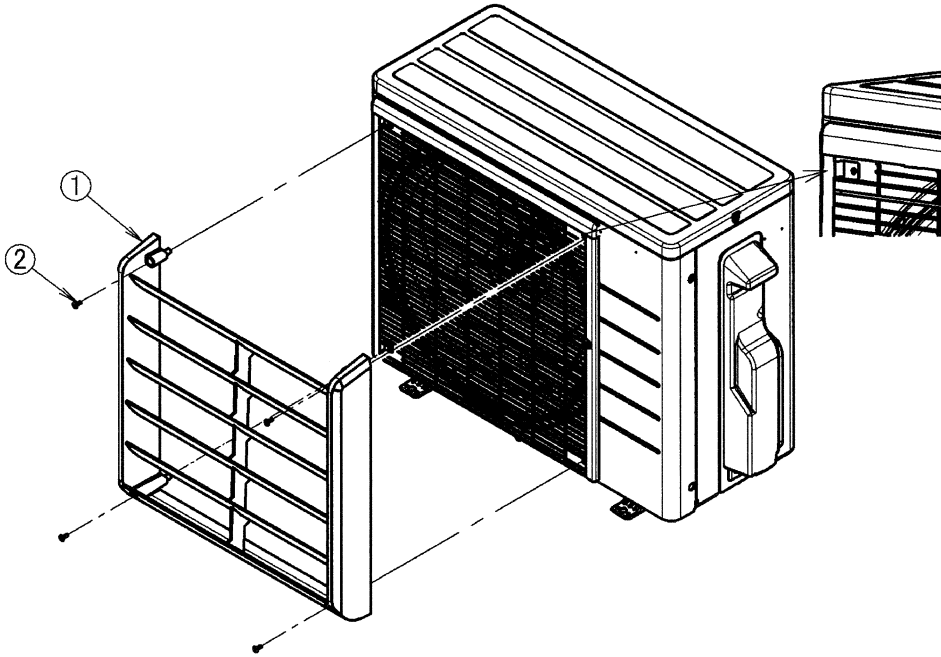

3 Appearance of the air direction adjustment panel following installation.  
(When installed with the louvers facing up.)

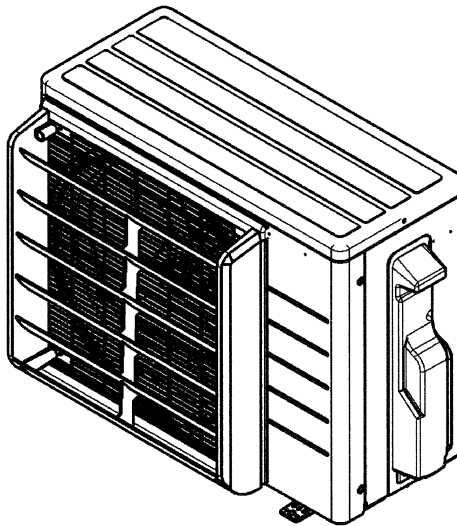





3P397163-1

### 13.13 <KPW063A4> Air Direction Adjustment Grille

**Component parts** Be sure to check that the following parts are included before installation.

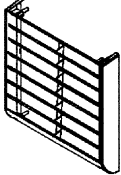Component parts

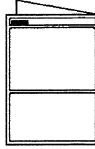Name	① Air direction adjustment grille	② Screw	③ Spacer	④ Installation Manual
Illustration				
Quantity	1 pcs.	4 pcs.	4 pcs.	1 sheet(this sheet)

**Selection of installation site**


Install only on an outdoor unit in a location that satisfies the following conditions:

- When installing the outdoor unit near the neighbouring house,
- Where you wish to change the exhaust airflow direction because the outdoor unit has been installed facing a road, so that passing people are not exposed to its exhaust air
- When changing the airflow direction to prevent exhaust blowing directly onto passersby or garden plants.

**Cautions for usage**

- Be sure to perform the following as installation precautions to ensure correct and safe use of the air direction adjustment grille.
  1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance purposes.
  2. When installing the product in a location in which it may be exposed to strong winds, install a rollover prevention bracket (sold separately) at the same time.
  3. Tighten screws securely. Failure to do so may result in vibration.

#### ① Verifying the amount of space required for installation

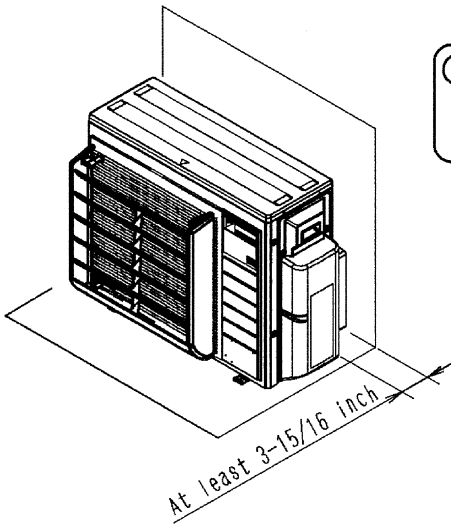


**⚠ Caution**

Leave at least 3-15/16 inch between the rear of the outdoor unit and any obstructions(walls, etc.).

## 2 Installation of air direction adjustment grille

### ⚠ Caution



Install the air direction adjustment grille on top of the outlet grille.  
Be sure to install the outlet grille as installing only the air direction adjustment grille would allow a person to reach his or her hand into the outdoor unit far enough to come into contact with the rotating fan.

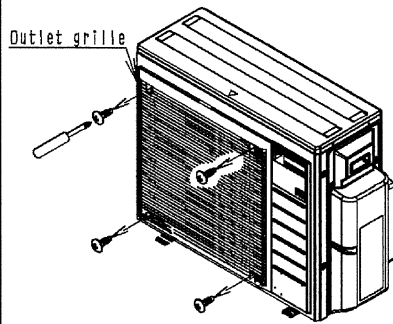


- (1) Remove the 4 outlet grille fixing screws.
  - (2) Referring to the following illustration, attach the outlet grille and air direction adjustment grille, taking care to align them with the air outlet direction.
- Attach the air direction adjustment grille on top of the outlet grille using the same screws.

Upward facing

Downward facing

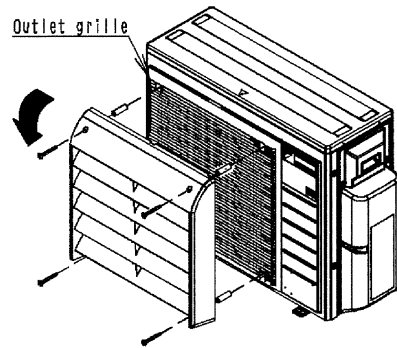
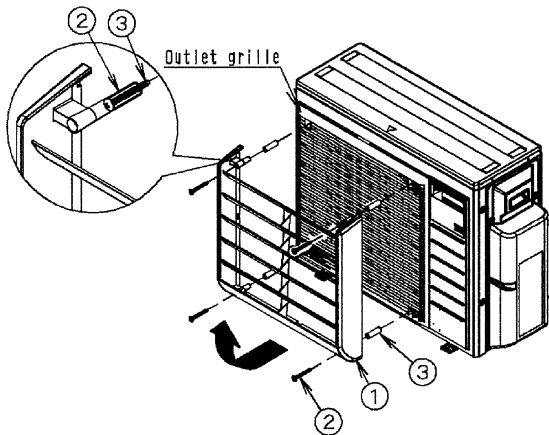


Appearance of the air direction adjustment grille after installation  
(when installed with the louvers facing up)

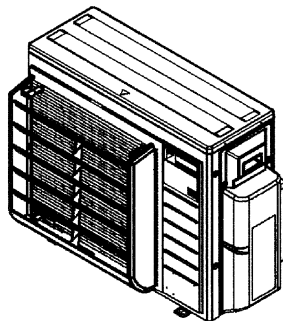

### 13.14 <KKG067A41> Back Protection Wire Net


**Component parts**

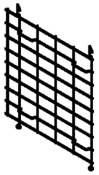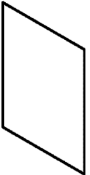Name	① Protection net	② Installation manual
Shape		
Q'ty	1pc	1sheet (this sheet)

**Caution**

Be sure to wear protection gloves when performing installation work as the fins on the heat exchanger may cause injury.


**Part names**

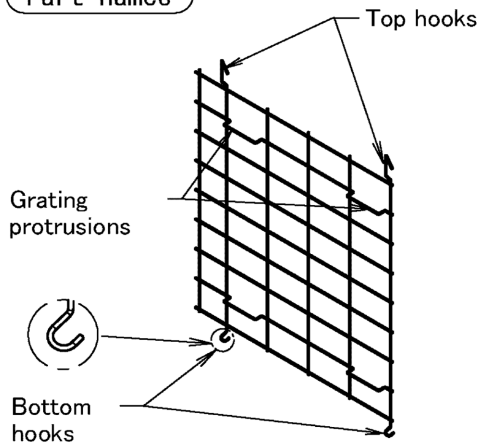

**1** Verify the location at which the protection net (①) is to be installed.


Attach the protection net (①) so that the vertical grating is aligned with the outside edge of the installation leg on the right side of the outdoor unit.

Positioning line when installing the protection net (①)

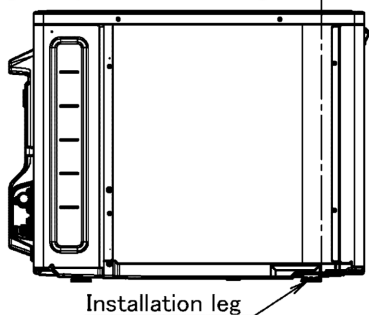


**2** Attach the protection net (①)

Orient the protection net (①) so that the horizontal grating protrusions are facing the heat exchanger and insert the two bottom hooks between the heat exchanger and the bottom frame. Insert the two top hooks between the heat exchanger and the top panel while flexing the protection net (①).  
 ※ Be careful not to install the protection net upside down.  
 Be careful not to damage the heat exchanger's cooling tubes.


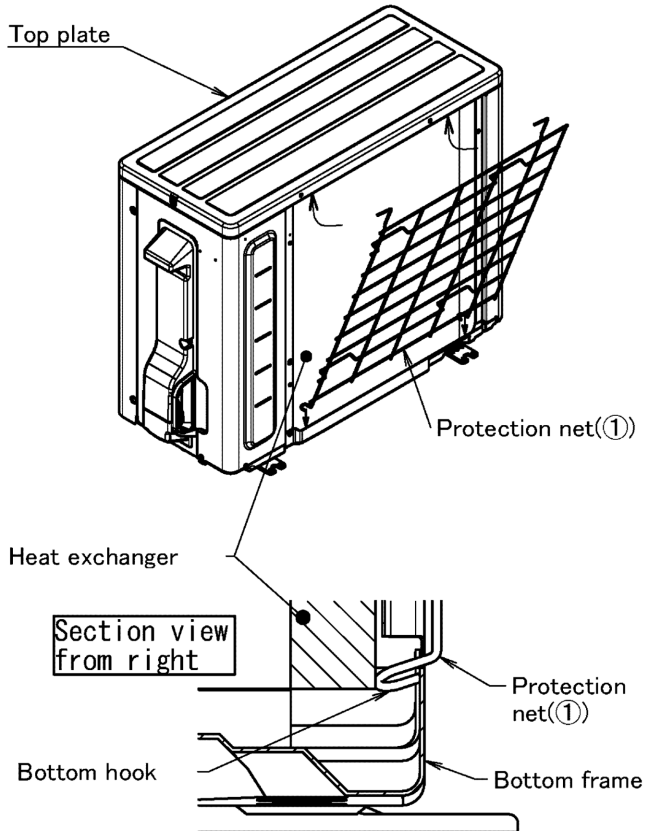


**3** Appearance of the protection net (①) following installation

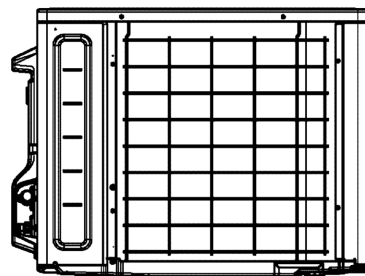

### 13.15 <KKG063A42> Back Protection Wire Net


#### Component parts

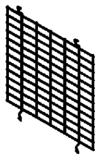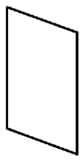Name	① Protection net	② Installation manual
Shape		
Q'ty	1pc.	1sheet (this sheet)

#### Caution

Be sure to wear protection gloves when performing installation work as the fins on the heat exchanger may cause injury.


#### Part names

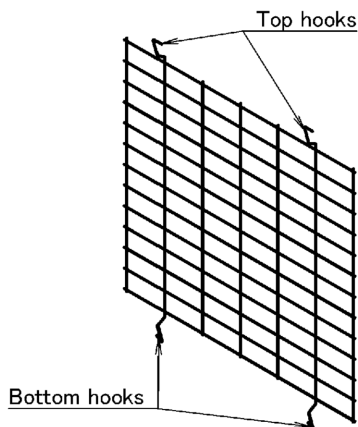

- 1 Verify the location at which the protection net(①) is to be installed.

Attach the protection net(①) so that the vertical grating is aligned with the edge of the installation leg on the right side of the outdoor unit.

Positioning line when installing the protection net(①)

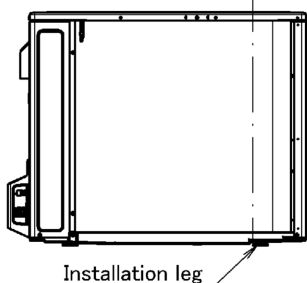


- 2 Attach the protection net(①)


Orient the protection net(①) so that top and bottom hooks are facing the heat exchanger and insert the two bottom hooks between the heat exchanger and the bottom frame.

Insert the two top hooks between the heat exchanger and the top panel while flexing the protection net(①).

※ Be careful not to damage the heat exchanger's cooling tubes.

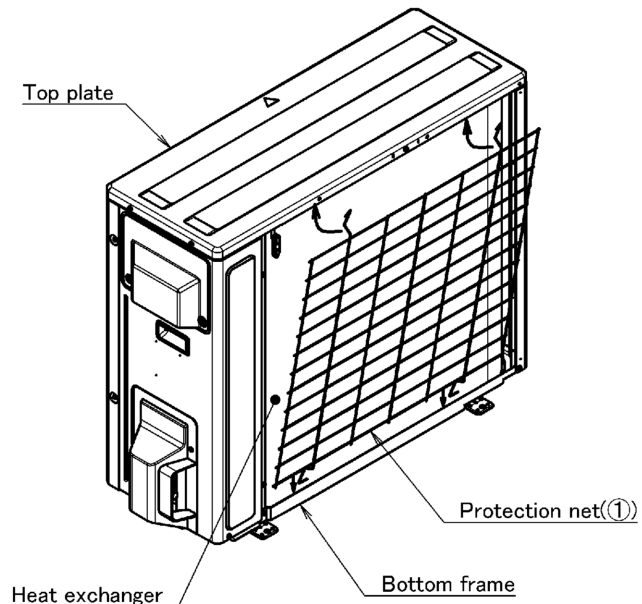

- 3 Appearance of the protection net(①) following installation

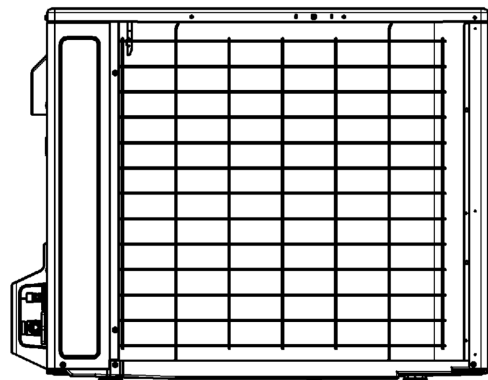




## 13.16 <FTDBHMS, FTDBHML, KEH067A41E, KEH063A4E> Drain Pan Heater

### Safety Considerations for Installation of Drain Pan Heater

Read these **Safety Considerations** carefully before installing the drain pan heater. After completing the installation, check if the unit operates properly during the start-up operation.

Meaning of **DANGER**, **WARNING** and **CAUTION** symbols.

 <b>DANGER</b>	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.	 <b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 <b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.		

- Inform users that they should store this installation manual for future reference.
- After completing the installation, make sure that the unit operates properly during the startup operation.
- All phases of the field-installation, including, but not limited to, electrical, piping, and safety, must be done in accordance with manufacturer's instructions and must comply with national, state, provincial, and local codes.
- This product is a heater designed to melt snow that is blown into the product from the outside to prevent the drain pan of the outdoor unit from freezing.
- Install the product with a snow-break hood on a high stand if this product is used in heavy snow areas.

#### **DANGER**

- **Do not touch the heater unit without wearing gloves.**  
The temperature of the heater unit will become high when the heater is turned on. Touching the heater unit with bare hands will result in burns or injury.








#### **WARNING**

- **Request the dealer or an authorized technician to install the product.**  
Improper installation of the product could result in water leakage, an electric shock, or fire.
- **The product must be installed according to the instructions given in this manual.**  
The incomplete installation of the product could result in water leakage, an electric shock, or fire.
- **Use the supplied or specified installation parts.**  
Use of other parts could result in the unit becoming loose and falling, water leakage, electric shock, or fire.
- **Turn off the power supply at the time of installation.**  
Touching any electrical parts may with the power supply turned on could result in electric shock.
- **Use specified wires. Connect and fix the wires so that the wires will not put improper force on the terminal junctions.**  
Wires connected or fixed improperly could result in terminal overheating, an electric shock, or fire.
- **When wiring and connecting the indoor and outdoor units, carefully arrange the wiring so that they will not put improper force on the structures.**  
Install covers over the wires. Incomplete cover installation could result in terminal overheating, an electric shock, or fire.

#### **CAUTION**

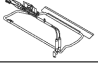- **Wear protective gloves at the time of installation.**  
Touching the suction mouth or aluminum fin of the outdoor unit may result in injury.
- **Do not install the product in places where there is danger of exposure to inflammable gas leakage.**  
If the gas leaks and builds up around the unit, it may catch fire.
- **Do not grab the top plate of the outdoor unit carelessly when removing the top plate.**  
The sharp edge of the top plate may cause injury.
- **Do not install the outdoor unit in places where small animals may nest in the outdoor unit.**  
If small animals intrude and touch the internal parts of the outdoor unit, the outdoor unit may malfunction, generate smoke, or ignite. Advise the user to keep the place clean.
- **Do not touch the heater unit with bare hands.**  
The temperature of the heater unit will become high when the heater is turned on. Touching the heater unit with bare hands may result in burns or injury.

## Accessories

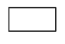		KEH067A41E FTDBHMS	KEH063A4E FTDBHML		KEH067A41E FTDBHMS	KEH063A4E FTDBHML	
(A) Drain pan heater		1	1	(E) Installation manual (multi-language)		1	1
(B) M4 piercing screw		3	6	(F) Electric wiring diagram label		1	1
(C) Binding band		1	1	(G) Information label		1	1
(D) Sealing material		1	2	Appearance of the (A) drain pan heater may differ from some models.			

## Tools Required for Installation

- Electric drill
- $\phi 1/8$  inch ( $\phi 3.2$ mm) drill
- Phillips screwdriver
- Nippers

## Installation Procedure (1)

### ⚠ WARNING

- Be sure to check that the power supply of the product is turned off.

Some stages in the installation procedure differ by model of outdoor unit. Refer to the instructions for the relevant model.

**Type A models** : RX09/12, RXN09/12, RXL09/12

**Type B models** : RX15/18/24, RXN18/24, RXL15

**Type C models** : 2/3/4MXS, 2/3MXL, RX30/36

### 1. Remove each component of the outdoor unit.

- 1) Remove the top plate.
- 2) Affix the (F) electric wiring diagram label where there is enough space available on the back of the top plate.
- 3) Remove the screws from the protective wire mesh if one is fitted. (2 screws)  
(For type B and C models only)
- 4) Remove the front plate.
- 5) Remove the anti-drip cover.  
(For type B and C models only)
- 6) Affix the (G) information label near the manufacture's label.


- The appearance of the outdoor unit and the number of screws may differ from some models.

- Screw types for each component are indicated as below.


No icon: Hexagon tapping screw

△ : Truss head tapping screw


#### For type A models

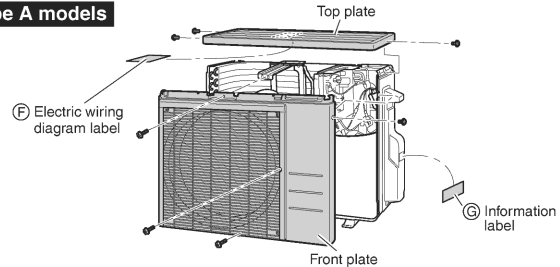

#### For type B and C models

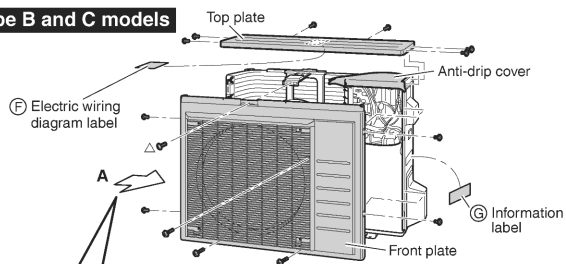

#### View A

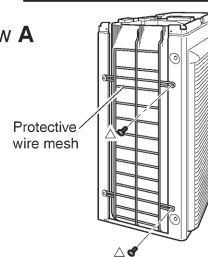




## Installation Procedure (2)

### 2. Remove the fan motor base.

- 1) Remove the fixing screws at the lower section of the fan motor base. (2 screws)
- 2) Remove the fan motor base together with the propeller fan and ensure that stress is not placed on the propeller fan when placing them aside.
  - Do not remove the fan motor harness.
  - Ensure that the fan motor harness does not come into contact with the edges of the heat exchanger or other components.

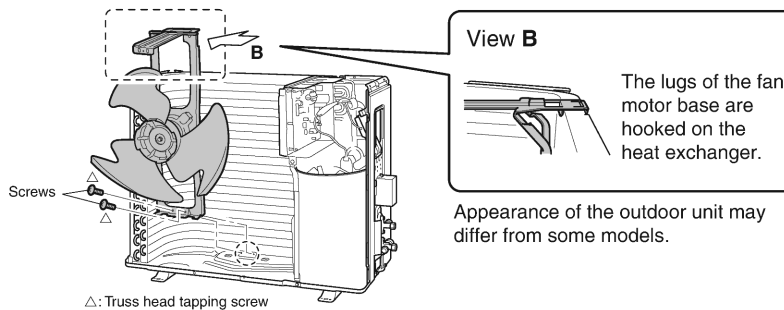

### 3. Install the drain pan heater.

#### ⚠ CAUTION

- When drilling a hole, be careful not to damage the soundproofing material and other components on the back side.


For details, refer to “Installation Procedure (3)” also.

- 1) Remove 1 screw from the bottom frame so that the plates of the (A) drain pan heater can be inserted under the heat exchanger with ease.
- 2) Lift up the heat exchanger, and insert the plates of the (A) drain pan heater under the heat exchanger.
  - The ground plate of the (A) drain pan heater should be installed so that, in type A models, it firmly adheres to the bottom frame and, in type B and C models, it firmly adheres to the partition plate.
  - Install the (A) drain pan heater in a position where it does not come into contact with the fan motor base.
- 3) If there are no holes, drill  $\phi 1/8$  inch ( $\phi 3.2$ mm) holes in the bottom frame and the partition plate to fix the (A) drain pan heater.
  - Place the actual components to ensure positioning is correct before drilling holes.
  - The holes can be made with the included piercing-screw as well.
- 4) Fix the (A) drain pan heater with the (B) piercing screws.
- 5) Reattach the screw that was removed from the bottom frame.

## Installation Procedure (3)


### For type A models

Location and number of holes  
Bottom frame: 2

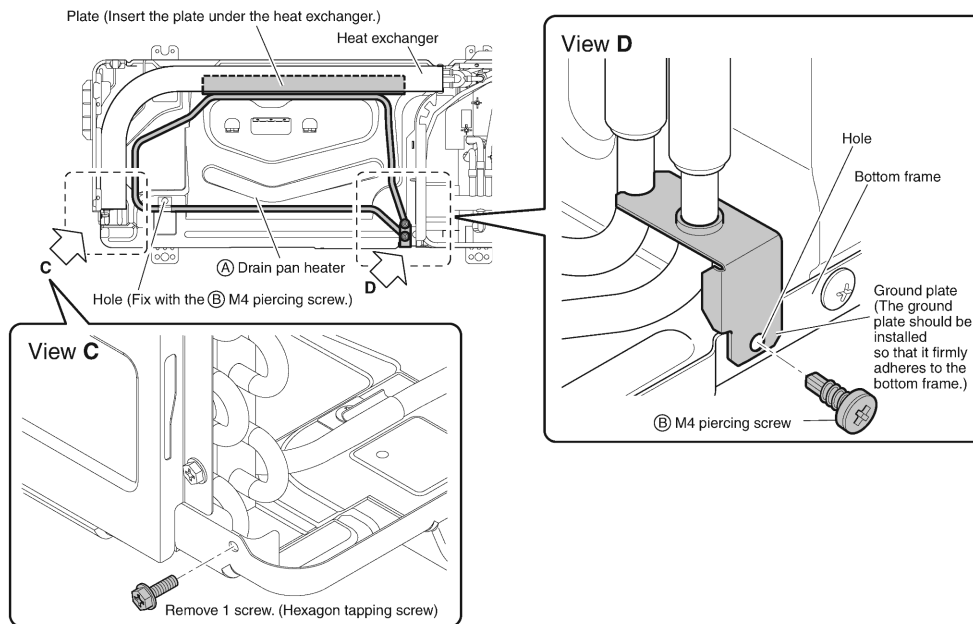

### For type B and C models

Location and number of holes  
Bottom frame: 1  
Partition plate: 2

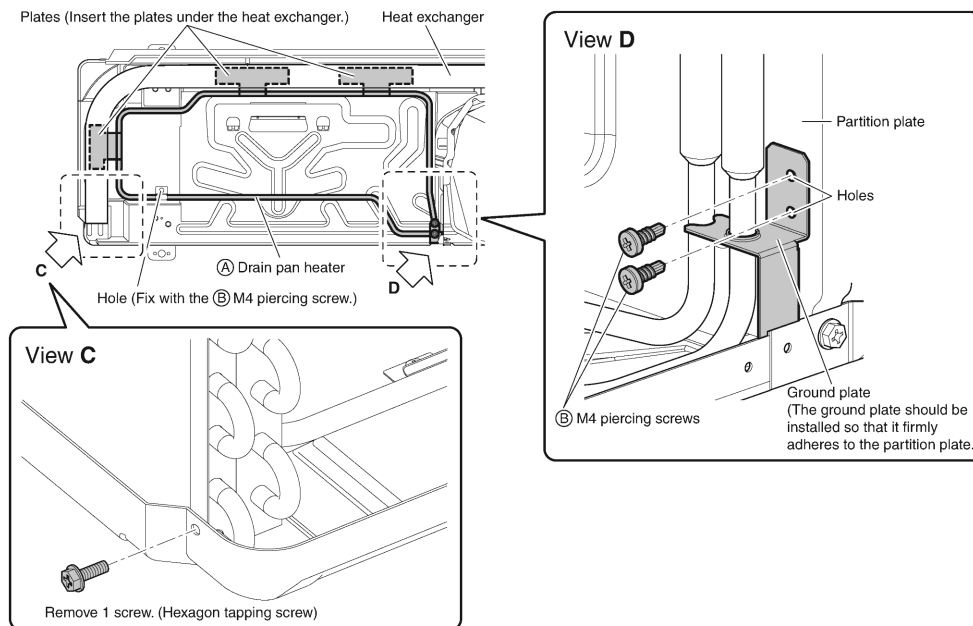

## Installation Procedure (4)


### 4. Route the harnesses.

#### ⚠ WARNING

- When drilling a hole, be careful not to damage the soundproofing material and other components on the back side.


#### For type A models

- 1) If there is no hole, drill a  $\phi 1/8$  inch ( $\phi 3.2\text{mm}$ ) hole in the partition plate. (1 location)
- 2) Fix in place the binding band attached to the (A) drain pan heater harness by screwing the (B) M4 piercing screw into the hole. (1 location)
- 3) Install the fan motor base.
  - Be careful not to confuse screw types. Refer to "Installation Procedure (2)".
- 4) Place the (A) drain pan heater harness on top of the fan motor harness, and fix it in place with the (D) sealing material.

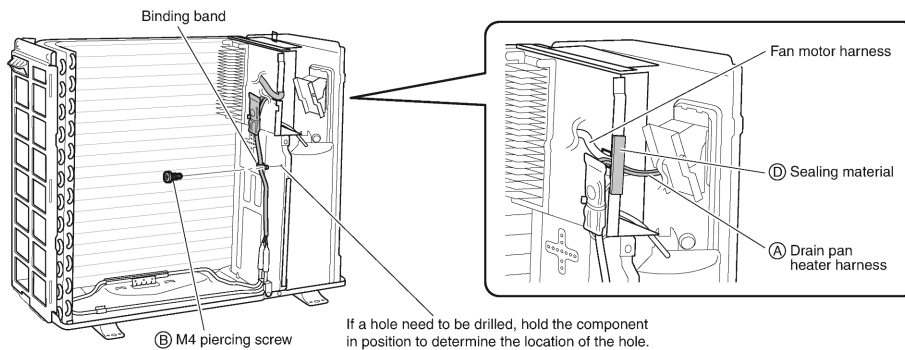

#### For type B and C models

- 1) If there are no holes, drill  $\phi 1/8$  inch ( $\phi 3.2\text{mm}$ ) holes in the partition plate. (3 locations)
- 2) Fix the (A) drain pan heater harness in place by screwing the (B) M4 piercing screws into the holes. (3 locations)
- 3) Install the fan motor base.
  - Be careful not to confuse screw types. Refer to "Installation Procedure (2)".
- 4) Trim the electrical wiring box with nippers at the locations shown in the figures, then cover the trimmed edges with the (D) sealing material.
- 5) Insert the (A) drain pan heater harness into the space that was trimmed, and fix it in place using the (D) sealing material.

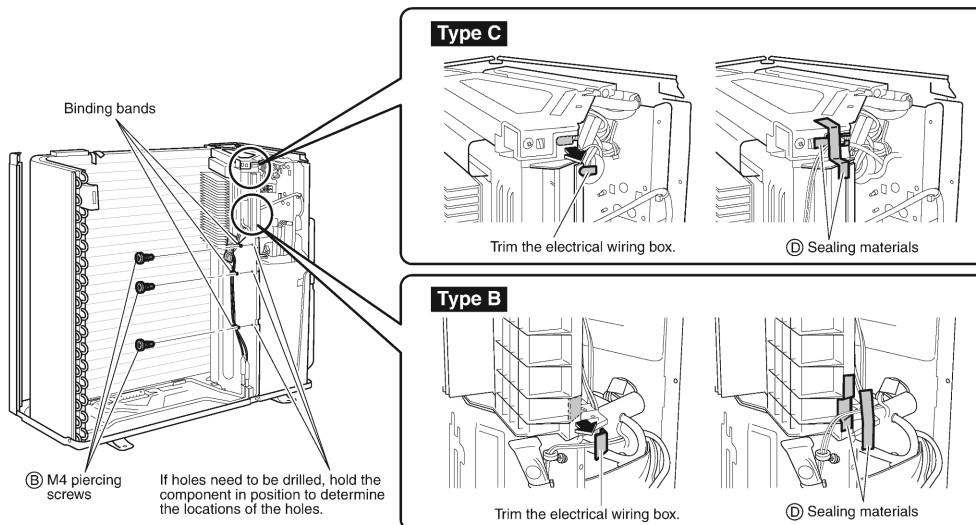


## Installation Procedure (5)


### 5. Connect the faston terminals of the drain pan heater to the terminal block of the outdoor unit.

- 1) Connect the thermostat-side terminal (black harness) to the leftmost terminal and the heater-side terminal (white harness) to the second leftmost terminal.
  - For type C models, connect to the last terminal block of the terminal blocks in use.
- 2) Bundle the (A) drain pan heater harness so that there is no slack, and secure it with the (C) binding band. (1 location)
  - Cut the tip of the (C) binding band.


#### For type A models

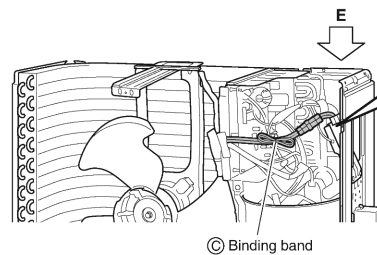


#### View E

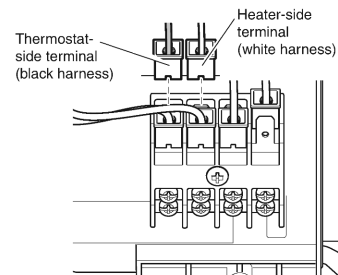



#### For type B models

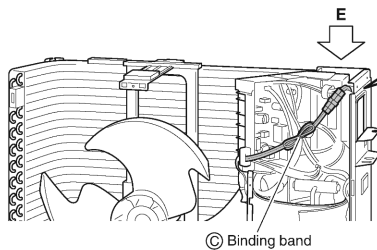

#### View E

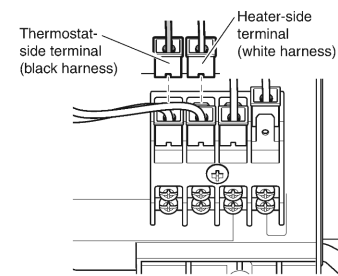

#### For type C models

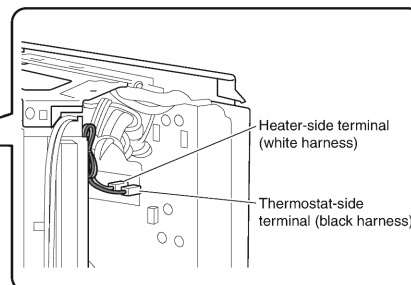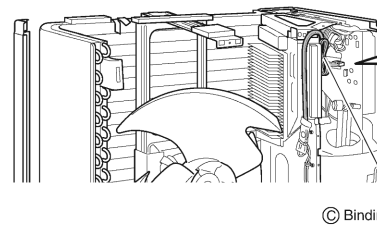

### 6. Install each component to the original position.

- Be careful not to confuse screw types. Refer to "Installation Procedure (1)".
- 1) Install the front plate.
  - 2) Install the anti-drip cover.  
(For type B and C models only)
  - 3) Install the top plate.

### 13.17 <KPS067A41> Snow Hood (Intake Side Plate)

**Parts** Before assembling the product, verify that all of the following parts have been included:

Name	Side plate (left)	Side plate (right)	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration							
Quantity	1	1	1	1	8	1	1 (this document)

**⚠ Caution** Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:

1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

**⚠ Caution . . . .** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practises.

#### 1 Installing the snow hood (intake side plate)

**1 Attach the side plate (left) ①**

1. Remove the two screws (marked "☆ 1" in the figure) that hold the outdoor unit's top plate, bottom frame, and front plate in place and use them to attach the side plate (left) ①.

**When using with KPS067A42 (snow hood [intake rear plate])**


Intake rear plate (left)

Attach the side plate (left) ① along with the intake rear plate (left) using the same screws, with the side plate (left) ① positioned above the intake rear plate (left). Refer to the figure to the left.

**2 Attach the side plate (right) ②**


1. Remove the screw (marked "☆ 2" in the figure) that hold the outdoor unit's top plate, and front plate in place and Use the ⑥ piercing screws supplied with the screws and kit that were removed, install a side plate (right) ②.

### 3 Attach the top plate ③ and front plate ④.

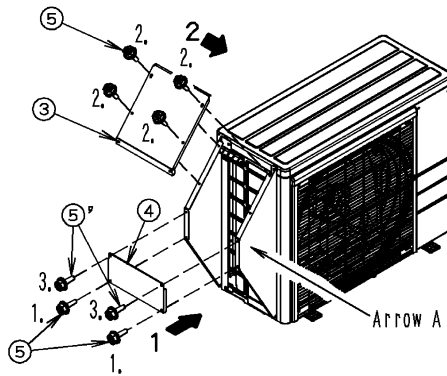


1. Aligning the creases on the left and right sides of the front plate ④ with the outer surfaces of the side plate (left) ① and the side plate (right) ②, temporarily secure the front plate ④ in place with the 2 screws ⑤'.
2. Temporarily secure the top plate ③ from above the front plate ④ with the 4 screws ⑤.
3. Temporarily secure the top plate ③ and the front plate ④ with the 2 screws ⑤'.


\*The side plate (left) (1), side plate (right) ②, top plate ③, and front plate ④ should be positioned as shown in the following figure:

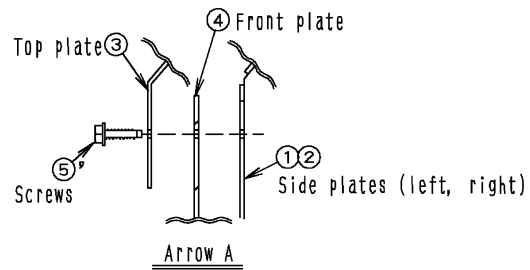

4. Securely tighten the 8 screws ⑤ with which the plates were temporarily secured in steps 1), 2), and 3).

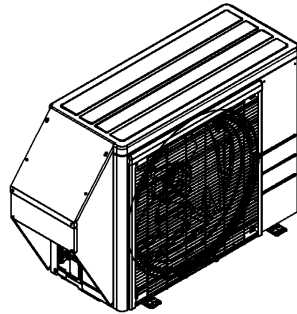

### 2 Appearance of the snow hood (intake side plate) following installation

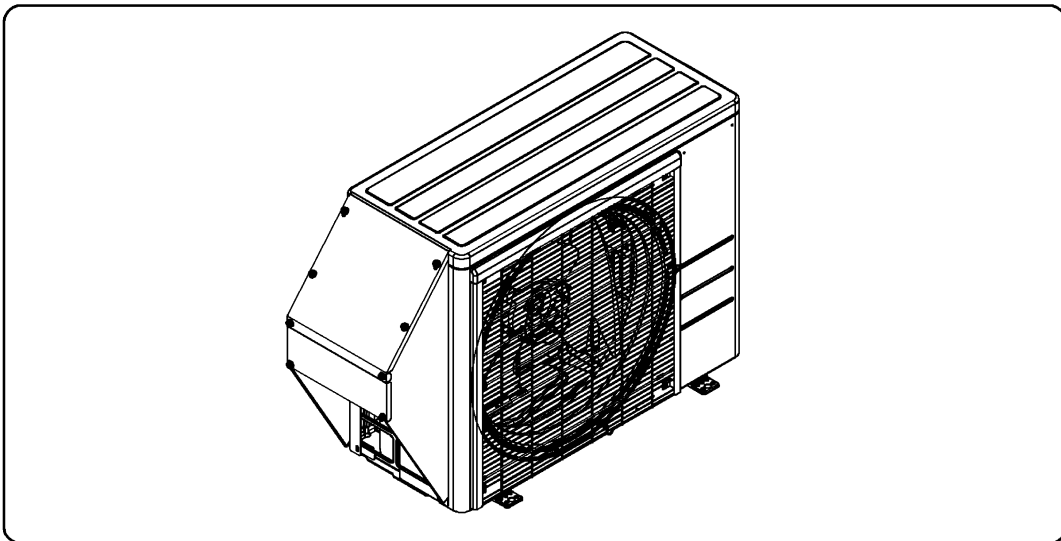

3P436077-1

### 13.18 <KPS067A42> Snow Hood (Intake Rear Plate)

**Parts** Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration	① (Left) 	② (Right) 	③ 	④ 	⑤ 	⑥ 	⑦ 
Quantity	1	1	1	1	8	2	1 (this document)

**⚠ Caution** Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:

1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

**⚠ Caution . . . .**  
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

#### 1 Installing the snow hood (intake rear plate)

**1 Attach the side panel (left) ①.**

1. Remove the 2 screws (marked "★1" in the figure) that hold the outdoor unit's top plate, left side plate, and bottom frame and use them to attach the side plate (left) ①.

**◆When using with KPS067A41 (snow hood [intake side plate])**

Attach the side plate (left) ① along with the intake side plate (left) using the same screws, with the side plate (left) ① positioned below the intake side plate (left). Refer to the figure to the left.


**2 Attach the side plate (right) ②.**

1. Attach by tightening the 1 piercing screw ⑥ into the dowel hole in the right side plate (area A) and the 1 piercing screw ⑥ into the screw hole in the bottom frame (area B).

◆If using an electric screwdriver, be careful not to overtighten the screws.


The fixed location

### 3 Attach the top plate ③ and the front plate ④.

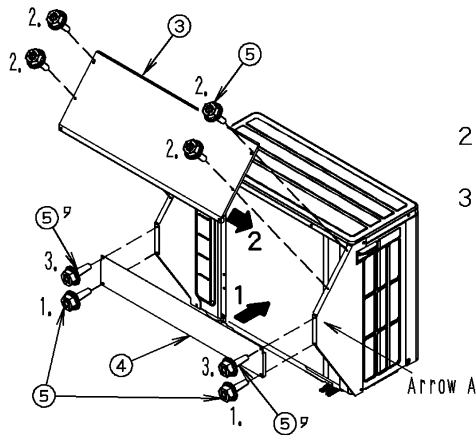


1. Aligning the creases on the left and right sides of the front plate ④ with the outer surfaces of the side plate (left) ① and side plate (right) ②, temporarily secure the front plate ④ in place with the 2 screws ⑤.
2. Temporarily secure the top plate ③ from above the front plate ④ with the 4 screws ⑤.
3. Temporarily secure the top plate ③ and the front plate ④ with the 2 screws ⑤. (See arrow A, )


\*The side plate (left) (1), side plate (right) ②, top plate ③, and front plate ④ should be positioned as shown in the following figure:

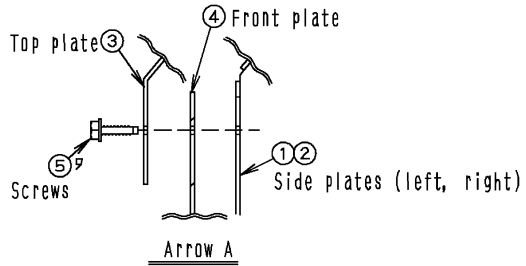

4. Securely tighten the 8 screws ⑤ with which the plates were temporarily secured in steps 1 ), 2 ), and 3 ).

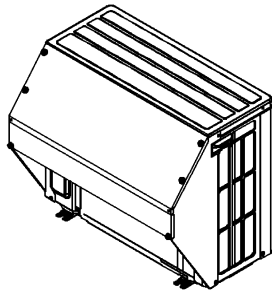

### 2 Appearance of the snow hood (intake rear plate) following installation

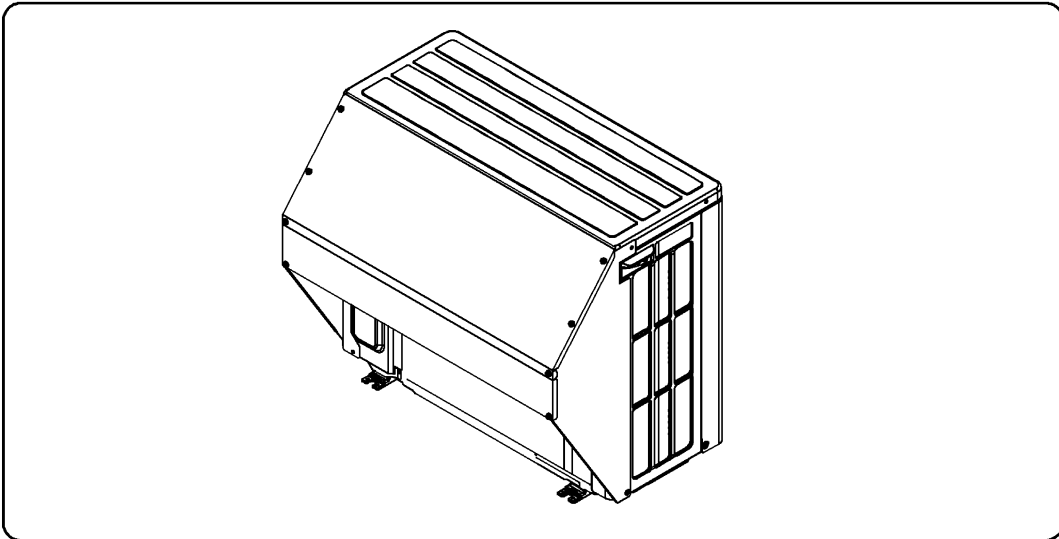

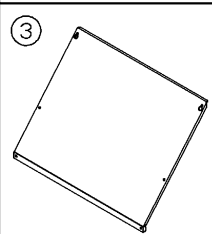

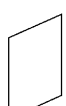


3P436078-1



### 13.19 <KPS067A44> Snow Hood (Outlet)

**Parts** Before assembling the product, verify that all of the following parts have been included:

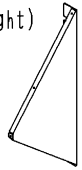Name	Side plate	Side plate	Top plate	Screws	Installation Manual
Illustration	① (Right) 	② (Left) 	③ 	④ 	⑤ 
Quantity	1	1	1	6	1 (this document)

**⚠ Caution** Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:


1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

**⚠ Caution . . . . .**  
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practises.

#### ① Installing the snow hood (outlet)


**1** Remove the discharge grille.

1. Remove the 4 screws that hold the discharge grille, then remove the discharge grille.

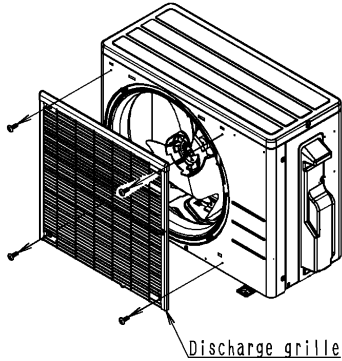


Discharge grille

**2 Attach the side plate (left) ② and side plate (right) ①.**

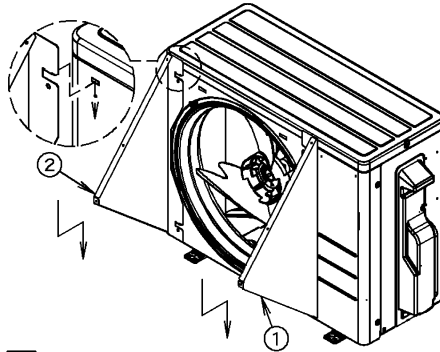


1. Insert the hooks in the side plate (right) ① and side plate (left) ② respectively into the holes provided in the front plate.

**3 Attach the discharge grille.**

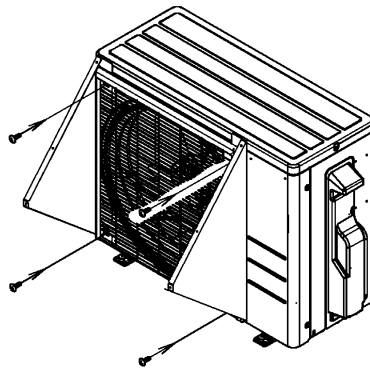

1. When installing the discharge grille removed in [1], jointly tighten the side plate (right) ① and side plate (left) ② with the 2 screws that hold the discharge grille for each plate.


**4 Attach the top plate ③**

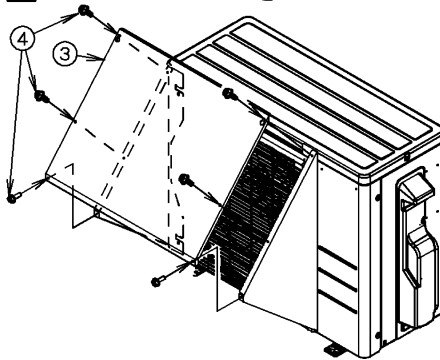

1. Install the top plate ③ using the 6 screws ④ included in the kit.

• Installation is easiest if you start with the hook slot.

**2 Appearance of the snow hood (outlet) after installation**

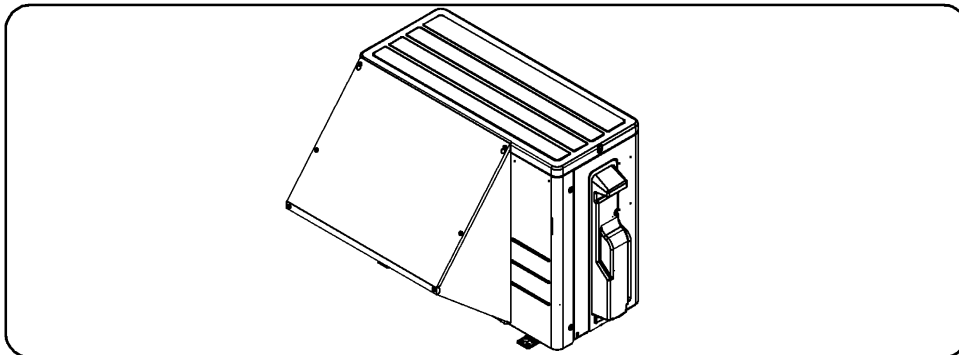

### 13.20 <KPS063A41> Snow Hood (Intake Side Plate)

**Parts** Before assembling the product, verify that all of the following parts have been included:

Name	Side plate (right)	Side plate (left)	Top plate	Front plate	Screws	Installation Manual
Illustration					 (quantity to use 14)	
Quantity	1	1	1	1	16	1 (this document)

**Caution** Read these safety considerations for installation carefully before installing the product.

● Be sure to observe the following installation precautions to ensure that the product can be used safely:

1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

**Caution** . . . . . Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practises.

#### 1 Installing the snow hood (intake side plate)

**1** Remove the protective wire mesh


1. Remove the 2 screws that hold the protective wire mesh.
2. Remove the 6 screws that hold the top plate and remove the top plate.
3. Remove the protective wire mesh, being careful of the part that is attached to the heat exchanger.
4. Attach the top plate removed in step 2 using the 6 screws removed in step 2.

**2** Attach the side plate (right) ①

1. Install the side plate (right) ① with the 2 screws that were used in the protective wire mesh that was removed in step 1.

- Use the second hook slot from the top and the 2 screw hole from the bottom.
- Installation is easiest if you start with the hook slot.


**3** Attach the side plate (left) **2**.

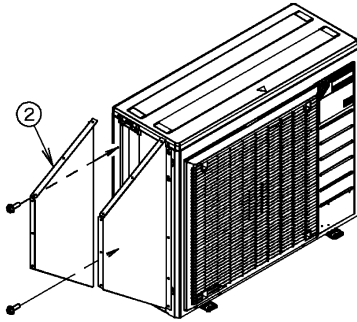

1. Install the side plate (left) **2** with the 2 screws that were used in the protective wire mesh that was removed in step **1**.


• Use the second hook slot from the top and the 2 screw hole from the bottom.  
• Installation is easiest if you start with the hook slot.

**4** Attach the front plate **4**.

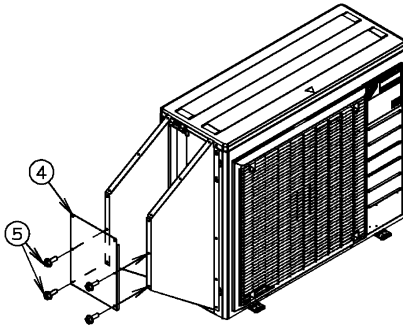


1. Temporarily secure the front plate **4** in place with the 4 screws **5**.

**5** Attach the top plate **3**.

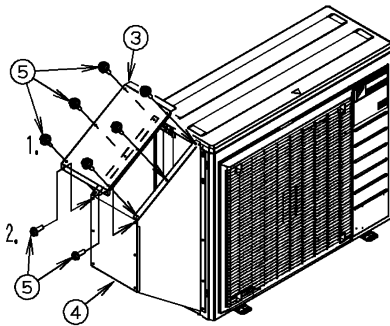

1. Attach the top plate **3** with the 6 screws **5**.
2. Temporarily secure the top plate **3** and the front plate **4** to the side plate (right) **1** and the side plate (left) **2** with the 2 screws **5**.
3. Tighten the 12 screws **5** that you used to temporarily secure parts in steps **4** and **5**.

**2** Appearance of the snow hood (intake side plate) after installation

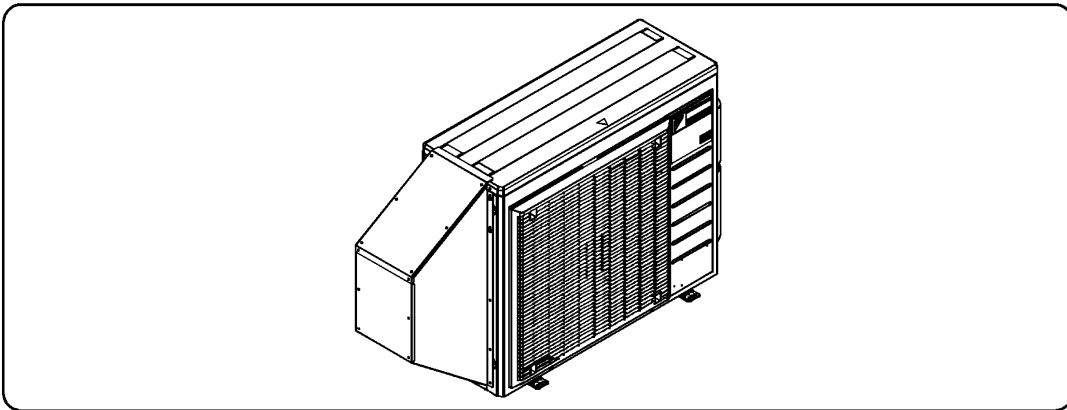

### 13.21 <KPS063A44> Snow Hood (Intake Rear Plate)

**Parts** Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration	① (Right)	② (Left)	③	④	⑤	⑥	⑦
Quantity	1	1	1	1	14	3	1 (this document)

**⚠ Caution** Read these safety considerations for installation carefully before installing the product.


● Be sure to observe the following installation precautions to ensure that the product can be used safely:

1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

**⚠ Caution . . . .**  
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practises.

#### ① Installing the snow hood (intake rear plate)


**① Attach the side plate (right) ①.**

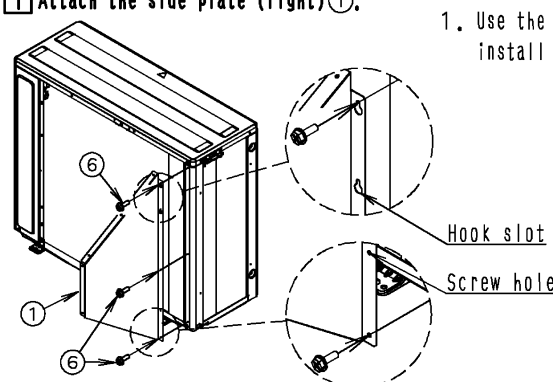


1. Use the 3 piercing screws ⑥ included in the kit to install the side plate (right) ①.

- For the hook slot, use the first hook slot from the top.
- For the screw hole, use the first screw hole from the bottom.
- Installation is easiest if you start with the hook slot.
- Align the screw installation position with the dowel hole.


**② Attach the side plate (left) ②**

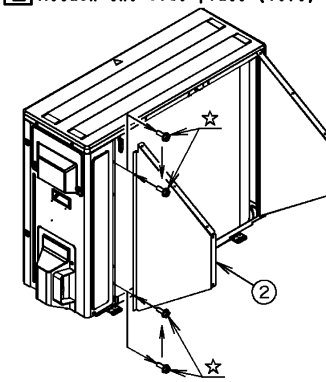


1. Remove the 2 screws (☆) that hold the heat exchanger.  
2. Install the side plate (left) ② using the 2 screws removed in step 1.

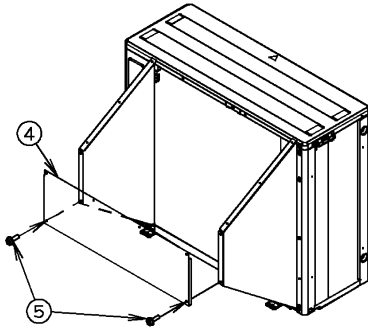**3 Attach the front plate ④**


1. Temporarily secure the front plate ④ in place with the 2 screws ⑤ included in the kit.

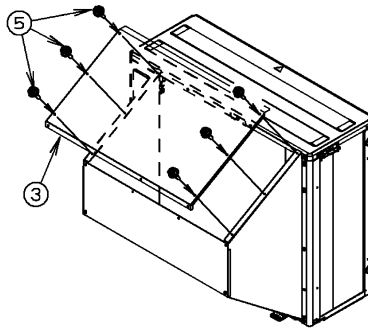**4 Attach the top plate ③**

1. Temporarily secure the top plate ③ in place with the 6 screws ⑤ included in the kit.

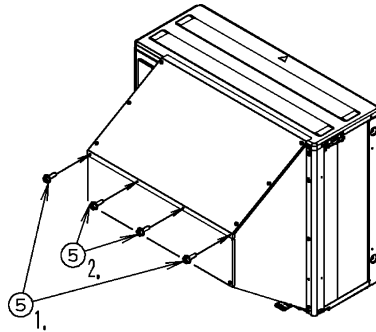**5 Attach the top plate ③**




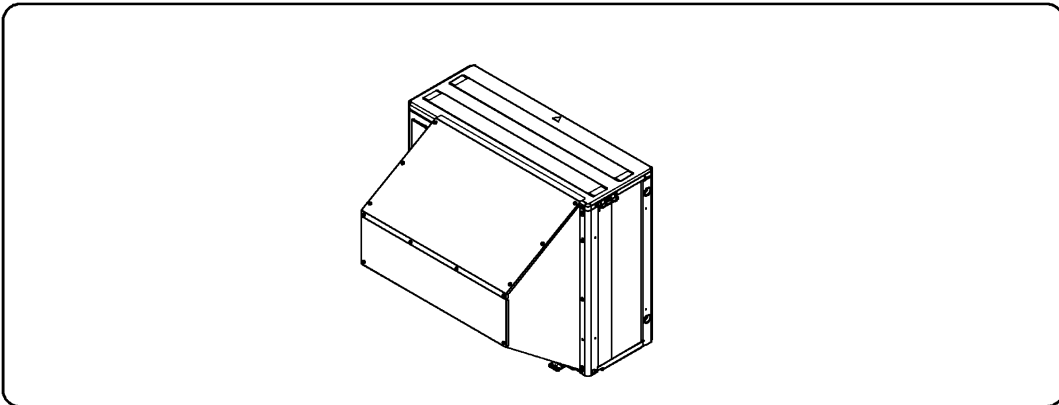



1. Temporarily secure the top plate ③ and front plate ④ to the side plate (right) ① and side plate (left) ② with the 2 screws ⑤ included in the kit.
2. Temporarily secure the top plate ③ to the front plate ④ with the 2 screws ⑤ included in the kit.
3. Tighten the 12 screws that you used to temporarily secure parts in steps 3), 4), and 5).

**2 Appearance of the snow hood (intake rear plate) after installation**

3P436072-1

### 13.22 <KPS063A47> Snow Hood (Outlet)

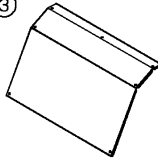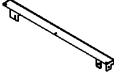**Parts** Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Installation plate	Screws	Piercing screw	Installation Manual
Illustration	① (Right) 	② (Left) 	③ 	④ 	⑤ 	⑥ 	⑦ 
Quantity	1	1	1	1	8	3	1 (this document)

**⚠ Caution** Read these safety considerations for installation carefully before installing the product.


● Be sure to observe the following installation precautions to ensure that the product can be used safely:

1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
4. Tighten screws securely. Failure to do so may result in vibration.

**⚠ Caution . . . .**  
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practises.

#### 1 Installing the snow hood (outlet)


**1 Remove the discharge grille.**

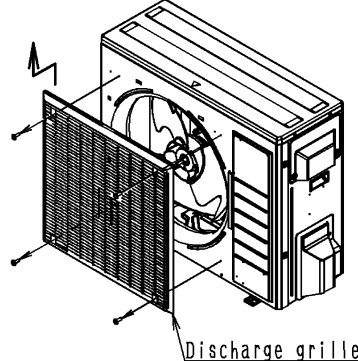


Discharge grille

1. Remove the 4 screws that hold the discharge grille. (The discharge grille is held with the 4 screws and 2 hooks.)


**2 Attach the side plate (left) ② and installation plate ④.**

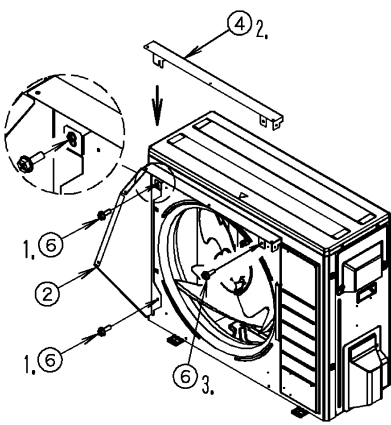


1. Temporarily secure the side plate (left) ② in place with the 2 piercing screw ⑥ included in the kit.
  - Installation is easiest if you start with the hook slot.
  - Align the screw installation position with the dowel hole.
2. Jointly tighten the installation plate ④ with the 1 piercing screw ⑥ temporarily secured in step 1.
3. Install the right side of the installation plate ④ with the 1 piercing screw ⑥.

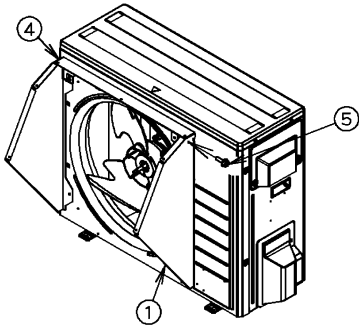**3 Attach the installation plate ④.**


1. Install the side plate (right) ① and installation plate ④ with the 1 screws ⑤ included in the kit,

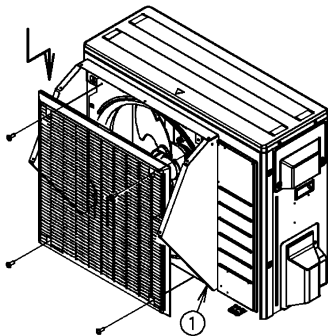**4 Attach the discharge grille.**

1. When installing the discharge grille removed in [1], jointly tighten the side plate (right) ① with the 2 screws securing the discharge grille, (Secure the discharge grille with the 4 screws and 2 hooks.)

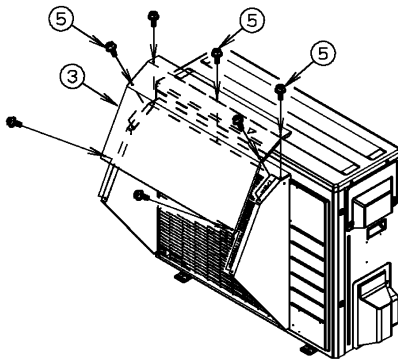**5 Attach the top plate ③.**

1. Install the top plate ③ with the 7 screws ⑤ included in the kit,

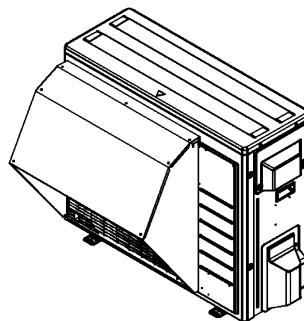**2 Appearance of the snow hood (outlet) after installation**











**Warning**



- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorized parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the user's manual carefully before using this product. The user's manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

**Cautions on product corrosion**

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.